# Pneumatic Pressure Switch Series | S3000

## Model

Can be used for small
electrical loads 10mA
e.g. relays, programmable
controllers, etc.

#### Easy electrical wiring

Wide space for wiring. Fixed wiring possible with G(PF) 1/2 connector.

Wide calibration range 0.1 to 0.7MPa

# High frequency operation and long life due to piston construction

High Frequency: 1 cycle/sec Long life: 10 million. cycles

# With indicator light (Optional)





IS3100 (Gasket piping)

IS3000-02 (1/4 thread)





IS3110 (Gasket piping)

IS3010-02 (1/4 thread)

JIS Symbol



Model	Piping method	Micro switch style	Min. applicable load	
IS3000-02	1/4 thread	Ota a dand	5V DC 160mA	
IS3100	Gasket piping	Standard		
IS3010-02	1/4 thread	Minne Innel	5\/ DC 4 A	
IS3110	Gasket piping	Micro load	5V DC 1mA	

# **Specifications**

Fluid	Air
Proof pressure	1.0MPa
Max. pressure	0.8MPa
Operating pressure range	0.1 to 0.7MPa
Ambient and fluid temperature	-5 to 60°C (No freezing)
Contacts	1ab
Hysteresis	0.05MPa or less
Repeatability	±0.05MPa
Weight	0.15kg


# Micro Switch Ratings

Model	IS3 <sup>0</sup> 00					IS3 <sup>0</sup> 10					
Land	Non inductive load (A)			Inductive load (A)			Non inductive (A)				
Load	Load re	Load resistance Light load		Inductive load Moto		Moto	r load Load resist		sistance		
Rated voltage (V)	N.C.	N.O.	N.C.	N.O.	N.C.	N.O.	N.C.	N.O.	N.C.	N.O.	
AC125	5		1.5	0.7	3		2.5	1.3	0.1		
AC250	3 1		1	0.5	2		1.5	8.0			
DC30	4	1	2	2	3		3 3		0.1		
DC125	0.	.4	0.	0.05		0.4		0.05		_	

Insulation resistance: 100M or more at 500V DC

Voltage resistance: 1500V AC, 50/60Hz for 1 min. (In case of switch with neon light: 1000V AC for 1 min.)


# **How to Order**

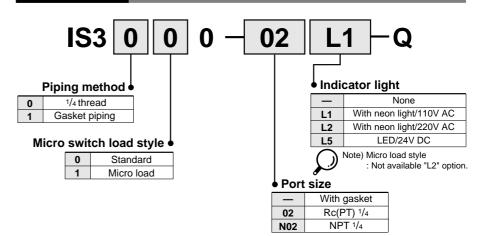


# Construction

#### IS3000-02/3010-02

(1/4 thread)

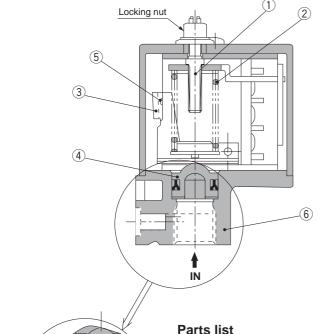

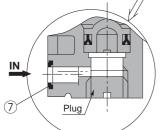

i di to iiot					
No.	Description				
1	Adjusting screw				
2	Setting spring				
(3)	Lover				


2	Setting spring	SWP-B		
3	Lever	SPCD		
4	Piston	POM		
(5)	Micro switch	_		
6	Bottom cover	ADC12		
7)*	O ring	NBR		


Material

SS41

\* Only for gasket mounting style

# **Dimensions**

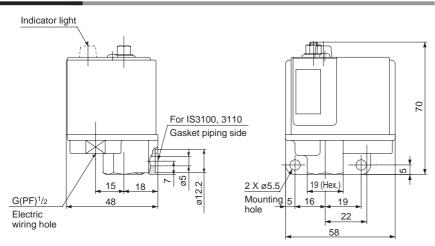

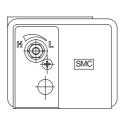



# **Precautions**

Be sure to read before handling. Refer to p.0-26 and 0-27 for Safety Instructions and common precautions on the products mentioned in this catalogue, and refer to p.3.0-7 to 3.0-9 for precautions on every series.

#### Wiring

**PS** 

**ZSE** 

ISE□

PS

**ISA** 

IS□


ZSM

PF□


**IF** 

#### **\_**Warning

- 1. Light ass'y for 24V DC has 2 terminals. One is "+" for red load wire and the other is "-" for black load
- 2. Light ass'y for 24V DC has 3mA of current leakage. Connect the LED directly to the power supply if the input of the PLC sees the switch as closed at all times due to leakage.
- Ex.1) When using contact "a" only or "a&b" contacts

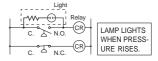

Ex.2) When using contact "b" only

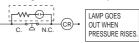

# **△**Caution

1. In case of using switches with indicator light, wire the indicator light per the following:



2. Please put the enclosed seal of "LAMP LIGHTS WHEN PRESSURE RISES." or "LAMP GOES OUT WHEN PRESSURE RISES." on the equipment where it is easy to see.

#### Installation/Piping

# **∆** Caution

- 1. Make a space for maintenance taking the regulation screw on the top of switch body into consideration.
- 2. Mounting is possible in either horizontal or vertical orientations.

#### **Calibration Procedures**

#### **⚠**Caution

- 1. Turn the adjusting screw on the cover to set the pressure with the bladed driver. Fix the screw with locking nut after adjusting. Hysteresis is a fixed value.
  - Increase the setting value by turning to "+" Decrease the setting value by turning to "-"
- Use a flat screwdriver to set the pressure. Then, lock it in place with the lock nut. Otherwise the set pressure will change.

  3. The hysteresis (the ON-OFF range) is fixed.
- Set pressure scale is the value when pressure increases.

#### **Environment**

#### **⚠Warning**

Do not use in an environment with water or splashing oil to avoid malfunction or damage to switch caused by corrosion of electric circuit.

#### **Others**

#### **⚠**Caution

1. Spare part is LIGHT ASS'Y only. If it is necessary to repair, contact SMC. Light Ass'y

For 110V AC: 1530118-1 220V AC: 1530118-2 3.10-4