Autonics

INDUCTIVE PROXIMITY SENSOR(SQUARE DC 3WIRE) **PSN SERIES**

INSTRUCTION MANUAL



Thank you for choosing our Autonics product. Please read the following safety considerations before use.

Safety Condierations

*Please observe all safety considerations for safe and proper product operation to avoid hazards.

★★ symbol represents caution due to special circumstances in which hazards may occur.

★Warning Failure to follow these instructions may result in serious injury or death.

**The content of the co


Caution Failure to follow these instructions may result in personal injury or product damage.

- 1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss, (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in fire, personal injury, or economic loss.
- 2. Do not disassemble or modify the unit.
- Failure to follow this instruction may result in fire
- 3. Do not connect, repair, or inspect the unit while connected to a power source.
- Failure to follow this instruction may result in fire. 4. Check 'Connections' before wiring.
- Failure to follow this instruction may result in fire.


∆ Caution

- 1. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage. 2. Use dry cloth to clean the unit, and do not use water or organic solvent.
- Failure to follow this instruction may result in fire.
- 3. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present. Failure to follow this instruction may result in fire or explosion

Ordering Information

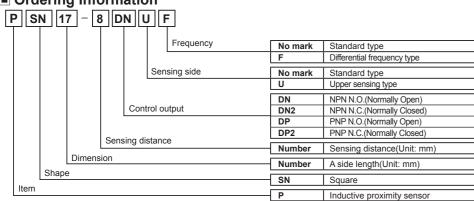

Control Output Diagram & Load Operation

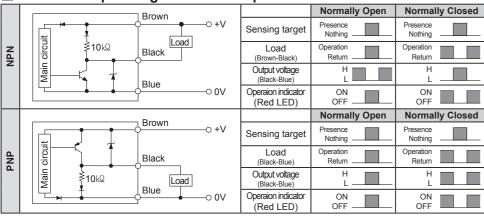

*The above specifications are subject to change and some models may be discontinued without notice. **Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage)

■ Specifications

	Specifica											
Mod	lel	PSN17-5DN PSN17-5DP PSN17-5DP2 PSN17-5DP2 PSN17-5DP2 PSN17-5DN2U PSN17-5DPU PSN17-5DP2U PSN17-5DP-2U PSN17-5DN-F	PSN17-8DN PSN17-8DP PSN17-8DN2 PSN17-8DP2 PSN17-8DPU PSN17-8DP2U PSN17-8DN2U PSN17-8DN2U PSN17-8DN2F PSN17-8DN2F PSN17-8DN2F PSN17-8DN2F PSN17-8DP2U PSN17-8DP2U PSN17-8DP2U PSN17-8DP2U PSN17-8DP2U PSN17-8DP2U PSN17-8DP2U	PSN25-5DN PSN25-5DP PSN25-5DN2 PSN25-5DP2	PSN30-10DN PSN30-10DP PSN30-10DN2 PSN30-10DP2	PSN30-15DN PSN30-15DP PSN30-15DN2 PSN30-15DP2	PSN40-20DN PSN40-20DP PSN40-20DN2 PSN40-20DP2					
Sens	sing distance	5mm	8mm	5mm	10mm	15mm	20mm					
Hyst	teresis	Max. 10% of sensing distance										
Standard sensing target		18×18×1mm(Iron)	25×25×1mm(Iron)		30×30×1mm(Iron)	45×45×1mm(Iron)	60×60×1mm(Iron)					
Setti	ing distance	0 to 3.5mm	0 to 5mm	0 to 3.5mm	0 to 7mm	0 to 10.5mm	0 to 14mm					
	er supply age range)	12-24VDC== (10-30VDC==)										
Curr	ent sumption	Max. 10mA										
Response frequency ^{x1}		700Hz	200Hz	350Hz	250Hz	200Hz	100Hz					
Resi	dual voltage	Max. 1.5V										
Effec	ct by Temp.	Within ±10°C max. of sensing distance at 20°C in temperature range of -25 to 70°C										
Conf	trol output	Max. 200mA										
Insul	lation resistance	Min. 50MΩ(at 500VDC megger)										
Dielectric strength Vibration		1,500VAC 50/60Hz for 1minute										
		1mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 2 hours										
Shoo	ck	500m/s² (approx. 50G) in X, Y, Z directions for 3 times										
Indicator		Operation indicator(Red LED)										
nment	Ambient temperature	-25 to 70°C, Storage: -30 to 80°C										
Ambient temperature -25 to 70°C, Storage: -30 to 80°C Ambient humidity -25 to 70°C, Storage: -30 to 80°C 35 to 95%RH, Storage: 35 to 95%RH												
Protection circuit		Surge protection circuit, Overload & Short protection circuit, Reverse polarity protection circuit										
Prote		IP67(IEC standard)										
	ection	IP67(IEC standard	,		ø4mm, 3 cores, 2m (AWG22, core diameter: 0.08mm, number of cores: 60, insulator diameter: Ø1.25mm)							
		<u> </u>	,	meter: 0.08mm, nun	nber of cores: 60, ins	sulator diameter: Ø1	.25mm)					
Prote		ø4mm, 3 cores, 2n	n (AWG22, core dia	meter: 0.08mm, nun		sulator diameter: Ø1	.25mm)					
Prote Cab Mate	le ^{×2}	ø4mm, 3 cores, 2n	n (AWG22, core dia			sulator diameter: Ø1	.25mm)					

X1: The response frequency is the average value. The sensing condition is using the standard sensing target. The interval is set as 2 times of the standard sensing target, and the setting distance is set for 1/2 of the sensing distance.

PSN25, PSN30, PSN40

- X2: Do not pull the cable with a tensile strength of 30N or over. It may result in fire due to the broken wire
- When extending wire, use AWG22 cable or over within 200m.
- Environment resistance is rated at no freezing or condensation.

Dimensions

PSN17

2,000

			. 0.1.20	. 000	
	Α	18	25	30	40
/- c	В	30.8	35.5	48.5	47
 Î□	С	ø3.2	ø4.2	ø4.5	ø5.5
\	D	11	18	22	30
ED H ±	Е	18	25.3	30	40
	F	-	16.8	20	25
2,000	G	35.6	39	53	53
2,000	Н	4	4	4	4

PSN17 PSN25 PSN30 PSN40

 
When installing the product, tighten the screw with a tightening torque of 0.98N⋅m. (PSN17: 0.49N⋅m)

Bracket •PSN17 •PSN25 •PSN30 •PSN40 2-M3 TAP

Mutual-interference & Influence by Surrounding Metals


When several proximity sensors are mounted closely, malfunction of sensor may be caused due to mutual interference. Therefore, be sure to keep a minimum distance between the two sensors as below chart

Face to Face



When install several proximity sensor closely, it may cause malfunction due to mutual interference. Therefore please use differential frequency as below picture.

*Differential frequency type is only for PSN17

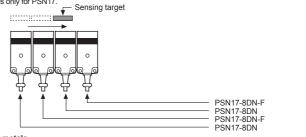


Influence by surrounding metals

When sensors are mounted on metallic panel, it is required to protect the sensors from malfunction by any metallic object. Therefore, be sure to keep a minimum distance as below chart.

Model		PSN17		PONOS	PSN30		DOLLAG
Item	tem	5mm	8mm	PSN25	10mm	15mm	PSN40
	Α	30	48	30	60	90	120
	В	36	40	40	50	65	70
	С	5	5	5	5	5	5
	d	15	24	15	30	45	60
	ł	24	33	25	30	45	45
	m	18	20	20	25	35	35

Setting Distance

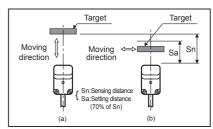

Sensing distance can be changed by the shape, size or material of the target.

Therefore please check the sensing distance as (a), then pass the target within range of setting distance(Sa) as (b).

Setting distance(Sa) = Sensing distance(Sn) × 70%

E.g.) PSN30-10DN Setting distance(Sa) = 10mm × 0.7 = 7mm

Caution during Use

- 1. Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- 2. 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.

Graphic/Logic Panels

■ Laser Welding/Cutting System

- 3. Use the product, after 0.8 sec of supplying power.
- 4. Wire as short as possible and keep away from high voltage lines or power lines, to prevent surge and inductive

Do not use near the equipment which generates strong magnetic force or high frequency noise (transceiver, etc.). In case installing the product near the equipment which generates strong surge (motor, welding machine, etc.), use diode or varistor to remove surge.

■ Laser Marking System(Fiber, CO₂, Nd:YAG)

- 5. This unit may be used in the following environments.
- 1 Indoors (in the environment condition rated in 'Specifications')
- 2 Altitude max. 2,000m
- 3 Pollution degree 2 4 Installation category II
- Major Products ■ Photoelectric Sensors ■ Temperature Controllers
- Fiber Optic Sensors Temperature/Humidity Transducers Field Network Devices
- Door Side Sensors Counters
- Area Sensors Timers
- Proximity Sensors
 Panel Meters
- Pressure Sensors ■ Tachometers/Pulse(Rate) Meters
- Display Units Rotary Encoders
- Connectors/Sockets Sensor Controlle

- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables



■ E-mail: sales@autonics.co

DRW171503AA