

SD Card shield V4.0

Contents [hide]

- [1 Introduction](#)
- [2 Features](#)
- [3 Specification](#)
- [4 Interface Function](#)
- [5 Usage](#)
 - [5.1 Hardware Installation](#)
 - [5.2 Upload the program](#)
 - [5.3 Note](#)
- [6 Resources](#)

Introduction

Navigation

[Getting Started](#)
[Learning](#)
[Product](#)
 [Arduino](#)
 [Shield](#)
 [Grove](#)
 [Kit](#)
 [Xadow](#)
 [Mbed](#)

Support

[Forum](#)
[Wish](#)
[SeeedStudio](#)
[Taobao](#)

Navigation


[Main page](#)
[Random page](#)
[Recent changes](#)

Collections

[Motor](#)
[Arduino](#)
[Grove](#)
[Shield](#)
[Kit](#)
[Xadow](#)

Toolbox

[What links here](#)
[Related changes](#)
[Special pages](#)
[Printable version](#)
[Permanent link](#)

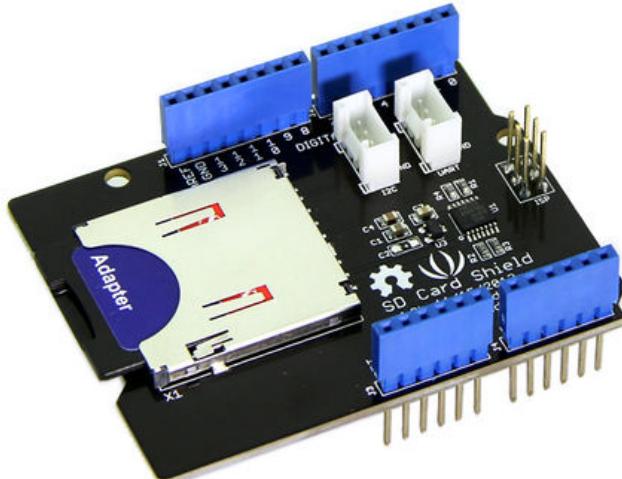


Features

- Stand SD card, SDHC card and TF card compatible
- UART Grove & I2C connection compatible
- Fully supported SD Library
- Minimal number of SPI port
- Truly stackable

Specification

Item	Min	Typical	Max	Unit
Voltage	3.5	5.0	5.5	V
Current	0.159	100	200	mA
Supported Card Type	SD card(<=32G); Micro SD card(<=32G); SDHC card(<=32G)		/	
Dimension	68.7x53.5x19.00		mm	
Net Weight	14.8		g	

Interface Function

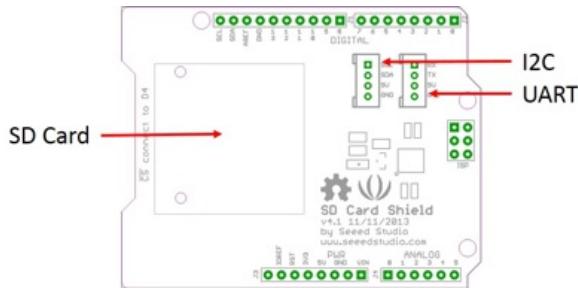

Pins usage on Arduino (with SD card)

D4: SD_CS;

D11: SD_DL;

D12: SD_DO;

D13: SD_CLK.

Note: The SD card format can be FAT16 or FAT32. The size of SD card and the SDHC card more than 16GB is not supported.

Usage

The following is instruction of the SD card shield.


Hardware Installation

1. Insert your SD card into the socket, Plug the SD Card Shield onto the Arduino .
2. Connect the Arduino to PC using USB cable.

Note: When you use a Micro SD card, please insert Micro SD card into the adopter, and then insert the Micro SD card Adopter into the socket as shown below.



When you complete the hardware installation, it should look like this

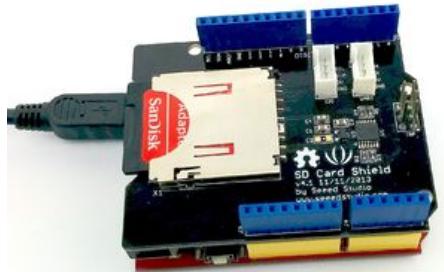


Upload the program

1. Restart the Arduino IDE. Open "CardInfo" example via the path: File --> Examples --> SD --> CardInfo.

This example shows how use the utility libraries on which the SD library is based in order to get info about your SD card. Very useful for testing a card when

you're not sure whether its working or not. There are also many other examples in this library, like "ReadWrite". You can always try them out.

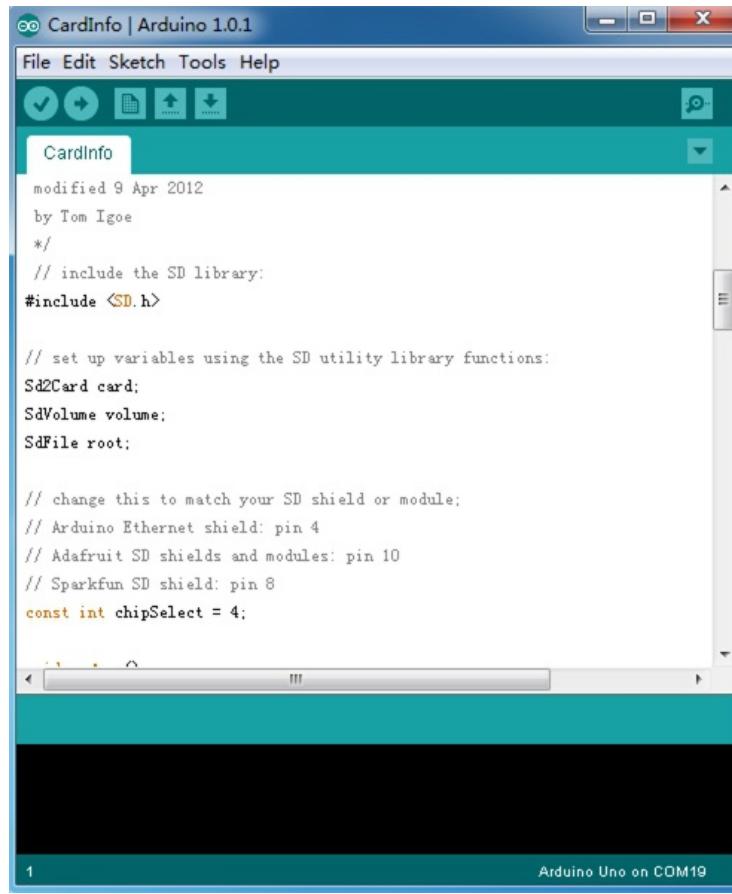

The screenshot shows the Arduino IDE interface with the title bar "CardInfo | Arduino 1.0.1". The menu bar includes File, Edit, Sketch, Tools, and Help. Below the menu is a toolbar with icons for save, upload, and refresh. A scrollable code editor window displays the "CardInfo" sketch. The code includes comments and code for initializing an SD card, setting up variables, and defining a chip select pin. The status bar at the bottom indicates "1" and "Arduino Uno on COM19".

```
modified 9 Apr 2012
by Tom Igoe
*/
// include the SD library:
#include <SD.h>

// set up variables using the SD utility library functions:
Sd2Card card;
SdVolume volume;
SdFile root;

// change this to match your SD shield or module:
// Arduino Ethernet shield: pin 4
// Adafruit SD shields and modules: pin 10
// Sparkfun SD shield: pin 8
const int chipSelect = 4;
```

There has a brief description to above code:


First checks if the card is working. if not, there will output some reasons that may lead to this result.

In the case of the SD card normal work, it will print the SD card type. Then print the type and size of the FAT-type volume.

Finally, get the files information such as name, date and size in bytes that found on the card.

2. Upload the code. If you do not know how to upload code, please click [here](#).

3. View Results. You can see the follow image after Click the serial monitor.

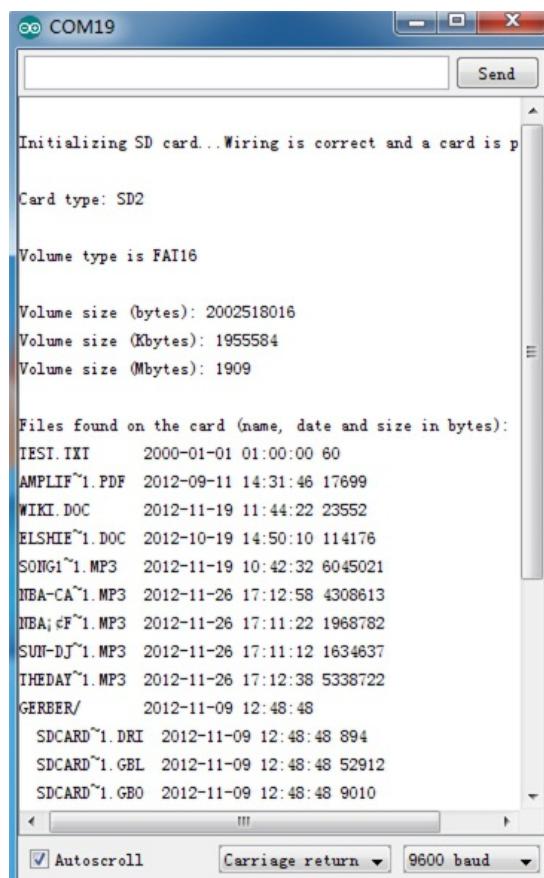

The screenshot shows the Serial Monitor window titled "COM19". It displays the output of the "CardInfo" sketch. The output includes:

- Initializing SD card.. Wiring is correct and a card is present
- Card type: SD2
- Volume type is FAT16
- Volume size (bytes): 2002518016
- Volume size (Kbytes): 1955584
- Volume size (Mbytes): 1909
- Files found on the card (name, date and size in bytes):
- TEST.IXT 2000-01-01 01:00:00 60
- AMPLIF~1.PDF 2012-09-11 14:31:46 17699
- WIKI.DOC 2012-11-19 11:44:22 23552
- ELSHIE~1.DOC 2012-10-19 14:50:10 114176
- SONG1~1.MP3 2012-11-19 10:42:32 6045021
- NBA-CA~1.MP3 2012-11-26 17:12:58 4308613
- NBA;dF~1.MP3 2012-11-26 17:11:22 1968782
- SUN-DJ~1.MP3 2012-11-26 17:11:12 1634637
- THEDAY~1.MP3 2012-11-26 17:12:38 5338722
- GERBER/ 2012-11-09 12:48:48
- SDCARD~1.DRI 2012-11-09 12:48:48 894
- SDCARD~1.GBL 2012-11-09 12:48:48 52912
- SDCARD~1.GBO 2012-11-09 12:48:48 9010

The bottom of the window shows settings for "Autoscroll" (checked), "Carriage return" dropdown, and "9600 baud".

4. If an error occurs, please recheck all the previous steps, and make sure the SD card is working. If none of that fixes the problem, try replacing the SD card.

Note

Arduino default code return SD size incorrectly if your SD card more than 4G. The following code can solve this issue.

```
/*
SD card test

This example shows how use the utility libraries on which the'
SD library is based in order to get info about your SD card.
Very useful for testing a card when you're not sure whether its working or not.

The circuit:
 * SD card attached to SPI bus as follows:
 ** MOSI - pin 11 on Arduino Uno/Duemilanove/Diecmila
 ** MISO - pin 12 on Arduino Uno/Duemilanove/Diecmila
 ** CLK - pin 13 on Arduino Uno/Duemilanove/Diecmila
 ** CS - depends on your SD card shield or module.
 ** Pin 4 used here for consistency with other Arduino examples

created 28 Mar 2011
by Limor Fried
modified 9 Apr 2012
by Tom Igoe
*/
// include the SD library:
#include <SPI.h>
#include <SD.h>

// set up variables using the SD utility library functions:
Sd2Card card;
SdVolume volume;
SdFile root;

// change this to match your SD shield or module;
// Arduino Ethernet shield: pin 4
// Adafruit SD shields and modules: pin 10
// Sparkfun SD shield: pin 8
const int chipSelect = 4;

void setup()
{
    // Open serial communications and wait for port to open:
    Serial.begin(9600);
    while (!Serial) {
        ; // wait for serial port to connect. Needed for Leonardo only
    }

    Serial.print("\nInitializing SD card...");
    // On the Ethernet Shield, CS is pin 4. It's set as an output by default.
    // Note that even if it's not used as the CS pin, the hardware SS pin
    // (10 on most Arduino boards, 53 on the Mega) must be left as an output
    // or the SD library functions will not work.
    pinMode(10, OUTPUT);      // change this to 53 on a mega

    // we'll use the initialization code from the utility libraries
    // since we're just testing if the card is working!
    if (!card.init(SPI_HALF_SPEED, chipSelect)) {
        Serial.println("initialization failed. Things to check:");
        Serial.println("* is a card is inserted?");
        Serial.println("* Is your wiring correct?");
        Serial.println("* did you change the chipSelect pin to match your shield or module?");
        return;
    } else {
        Serial.println("Wiring is correct and a card is present.");
    }

    // print the type of card
    Serial.print("\nCard type: ");
    switch (card.type()) {
        case SD_CARD_TYPE_SD1:
            Serial.println("SD1");
            break;
        case SD_CARD_TYPE_SD2:
            Serial.println("SD2");
            break;
        case SD_CARD_TYPE_SDHC:
            Serial.println("SDHC");
            break;
        default:
            Serial.println("Unknown");
    }
}
```

```

// Now we will try to open the 'volume'/'partition' - it should be FAT16 or FAT32
if (!volume.init(card)) {
    Serial.println("Could not find FAT16/FAT32 partition.\nMake sure you've formatted the card");
    return;
}

// print the type and size of the first FAT-type volume

uint64_t volumesize64;
uint32_t volumesize32;
Serial.print("\nVolume type is FAT");
Serial.println(volume.fatType(), DEC);
Serial.println();

volumesize64 = volume.blocksPerCluster();           // clusters are collections of blocks
volumesize64 *= volume.clusterCount();              // we'll have a lot of clusters
volumesize64 *= 512;                                // SD card blocks are always 512 bytes

Serial.print("Volume size (bytes): ");
printLLNumber(volumesize64, DEC);
Serial.println();

Serial.print("Volume size (Kbytes): ");
volumesize32 = volumesize64/1024;
Serial.println(volumesize32);

Serial.print("Volume size (Mbytes): ");
volumesize32 /= 1024;
Serial.println(volumesize32);
/*uint64_t volumesize;
Serial.print("\nVolume type is FAT");
Serial.println(volume.fatType(), DEC);
Serial.println();

volumesize = volume.blocksPerCluster();           // clusters are collections of blocks
volumesize *= volume.clusterCount();              // we'll have a lot of clusters
volumesize *= 512;                                // SD card blocks are always 512 bytes
Serial.print("Volume size (bytes): ");
Serial.println(volumesize,DEC);
Serial.print("Volume size (Kbytes): ");
volumesize /= 1024;
Serial.println(volumesize,DEC);
Serial.print("Volume size (Mbytes): ");
volumesize /= 1024;
Serial.println(volumesize,DEC);
*/
Serial.println("\nFiles found on the card (name, date and size in bytes): ");
root.openRoot(volume);

// list all files in the card with date and size
root.ls(LS_R | LS_DATE | LS_SIZE);
}

void loop(void) {
}

void printLLNumber(uint64_t n, uint8_t base)
{
    unsigned char buf[16 * sizeof(long)];
    unsigned int i = 0;

    if (n == 0)
    {
        Serial.print((char)'0');
        return;
    }

    while (n > 0)
    {
        buf[i++] = n % base;
        n /= base;
    }

    for (; i > 0; i--)
        Serial.print((char) (buf[i - 1] < 10 ?
            '0' + buf[i - 1] :
            'A' + buf[i - 1] - 10));
}

```

Resources

[SD Card Shiled v4.0 Schematic](#) 
[SD Card Shield v4.0 Eagle File.zip](#) 

This page was last modified on 14 February 2014, at 11:10.

This page has been accessed 26,755 times.

[About Wiki](#) [Seeed Studio](#)

