

Environment-resistive Remote Terminal NXR-series IO-Link Master Unit for EtherNet/IP™

NXR-ILM08C-EIT

CSM_NXR-ILM08C-EIT_DS_E_2_1

Streamline commissioning and maintenance of production equipment. Simple, easy, and quick - Reduce Availability Loss and Quality Loss!



Features


- IP67 protection
- · Replacement without software
- Ethernet cable diagnostics

Reports approximate locations of disconnections or short circuits in Ethernet cables

- Communication quality of EtherNet/IP
 - Records the total number of received FCS errors which allows checking communication quality
- · Communication quality of IO-Link
 - Records the total number of lost frames which allows checking communication quality
- Location of short circuits
 - Detects and protects from short circuits in connection to IO-Link devices or standard devices
- Power supply voltage monitoring
 Manitors navyer supply voltage for the unit on
 - Monitors power supply voltage for the unit and inputs and power supply voltage for outputs
- Power OUT connector for through-wiring for power supply
- Built-in L2 switching hub for through-wiring for Ethernet

System Configuration

System Configuration

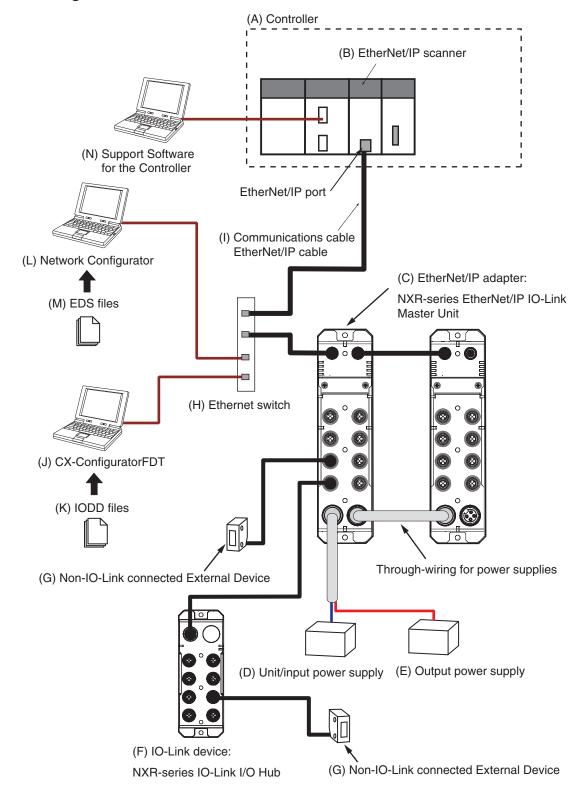

The components are described in the table below.

Letter	Name	Function
(A)	Controller	This is an OMRON CPU Unit or a controller from another company, connected to the IO-Link Master Unit through an EtherNet/IP adapter.
(B)	EtherNet/IP scanner	The EtherNet/IP scanner monitors the status of the connections with EtherNet/IP adapters and exchanges I/O data with EtherNet/IP adapters through the EtherNet/IP network. It refers to the <i>originator</i> when opening a connection.
(C)	EtherNet/IP adapter: NXR-series IO-Link Master Unit for EtherNet/IP	The NXR-series IO-Link Master Unit for EtherNet/IP is an EtherNet/IP adapter that provides IO-Link master functions. You can connect IO-Link devices and non-IO-Link connected external devices to the NXR-series IO-Link Master Unit for EtherNet/IP. It exchanges data with IO-Link devices through IO-Link communications.
(D)	Unit/input power supply	The Unit/input power supply provides power to the IO-Link Master Unit for operation and interface with input devices. Connect an external power supply to the power supply connector (input).
(E)	Output power supply	The output power supply provides power for interface with output devices. Connect an external power supply to the power supply connector (input).
(F)	IO-Link device: NXR-series IO-Link I/O Hub	The IO-Link device is a sensor, actuator, or other device that performs IO-Link communications with the IO-Link master. It exchanges data with the NXR-series IO-Link Master Unit for EtherNet/IP in IO-Link communications. You can connect non-IO-Link connected external devices to the NXR-series IO-Link I/O Hub.
(G)	Non-IO-Link connected External Device	The non-IO-Link connected external device is a sensor, actuator, or other device that handles ON/OFF signals that are not supported by IO-Link.
(H)	Ethernet switch	This is a relay device that connects multiple nodes.
(1)	Communications cable EtherNet/IP cable	Use a double-shielded cable with aluminum tape and braiding of category 5 (100BASE-TX) or higher, and use straight wiring.
(J)	CX-ConfiguratorFDT	The CX-ConfiguratorFDT is the Support Software to configure and monitor IO-Link devices that are connected to the IO-Link Master Unit.
(K)	IODD files	These files contain IO-Link device definitions.
(L)	Network Configurator	The Network Configurator is the Support Software to configure an EtherNet/IP network. For the IO-Link Master Unit, it is used for the following purposes. • Setting the device parameters of the IO-Link Master Unit • Setting the connection between the EtherNet/IP scanner and the IO-Link Master Unit
(M)	EDS files	The EDS files contain information that is unique to the IO-Link Master Unit. You can load EDS files into the Network Configurator or other Support Software for EtherNet/IP network setup to easily allocate data and view or change settings.
(N)	Support Software for the Controller	The Support Software is used to configure the Controller and EtherNet/IP scanner, create user programs, and perform monitoring, and troubleshooting. The Support Software depends on the Controller that you use.

Applicable Support Software

The following table shows support software that can be used in the system configured with the NXR-series EtherNet/IP IO-Link Master Unit. For versions of support software, refer to Version Information on page 11.

IO-Link Ma	aster Unit connected to	Purposes and support software				
Controller	EtherNet/IP Scanner	Creating user programs	Setting connections	Setting device parameters of IO-Link Master Unit	Setting and monitoring connected IO-Link devices	
NJ/NX-series CPU Unit	Built-in EtherNet/IP port on an NJ/NX-series CPU Unit or CJ1W-EIP21	Sysmac Studio	Sysmac Studio or Network Configurator			
CJ/CP/CS-series CPU Unit	EtherNet/IP unit CJ1W-EIP21 or CS1W-EIP21 CJ-series CPU unit Built-in EtherNet/IP port	CX-Programmer	Network Configurator	Network Configurator	CX-ConfiguratorFDT	
Controller from another manufacturer	EtherNet/IP Scanner from another manufacturer	Software from another manufacturer	Software from another manufacturer			

Ordering Information

Applicable standards

Refer to the OMRON website (www.ia.omron.com) or ask your OMRON representative for the most recent applicable standards for each model.

NXR-series IO-Link Master Unit for EtherNet/IP™

Product name	Product name Number of IO-Link ports		I/O connection terminals	Model
IO-Link Master Unit for EtherNet/IP	8	IP67	M12 connector A-cording, female	NXR-ILM08C-EIT

NXR-series IO-Link I/O Hub

Product name	Number of IO-Link ports	Input/Output	Degree of protection	I/O connection terminals	Model
IO-Link I/O Hub	0	16 digital inputs	IP67	M12 connector	NXR-ID166C-IL2
	0	16 digital inputs/outputs	IFO/	A-cording, female	NXR-CD166C-IL2

Software

How to Select Required Support Software for Your Controller

The required Support Software depends on the Controller to connect. Please check the following table when purchasing the Support Software.

Item	Omron PLC System	Omron Machine Automation Controller System
Controller	CJ-series	NJ/NX-series
Software	FA Integrated Tool Package CX-One	Automation Software Sysmac Studio

FA Integrated Tool Package CX-One

	Specifications			
Product name		Number of licenses	Media	Model
	The CX-One is a comprehensive software package that integrates Support Software for OMRON PLCs and components.			
FA Integrated Tool Package CX-One Ver.4.□	CX-One runs on the following OS. Windows XP (Service Pack 3 or higher, 32-bit version) / Windows Vista (32-bit/64-bit version) / Windows 7 (32-bit/64-bit version) / Windows 8 (32-bit/64-bit version) / Windows 10 (32-bit/64-bit version) /	1 license * 1	DVD	CXONE-AL01D-V4
	CX-One Version 4.□ includes CX-Programmer Ver.9.□ For details, refer to the <i>CX-One catalog</i> (Cat. No. R134)			

^{*1} Multi licenses (3, 10, 30, or 50 licenses) and DVD media without licenses are also available for the CX-One.

Automation Software Sysmac Studio

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

	Specifications			
Product name		Number of licenses	Media	Model
Sysmac Studio Standard Edition Ver.1.□□	The Sysmac Studio is the software that provides an integrated environment for setting, programming, debugging and maintenance of machine automation controllers including NJ/NX-series CPU Units, NY-series Industrial PC, EtherCAT Slaves, and HMI.	-	Sysmac Studio (32 bit) DVD	SYSMAC-SE200D
	Sysmac Studio runs on the following OS. Windows 7 (32-bit/64-bit version) / Windows 8 (32-bit/64-bit version) / Windows 8.1 (32-bit/64-bit version) / Windows 10 (32-bit/64-bit version) *1	(Media only)	Sysmac Studio (64 bit) DVD	SYSMAC-SE200D-64
	The Sysmac Studio Standard Edition DVD includes Support Software to set up EtherNet/IP Units, DeviceNet slaves, Serial Communications Units, and Support Software for creating screens on HMIs (CX-Designer). For details, refer to your OMRON website.	1 license *2	-	SYSMAC-SE201L

^{*1.} SYSMAC-SE200D-64 runs on Windows 10 (64 bit).

^{*2.} Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).

EtherNet/IP Communications Cables

Ethernet communications cables to connect the IO-Link master unit.

Connection Cables between IO-Link Master Unit and EtherNet/IP Scanner with RJ45 Connectors

Name and appearance	Manufacturer	Specification	No. of cable conductors	Connector	Cable connection direction	Cable length	Model
Industrial Ethernet Connectors						0.5 m	72MDm4Rm4005K
with Cable	HARTING K.K.	M12 plug (D-coding, male) to RJ45	4	Screw connector	Straight/ straight	1 m	72MDm4Rm4010K
						2 m	72MDm4Rm4020K
						3 m	72MDm4Rm4030K
						5 m	72MDm4Rm4050K
						10 m	72MDm4Rm4100K

Connection Cables between IO-Link Master Units

Name and appearance	Manufacturer	Specification	No. of cable conductors	Connector	Cable connection direction	Cable length	Model
Industrial Ethernet Connectors						0.5 m	72MDm4MDm4005K
with Cable	HARTING K.K.	M12 plug (D-coding, male) to M12 plug (D-coding, male)	4	Screw connector	Straight/ straight	1 m	72MDm4MDm4010K
						2 m	72MDm4MDm4020K
						3 m	72MDm4MDm4030K
						5 m	72MDm4MDm4050K
						10 m	72MDm4MDm4100K

Power Supply Cables

Power supply cables to connect the IO-Link master unit

Name and appearance	Manufacturer	Specification	No. of cable conductors	Connector	Cable connection direction	Cable length	Model	
Connector with Cable (Socket on One End, Straight)						1 m	72MNf4010	
					Straight	2 m	72MNf4020	
					Straight	5 m	72MNf4050	
		7/8 inch socket	4	Screw		10 m	72MNf4100	
Connector with Cable (Socket on One End, Right-		(female) to discrete wire	4	connector		1 m	72MNfL4010	
angle)					Diaht sauls	2 m	72MNfL4020	
						Right-angle	5 m	72MNfL4050
						10 m	72MNfL4100	
Connectors with Cable (Socket on One End, Plug on	HARTING K.K.						1 m	72MNf4MNm4010
Other End, Straight)								Ctualisht
					Straight	5 m	72MNf4MNm4050	
		7/8 inch socket (female) to		Screw		10 m	72MNf4MNm4100	
Connectors with Cable (Socket on One End, Plug on		7/8 inch plug (male)	4	connector		1 m	72MNfL4MNmL4010	
Other End, Right-angle)					Dight angle	2 m	72MNfL4MNmL4020	
					Right-angle	5 m	72MNfL4MNmL4050	
						10 m	72MNfL4MNmL4100	

Contact HARTING K.K. for details.

I/O Cables

• Conversion Cable

The following cable converts connections from an IO-Link device or non-IO-Link connected external device with an M8 plug.

Name and appearance	Manufacturer	Specification	No. of cable conductors	Connector	Cable connection direction	Cable length	Model
XS3W Socket and Plug on Cable Ends (M8 (Socket)/M12 (Plug))	OMRON	M8 socket (A-coding, female) to M12 plug (A-coding, male),	4	(M8) screw connector, (M12) Smartclick	Straight	0.2 m	XS3W-M42C-4C2-A
		DC type		connector *1			

^{*1.} Connectors for the I/O cable to tighten the connector. Use a torque wrench for the I/O cable to tighten the connector. The Smartclick connector of the I/O cable can also be used as a screw connector.

· Direct connection or extension Cables

Extension cables, which connect an IO-Link device or standard external device with an M12 plug, can also be used to connect directly to an IO-Link device with an M12 plug.

Name and appearance	Manufacturer	Specification	No. of cable conductors	Connector	Cable connection direction	Cable length	Model
XS2W Socket and Plug on Cable Ends						1 m	XS2W-D421-C81-F
(M12 (Socket)/M12 (Plug))	OMRON (A-codin to M12 p	M12 socket (A-coding, female) to M12 plug 4 (A-coding, male), DC type	4	Screw connector	Straight/ straight	2 m	XS2W-D421-D81-F
						3 m	XS2W-D421-E81-F
					5 m	XS2W-D421-G81-F	
						10 m	XS2W-D421-J81-F

Branching

Name and appearance	Manufacturer	Specification	No. of cable conductors	Connector	Cable connection direction	Cable length	Model
XS5R Y-Joint Plug/Socket Connector							
Toolse To	OMRON	M12		Smartclick Connector *1			XS5R-D426-1

^{*1.} Connectors for the IO-Link Master Unit are not Smartclick connector. Use a torque wrench for the I/O cable to tighten the connector.

Waterproof Cover for Connectors

A waterproof cover for unused M12 connectors. When you use this waterproof cover, you can maintain the IP67 protective structure.

Name and appearance	Manufacturer	Specification	Connector	Model
M12 Waterproof Cover				
	OMRON	M12	Screw connector	XS2Z-22
7/8 inch Waterproof Cover				
	Molex	7/8 inch	Screw connector	1302011110

General Specifications

_	Item	Specification		
Degree of prot	ection	IP67		
	Ambient operating temperature	-10 to 55°C		
An	Ambient operating humidity	25% to 85% (with no condensation)		
	Ambient operating atmosphere	Must be free from corrosive gases.		
	Storage temperature	-25 to 65°C		
	Storage humidity	25% to 85% (with no condensation)		
	Altitude	2,000 m max.		
O	Pollution degree	3 or less: Conforms to IEC 61010-2-201.		
Operating environment	Noise immunity	2 kV on power supply line (Conforms to IEC 61000-4-4.)		
	Overvoltage category	Category II: Conforms to IEC 61010-2-201.		
	EMC immunity level	Zone B		
	Vibration resistance	10 to 60 Hz with amplitude of 0.35 mm, 60 to 150 Hz and 50 m/s² for 80 minutes each in X, Y, and Z directions.		
	Shock resistance	150 m/s², 3 times each in 6 directions along X, Y, and Z axes		
	Dielectric strength	600 VAC (between isolated circuits)		
	Insulation resistance	20 M $Ω$ min. (between isolated circuits)		
Applicable sta	ndards * 1	cULus: Listed (UL61010-2-201) EU: EN 61131-2, RCM KC: KC Registration EAC IO-Link conformance EtherNet/IP conformance		

^{*1.} Refer to the OMRON website (www.ia.omron.com) or ask your OMRON representative for the most recent applicable standards for each model.

EtherNet/IP Communications Specifications

	Item	Specification		
Communications pro	tocols	EtherNet/IP protocol Implicit messages (Class1) Explicit messages (Class 3, UCMM)		
Modulation		Baseband		
Link speed		10 Mbps or 100 Mbps		
Ethernet physical lay	er	100BASE-TX or 10BASE-T (100BASE-TX is recommended.) *1		
Ethernet switch		Layer-2 switch		
Transmission media		Category 5 or higher twisted-pair cable (Recommended cable: double shielded cable with aluminum tape and braiding)		
Transmission distant	ce	100 m or less (Distance between nodes and between hub and node)		
Topology		Line, Star, Tree, Ring		
Number of connected Units		 Line, Star No restrictions Tree There is no restrictions in the number of cascade connections when an Ethernet switch is used. Ring Dependent on the ring supervisor specifications. 		
	Number of connections	5 *2		
EtherNet/IP tag data	Packet interval (RPI)	1 to 10,000 ms		
links	Allowed communications bandwidth per Unit	4,000 pps		
Explicit messages	Class 3 (number of connections)	5 *2 However, the maximum number of connections per originator is 2		
	UCMM (unconnected)	Supported *2		
EtherNet/IP I/O conne	ection size	Input: 296 bytes max. (including input data, status, and unused areas) Output: 258 bytes max. (including output data and unused areas)		
	Supported services	Tag data link, CIP message communications, automatic clock adjustment (NTP/SNTP client), BOOTP client, DHCP client		
	IP address duplication detection	Provided		
Support functions	Run/Idle header	Supported *3		
	QuickConnect	Supported		
	DLR	Ring nodes supported		

^{*1.} If tag data links are used, use 100BASE-TX.

^{*2.} The maximum number of connections is 10 when tag data links (Class 1), Class 3, and UCMM are used simultaneously.
*3. You can configure output retention, clear, and other settings during Idle. Refer to the NXR-series IO-Link Master Unit for EtherNet/IPTM User's Manual (Cat.No.W619) for details.

Unit Specifications

lt _e	em	Specification			
	IO-Link connector type	Class A			
	Communications protocol	IO-Link protocol			
	Number of ports	8			
	Baud rate	COM1: 4.8 kbps COM2: 38.4 kbps COM3: 230.4 kbps			
IO-Link specifications	Topology	1:1			
	Compliant standards	IO-Link Interface and System Specification Version1.1.2 *1 IO-Link Test Specification Version1.1.2			
	Cable specifications	 Cable type Cable length Electrostatic capacity between lines Loop resistance Unshielded 20 m max. 3 nF max. 6 Ω max. 			
Unit/input power supply vo	ltage	24 VDC (20.4 to 26.4 VDC)			
Output power supply voltage	ge	24 VDC (20.4 to 26.4 VDC)			
Maximum power supply cu	irrent	9 A Sum of Unit/input power supply current and output power supply	/ current		
Number of connected Units with through-wiring	s when supplying power	No restrictions if power supply specifications are met.			
Mounting method		Mounting with M5 screws			
Mounting strength		100 N			
Installation orientation and restrictions		Installation orientation: 6 possible orientations Restrictions: No restrictions			
Connector types		EtherNet/IP communications connectors: M12 (D-coding, female) × 2 Power supply connectors: 7/8 inch (male) × 1, 7/8 inch (female) × 1 I/O connectors: M12 (D-coding, female) × 2 T/8 inch (male) × 1, 7/8 inch (female) × 1 I/O connectors: M12 (D-coding, female) × 2			
Connector strength		30 N Applicable to all connectors			
Screw tightening torque		Power supply connectors (7/8 inch screw) Unit mounting (M5 screw) Rotary switch cover (M3 screw) Waterproof covers for EtherNet/IP communications connector (M12 screw) Waterproof covers for power supply connectors	0.5 to 0.6 N·m 1.5 to 1.7 N·m 1.47 to 1.96 N·m 0.4 to 0.6 N·m rs 0.5 to 0.6 N·m		
Maximum port current		4 A/port Total available current between pin 1 and pin 4			
	Power supply used	Unit/input power supply			
Device power supply *2	Rated voltage	24 VDC (20.4 to 26.4 VDC)			
in IO-Link Mode or	Maximum load current	2 A/pin			
SIO (DI) Mode	Short-circuit protection	Provided *3			
	Short-circuit detection	Provided *3			
	Power supply used	Unit/input power supply			
	Rated voltage	24 VDC (20.4 to 26.4 VDC)			
	Internal I/O common	PNP			
	Input current	 Digital inputs for pin 2: 3.0 mA (at 24 VDC) Digital inputs for pin 4: 6.3 mA (at 24 VDC) 			
Digital inputs for pin 4 or digital inputs for pin 2	ON voltage/ON current	 Digital inputs for pin 2: 15 VDC min., 2 mA min. Digital inputs for pin 4: 15 VDC min., 3 mA min. 			
(in SIO (DI) Mode)		5 VDC max., 1 mA max.			
(III SIO (DI) Mode)	OFF voltage/OFF current	5 VDC max., 1 mA max.			
(III SIO (DI) Wode)	OFF voltage/OFF current ON/OFF response time	5 VDC max., 1 mA max. 1.0 ms max.			
(III SIO (DI) Mode)			ms, 32 ms, 64 ms,		
(III SIO (DI) Mode)	ON/OFF response time	1.0 ms max. No filter, 0.25 ms, 0.5 ms, 1 ms (default), 2 ms, 4 ms, 8 ms, 16 r	ms, 32 ms, 64 ms,		

Ite	em	Specification
	Power supply used	Output power supply
	Internal I/O common	PNP
	Output type	Open-drain
	Rated voltage	24 VDC (20.4 to 26.4 VDC)
Digital outputs for pin 4 or digital outputs for pin 2	Maximum load current	2 A/pin
(in SIO (DO) Mode)	Leakage current	0.1 mA max.
((- , ,	Residual voltage	1.5 V max.
	ON/OFF response time	1.0 ms max.
	Short-circuit protection	Provided *4
	Short-circuit detection	Provided *4
Current consumption	Unit/input power supply	50 mA
Current consumption	Output power supply	100 mA
Weight		440 g
Dimensions		240 × 24.2 × 62 mm (W × H × D) (The height is 38 mm when the connectors are included.)
Isolation method		No isolation
Circuit layout		EtherNet/IP communications connector 1 (ETH1) EtherNet/IP communications connector 2 (ETH2) Internal circuits C/Q(Pin4) I/Q connector P1 I/Q(Pin2) I

- ***1.**IO-Link PREOPERATE is not supported.
- *2. Used as a power supply for IO-Link devices or non-IO-Link input devices. Supplies power from the Unit/input power supply of the IO-Link Master Unit to external devices through I/O connectors.
- *3. Detects a short-circuit that occurred between pin 1 and pin 3 to protect the IO-Link Master Unit.

 *4. Detects a short-circuit that occurred between pin 2 and pin 3 and between pin 4 and pin 3 to protect the IO-Link Master Unit.

Version Information

The following table shows the relationship between the unit versions of the IO-Link Master Unit and CPU unit, and the corresponding support software versions.

Connecting with NJ/NX CPU Unit

NX-series CPU Unit

IO-Link Master Unit		Corresponding versions			
Model	Unit version	CPU unit version	Sysmac Studio	Network Configurator	CX-ConfiguratorFDT
NXR-ILM08C-EIT	Ver.1.1	Vor 1 14	Ver.1.40	Ver.3.69	Ver.2.54
NXK-ILMU8C-EII	Ver.1.0	Ver.1.14	Ver. 1.40	VEI.3.09	vei.2.54

NJ-series CPU Unit

IO-Link Mas	ter Unit	Corresponding versions				
Model	Unit version	CPU unit version CJ1W-EIP21		Sysmac Studio	Network Configurator	CX-ConfiguratorFDT
NXR-ILM08C-EIT	Ver.1.1	Ver.1.14	Ver.2.1	Ver.1.40	Ver.3.69	Ver.2.54
NAR-ILIVIUOC-EI I	Ver.1.0	Ver. 1. 14	ver.z. i			

Connecting with CS/CJ/CP CPU Unit CS1G/CS1H/CJ1M CPU Unit

IO-Link Master Unit		Corresponding versions			
Model	Unit version	CPU unit version	CS1W-EIP21/ CJ1W-EIP21	Network Configurator	CX-ConfiguratorFDT
NXR-ILM08C-EIT	Ver.1.1	Ver.3.0	Ver.2.1	Ver.3.69	Ver.2.54
	Ver.1.0	ver.s.u		vei.3.09	ver.2.54

CJ2H-CPU6□/CJ2M-CPU1□/CP1H CPU Unit

IO-Link Master Unit		Corresponding versions				
Model	Unit version	CPU unit version	CJ1W-EIP21	Network Configurator	CX-ConfiguratorFDT	
NXR-ILM08C-EIT	Ver.1.1	Ver.3.0	Vor 2.1	Ver.3.69	Ver.2.54	
NXK-ILWU8C-EII	Ver.1.0	Vel.3.0	Ver.2.1	ver.3.09	Ver.2.54	


CJ2H-CPU6□-EIP CPU Unit

IO-Link Master Unit		Corresponding versions				
Model	Unit version	CPU unit version	CJ1W-EIP21	Network Configurator	CX-ConfiguratorFDT	
NXR-ILM08C-EIT	Ver.1.1	Ver.1.5	Ver.2.1	Ver.3.69	Ver.2.54	
	Ver.1.0	ver.1.5		ver.3.09	Ver.2.54	

CJ2M-CPU3□ CPU Unit


IO-Link Master Unit		Corresponding versions			
Model	Unit version	CPU unit version	CJ1W-EIP21	Network Configurator	CX-ConfiguratorFDT
NXR-ILM08C-EIT	Ver.1.1	Ver.1.5	Ver.2.1	Ver.3.69	Ver.2.54
	Ver.1.0	ver.1.5			

External Interface

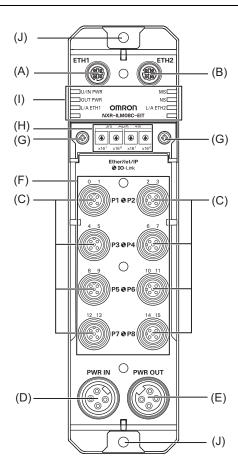

Letter	Name	Function		
(A)	EtherNet/IP communications connector 1	The connector for EtherNet/IP port 1. • M12 connector (D-coding, female) Connect a communications cable.		
(B)	EtherNet/IP communications connector 2	The connector for EtherNet/IP port 2. • M12 connector (D-coding, female) Connect a communications cable.		
(C)	I/O connectors	The connectors for connecting IO-Link devices or non-IO-Link connected external devices. They are called "ports." • M12 connectors (A-coding, female) Connect I/O cables.		
(D)	Power supply connector (input)	The connector for supplying Unit/input power and output power. • 7/8 inch connector (male) Connect the power supply cable to an external power supply.		
(E)	Power supply connector (output)	The connector for supplying Unit/input power and output power from the local node to another node. Use this connector when the power supply method is power supply with through-wiring. • 7/8 inch connector (female) Connect the power supply cable to an additional IO-Link Master Unit.		
(F)	I/O indicators	The indicators that show the I/O status of pin 4/pin 1 and pin 2 for each port.		
(G)	Cover mounting holes	The screw holes for mounting the rotary switch cover. They are provided in two locations. The above figure shows the holes when the cover is mounted with screws.		
(H)	Rotary switches	The switches for setting the IP address.		
(I)	Status indicators	The indicators that show the current operating status of the Unit.		
(J)	Unit mounting holes	The holes for mounting the Unit. They are provided in two locations. Mount the Unit with M5 screws.		

Dimensions (Unit: mm)

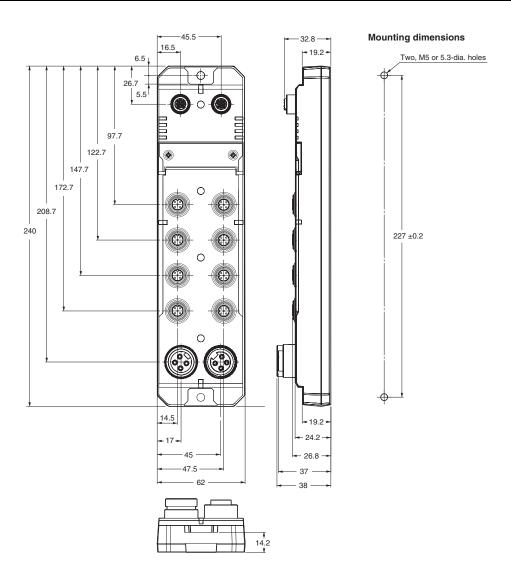


Wiring Example for I/O connectors

Wiring Example for IO-Link Devices

Wiring Example for IO-Link Devices (with Digital Inputs for Pin 2)

A wiring example for an IO-Link device with digital inputs for pin 2 is shown below. In this example, the port is used in the following communications modes. Pin 4: IO-Link Mode, pin 2: SIO (DO) Mode

11/IN P+

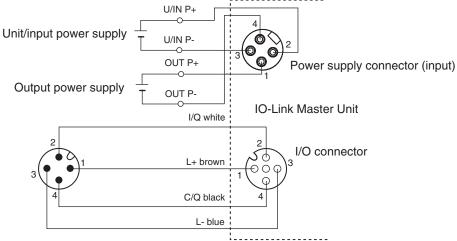


IO-Link device

(with digital inputs for pin 2)

Wiring Example for IO-Link Devices (with Digital Outputs for Pin 2)

A wiring example for an IO-Link device with digital outputs for pin 2 is shown below. In this example, the port is used in the following communications modes.

Pin 4: IO-Link Mode, pin 2: SIO (DI) Mode

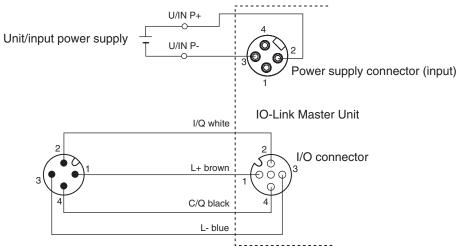


IO-Link device

(with digital inputs for pin 2)

Wiring Example for IO-Link Devices (without Digital Inputs and Outputs for Pin 2)

A wiring example for an IO-Link device without digital inputs and outputs for pin 2 is shown below. In this example, the port is used in the following communications modes.

Pin 4: IO-Link Mode, pin 2: Disabled

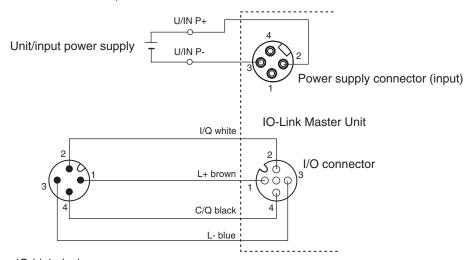

IO-Link device


(without digital inputs or outputs for pin 2)

Wiring Example for Non-IO-Link Input Devices

Wiring Example for Three-wire Sensors

In this example, the port is used in the following communications modes.


Pin 4: SIO (DI) Mode, pin 2: Disabled

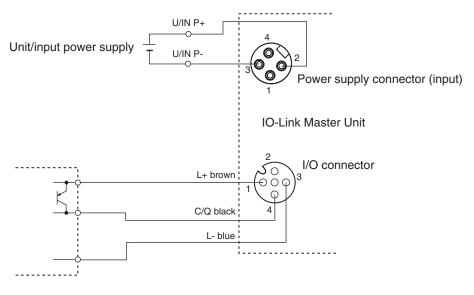

Three-wire sensor PNP type

Wiring Example for Two-wire Sensors

In this example, the port is used in the following communications modes. Pin 4: SIO (DI) Mode, pin 2: Disabled

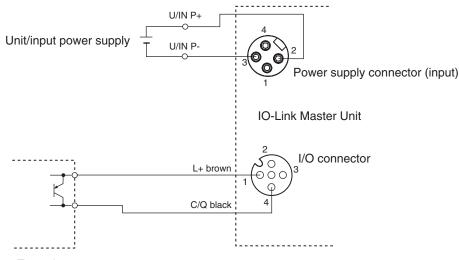


Two-wire sensor

Wiring Example for Non-IO-Link Output Devices

A wiring example between the IO-Link Master Unit and a non-IO-Link output device is shown below. In this example, the port is used in the following communications modes.

Pin 4: SIO (DO) Mode, pin 2: Disabled

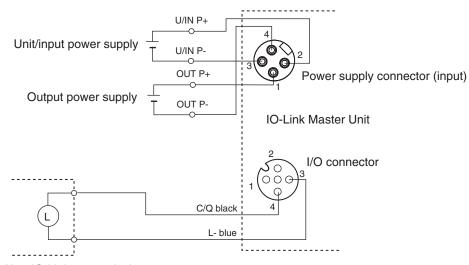


Non-IO-Link output device

Power Supply System


There are two methods to supply power to IO-Link Master Units as shown below.

Direct power supply

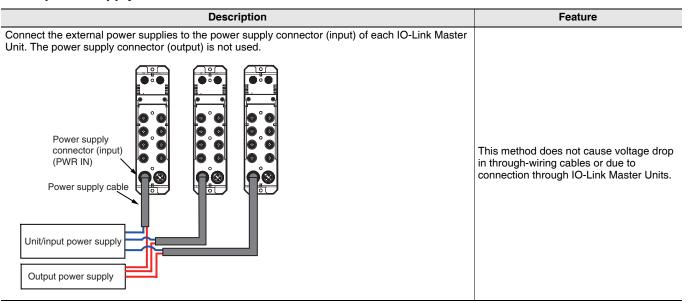


An example is shown below.

Connect the external power supplies to the power supply connector (input) of each IO-Link Master Unit.

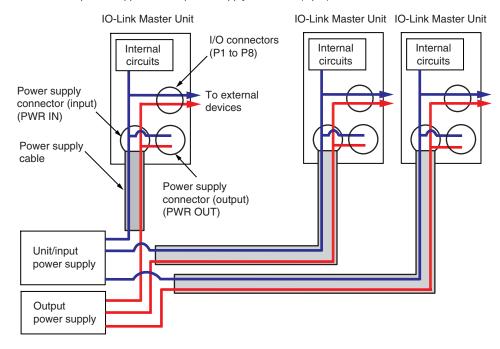

Power supply with through wiring

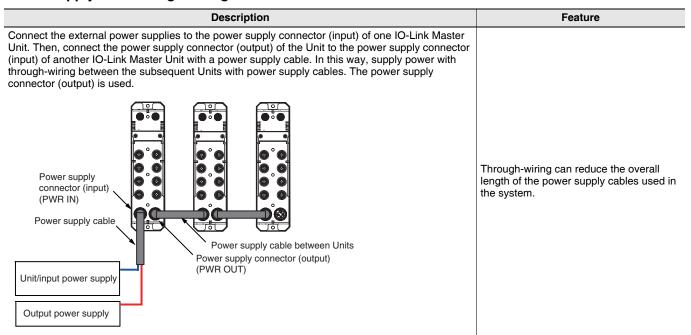


An example is shown below.

Connect the external power supplies to the power supply connector (input) of one IO-Link Master Unit.

Then, connect the power supply connector (output) of the Unit to the power supply connector (input) of another IO-Link Master Unit with a power supply cable.

In this way, connect a power supply cable between the subsequent Units with through-wiring one after another.

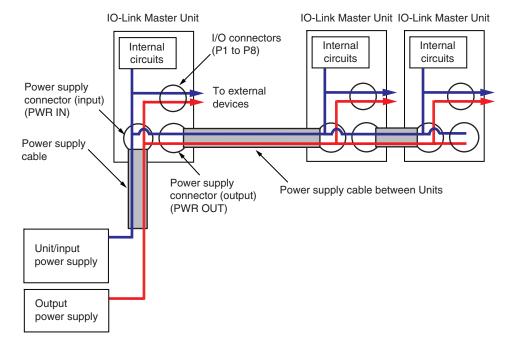

Related Manuals

Manual	Cat. No	Model	Application	Description
NXR-series IO-Link Master Unit for EtherNet/IP TM User's Manual	W619	NXR-ILM08C-EIT	Learning how to use an NXR- series IO-Link Master Unit for EtherNet/IP.	Describes the hardware, setup methods, and functions of the NXR- series IO-Link Master Unit for EtherNet/IP.
NXR-series IO-Link I/O Hub User's Manual	W620	NXR-DDDDD-ILD	Learning how to use an NXR- series IO-Link I/O Hub.	Describes the hardware, setup methods, and functions of the NXR- series IO-Link I/O Hub.
NJ/NX-series CPU Unit Built-in EtherNet/IP TM Port User's Manual	W506	NX701	Using the built-in EtherNet/IP port on an NJ/NX-series CPU Unit.	Information on the built-in EtherNet/IP port is provided. Information is provided on the basic setup, tag data links, and other features.
CS/CJ-series EtherNet/IP TM Units Operation Manual	W465	CS1W-EIP21 CJ1W-EIP21 CJ2H-CPU6□-EIP CJ2M-CPU3□	Using the CS/CJ-series EtherNet/IP Unit.	Provides information on operating and installing CS/CJ-series EtherNet/IP Units, including details on basic settings, tag data links, and FINS communications.
Sysmac Studio Version 1 Operation Manual	W504	SYSMAC-SE2	Learning about the operating procedures and functions of the Sysmac Studio.	Describes the operating procedures of the Sysmac Studio.
NJ/NX-series Instructions Reference Manual	W502	NX701	Learning detailed specifications on the basic instructions of an NJ/NX-series CPU Unit.	The instructions in the instruction set (IEC 61131-3 specifications) are described.
	9541795-1	E3Z-□8□-IL□	Learning the vendor IDs, device IDs, I/O data (process data), and objects (service data).	Describes the following details for OMRON's IO-Link sensors. IO-Link physical layer Device IDs Process data Service data Event functions
IO-Link Sensor Index List	9540292-0	E2E(Q)-□-IL□		
	9539397-1	E3S-DCP21-IL□		

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United Status and/or other countries. EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany. EtherNet/IPTM is a trademark of ODVA.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.



OMRON AUTOMATION AMERICAS HEADQUARTERS • Chicago, IL USA • 847.843.7900 • 800.556.6766 • automation.omron.com

OMRON CANADA, INC. • HEAD OFFICE

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • automation.omron.com

OMRON ELECTRONICS DE MEXICO • HEAD OFFICE

Ciudad de México • 52.55.5901.4300 • 01.800.386.6766 • mela@omron.com

OMRON ELECTRONICS DE MEXICO • SALES OFFICE

San Pedro Garza García, N.L. • 81.12.53.7392 • 01.800.386.6766 • mela@omron.

OMRON ELECTRONICS DE MEXICO • SALES OFFICE

P032I-E-01

Eugenio Garza Sada, León, Gto • 01.800.386.6766 • mela@omron.com

OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE

São Paulo, SP, Brasil • 55 11 5171-8920 • automation.omron.com

OMRON ARGENTINA • SALES OFFICE

Buenos Aires, Argentina • +54.11.4521.8630 • +54.11.4523.8483 mela@omron.com

OTHER OMRON LATIN AMERICA SALES

+54.11.4521.8630 • +54.11.4523.8483 • mela@omron.com

Authorized Distributor:

Controllers & I/O

- Machine Automation Controllers (MAC) Motion Controllers
- Programmable Logic Controllers (PLC) Temperature Controllers Remote I/O

Robotics

• Industrial Robots • Mobile Robots

Operator Interfaces

• Human Machine Interface (HMI)

Motion & Drives

- Machine Automation Controllers (MAC) Motion Controllers Servo Systems
- Frequency Inverters

Vision, Measurement & Identification

 \bullet Vision Sensors & Systems \bullet Measurement Sensors \bullet Auto Identification Systems

Sensing

- Photoelectric Sensors Fiber-Optic Sensors Proximity Sensors
- Rotary Encoders Ultrasonic Sensors

Safety

- Safety Light Curtains Safety Laser Scanners Programmable Safety Systems
- Safety Mats and Edges Safety Door Switches Emergency Stop Devices
- Safety Switches & Operator Controls Safety Monitoring/Force-guided Relays

Control Components

- Power Supplies Timers Counters Programmable Relays
- Digital Panel Meters Monitoring Products

Switches & Relays

- Limit Switches Pushbutton Switches Electromechanical Relays
- Solid State Relays

Software

 $\bullet \ \mathsf{Programming} \ \& \ \mathsf{Configuration} \ \bullet \ \mathsf{Runtime}$

Note: Specifications are subject to change.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Omron:

NXR-ILM08C-EIT