Safety Standard ISO 13849-1 Certified*2(Corresponding to Category 2 to 4)

3 Port Solenoid Valve/

Residual Pressure Release Valvewith Detection of Main Valve Position





*2. Refer to page 2 for certified products.

With Detection of Main Valve Position

Category 2

The detecting function of the main valve position detects a mismatch between the input signal and valve operation.




When the dual residual pressure release valve is used, if one of the valves fails to operate, the

other one releases residual pressure.


Redundant system can be constructed easily.

Category 3, 4

Dual Residual Pressure Release Valve VP544-X538/VP744-X538

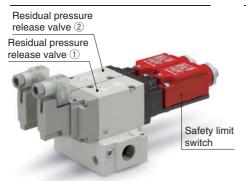

With Soft Start-up Function VP544-X555/VP744-X555 (0.7 MPa) VP544-X585/VP744-X585 (1.0 MPa)

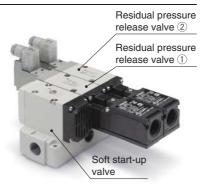

Dual Residual Pressure Release Valve VG342-X87



Redundant System

A system in which even if one part fails, the whole system will fulfill its required function. This is usually achieved by having dual channels of operation, such as dual valves, dual wiring, dual guard switches etc.




Series VP/VG

3 Port Solenoid Valve/Residual Pressure Release Valve with Detection of Main Valve Position Series VP/VG

With Detection of Main Valve Position (Category 2)

Category 2 Safety function can be accomplished by single channel and is automatically checked.

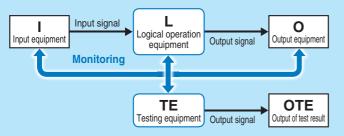

The detecting function of the main valve position detects a mismatch between the input signal and valve operation.


Input equipment (I): Detection equipment (sensor) of starting event Logical operation equipment (L): Relay sequence circuit, PLC control program Output equipment (O): Solenoid valve, Electromagnetic switch, Output relay Recommended valve: VP542/742-X536



Redundant system can be constructed easily. (Category 3, 4)

It has redundancy so there is no loss of safety function with a single failure. The safety function must be checked before each use. An accumulation of undetected faults can cause loss of safety function.

Category 4 It has redundancy so there is no loss of safety function with a single failure. The safety function must be checked before each use. An accumulation of undetected faults does not affect the safety function. (Higher DC and MTTFd than Category 3.)

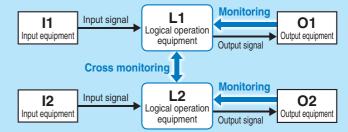

When the dual residual pressure release valve is used, if one of the valves fails to operate, the other one releases residual pressure.

 
Input equipment (I1, I2): Detection equipment (sensor) of starting event Logical operation equipment (L1, L2): Relay sequence circuit, PLC control program Output equipment (O1, O2): Solenoid valve, Electromagnetic switch, Output relay Recommended valve: VP544/744-X538, VG342-X87



* This product is component which is a part of a safety system and safety equipment is not guaranteed by this single unit alone.

Highly reliable construction


1) The main valve position is detected by transferring the main valve movement directly to the reed safety limit switch with the rod.



- 2 Long service life: B10d: 10 million times*
- 3 The return spring releases the residual pressure securely regardless of pressure level.
- * For VP□-X536/X538/X555, safety limit switch made by OMRON

 Safety limit switch can be selected.







M12 connector with 6 pins is


available.

With soft start-up function (-X555/X585)




VP544-X555 VP544-X585

- A function to gradually increase the initial pressure of the pneumatic system has been added to the dual residual pressure release valve.
- Fixed orifice and variable throttle are available as a throttle for adjusting the pressure increase. (Ø 1, Ø 1.5, Ø 2)

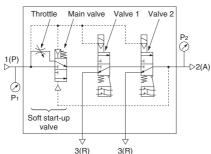

Output Pressure (P2) vs Time Graph

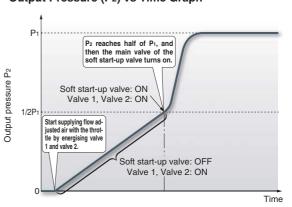




Standards and Enclosure


			Standards						
Series	Category	Safety limit switch	Machinery Directive	2006/4	2/EC				Enclosure
201100	outogot,	manufacturer	Harmonised standards	EN ISO 13849-1: 2008 EN ISO 13849-2: 2008			cUL	RoHS	
Residual Pressure Release Valve	2	OMRON Corporation		•	•	•	•	•	IP65
VP542/742-X536 Page 3		Rockwell Automation, Inc.		•	•	•	•	•	11 03
Dual Residual Pressure Release Valve	3, 4	OMRON Corporation		•	•	•	-	•	IP65
VP544/744-X538 Page 3	0, 4	Rockwell Automation, Inc.		•	-	•	-	•	11 03
Dual Residual Pressure Release Valve with Soft Start-up Function	3, 4	OMRON Corporation		•	•	•	+	•	IP65
VP544/744-X555 VP544/744-X585	0, 1	Rockwell Automation, Inc.		•	•	•		•	00
Dual Residual Pressure Release Valve	3, 4	OMRON Corporation		•	-	•	*	•	IP40
VG342-X87 Page 19	3, 4	Rockwell Automation, Inc.				•	+	•	11-40

* Only port size 3/4"

Series Variations

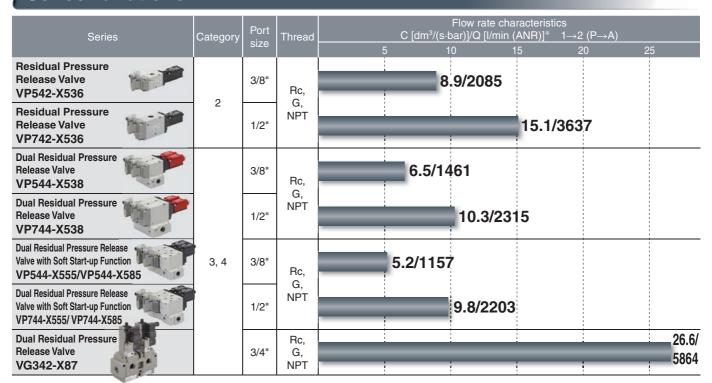

* These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa

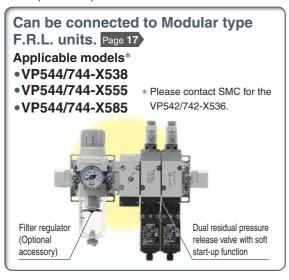



For details about Safety Standard


Safety Standard ISO 13849-1 Certified

3 Port Solenoid Valve/Residual Pressure Release Valve with Detection of Main Valve Position








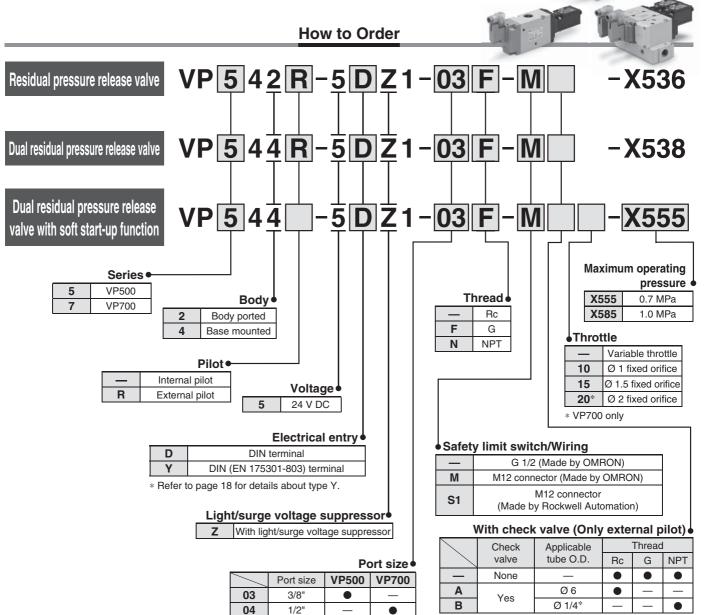

Made to Order

Series Compatible with Secondary Batteries

For details about 25A-, please consult SMC.

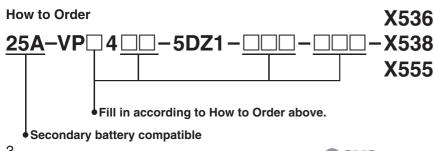

Note) Electrical entry can be selected only for D type. Check valve type is available only when the thread type is Rc.

For internal pilot, the symbol is nil.

selection of the check valve

* Refer to "Piping for External Pilot Type" on page 4 for



Valve Specifications

	VP□42-X536	VP□42R-X536					
Model	VP□44-X538	VP□44R-X538	VP□44-X585	VP□44R-X585			
	VP□44-X555	VP□44R-X555					
Fluid		Α	ir				
Type of actuation		N.C. (Spri	ng return)				
Operation	Internal pilot	External pilot	Internal pilot	External pilot			
Operating pressure range	0.25 to	0.7 MPa	0.25 to	1.0 MPa			
External pilot pressure		_	0.25 to 0.7 MPa (Same	as operating pressure)			
Maximum operating frequency	30 times/minute						
Minimum operating frequency	1 time/week						
Operating and ambient temperature	-10 to 50 °C (No freezing)						
Ambient humidity		20 to 90 %RH (N	lo condensation)				
Manual override		No	ne				
Pilot exhaust		Individua	l exhaust				
Lubrication		Not re	quired				
Mounting orientation		Unres	tricted				
Impact/Vibration resistance		150/30	0 m/s ²				
Enclosure	IP65						
Operating environment	Indoors						
P10d (MTTFd coloridation)	10000000 times (for the safety limit	switch made by OMRON)	10000	00 times			
B10d (MTTFd calculation)	1000000 times (for the safety limit	switch made by Rockwell Automation)	10000	00 times			

Internal Pilot Type

Valve may not operate properly when air supply to P port is not adequate and the supply pressure to the valve is lower than 0.25 MPa, the minimum operating pressure. Be careful with insufficient supply pressure.

Piping for External Pilot Type


The product may not operate when the external pilot pressure is insufficient due to simultaneous operation or restricted air piping. In this case, use the check valve (AKH series) with the external pilot port, change the piping size or adjust the set pressure to provide a constant pressure of 0.25 MPa or more.

Flow Rate Characteristics / Weight

	Flow rate characteristics									
Series)		2→3	(A→R)	Weight			
	C [dm3/(s-bar)]	b	Cv	Q [l/min (ANR)]*	C [dm3/(s-bar)]	b	Cv	Q [I/min (ANR)]*	[g]	
VP542-X536	8.9	0.16	2.2	2085	8.9	0.20	2.1	2132	350	
VP742-X536	15.1	0.21	3.6	3637	15.3	0.22	3.7	3707	590	
VP544-X538	6.5	0.08	1.3	1461	6.7	0.10	1.3	1521	930	
VP744-X538	10.3	0.08	2.3	2315	9.7	0.08	2.1	2180	1510	
VP544-X555	5.2	0.06	1.1	1157	6.7	0.10	1.3	1521	1105	
VP544-X585	5.2	0.00	1.1	1157	0.7	0.10	1.5	1321	1105	
VP744-X555	9.8	0.08	2.1	2203	9.7	0.08	2.1	2180	2000	
VP744-X585	5.0	0.06	۷.۱	2203	3.7	0.00	۷.۱	2100	2000	

^{*} These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa

Needle Valve / Flow Rate Characteristics (VP544/744-X555)

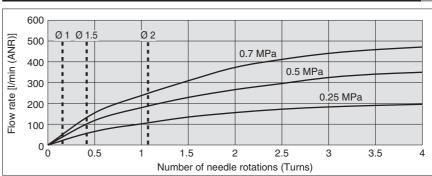

Solenoid Specifications

Electrical entry	DIN terminal
Rated voltage	24 V DC
Allowable voltage fluctuation	±10 %
Power consumption	0.45 W
Surge voltage suppressor	Varistor
Indicator	LED

Safety Limit Switch Specifications

Manufacturer	OMRON	Rockwell Automation			
Electrical wiring	G 1/2, M12 connector	M12 connector			
Contact resistance	25 m $Ω$ or less	50 m Ω or less			
Min. applicable load	5 V DC, 1 mA (Load resistance)	5 V DC, 5 mA (Load resistance)			
Max. voltage	24 V DC				
Max. load current	50	mA			
Max. load inductance	0.5	5 H			
Insulation voltage	300 V	600 V			
Protection against electric shock	Class II (EN60947-5-1: 2004)				

 
VP-X536, X538, X555, X585

Symbols

Safety limit switch Made by OMRON

Symbol

Terminal/Pin Numbers (Built-in switch 2N.C.)




M12 connector pin number	Wiring specification
1)	
2	3 2
3	4
4	

	<u> </u>
G 1/2 terminal number	Wiring specification
(11)	
(12)	11 12
(31)	$\bigotimes_{\mathbb{R}^1}$
(32)	


VP542(R)/742(R)-X536

 Internal pilot




Safety limit switch terminal [N.C.] M12 connector pin number G 1/2 terminal number

 External pilot




External pilot/With check valve

 


VP544(R)/744(R)-X538


Internal pilot

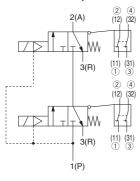

External pilot

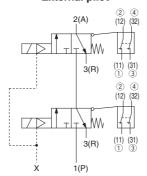


External pilot/With check valve

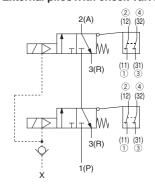


VP544(R)/744(R)-X555 VP544(R)/744(R)-X585

Internal pilot

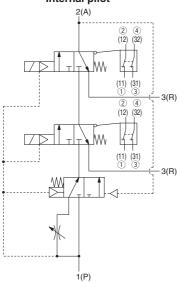


External pilot

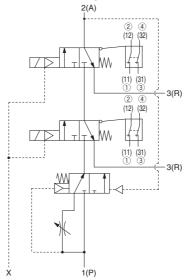

SMC

External pilot/With check valve

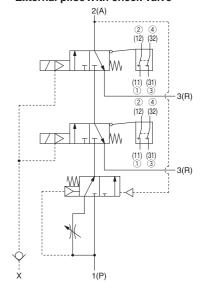

Symbols

Safety limit switch Made by **Rockwell Automation**

Symbol




Pin Numbers (Built-in switch 3N.C.)


M12 connector pin number	Wiring specification
① ⑤	(3)
2	(6) (4) (2)
6	
(3)	5

VP542(R)/742(R)-X536

 
Internal pilot



External pilot

 


External pilot/With check valve

 


VP544(R)/744(R)-X538


Internal pilot

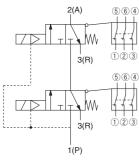

External pilot

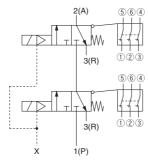


External pilot/With check valve

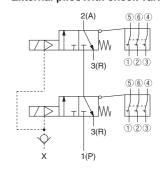


VP544(R)/744(R)-X555 VP544(R)/744(R)-X585


Internal pilot

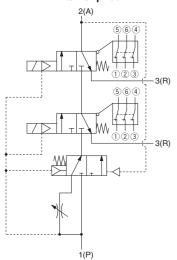

External pilot

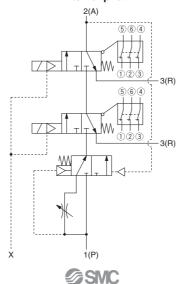



External pilot/With check valve

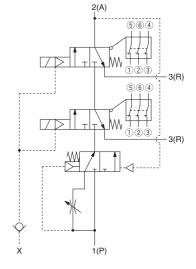


  
VP542(R)-5^D_YZ1-03□-□-X536 VP542(R)-5^DZ1-03□-M□-X536




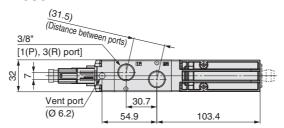




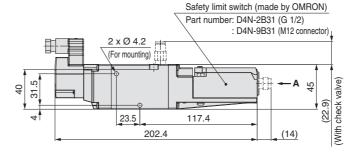





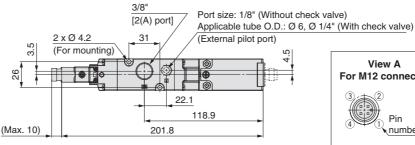


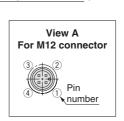



VP542(R)-5 ^DZ1-03 □-S1 □-X536

 


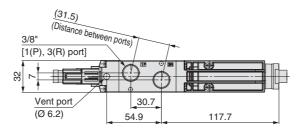

 

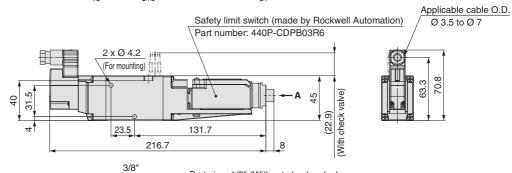


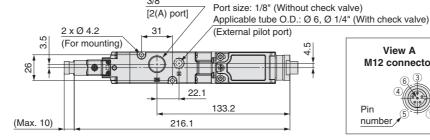

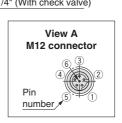




Residual Pressure Release Valve (-X536)

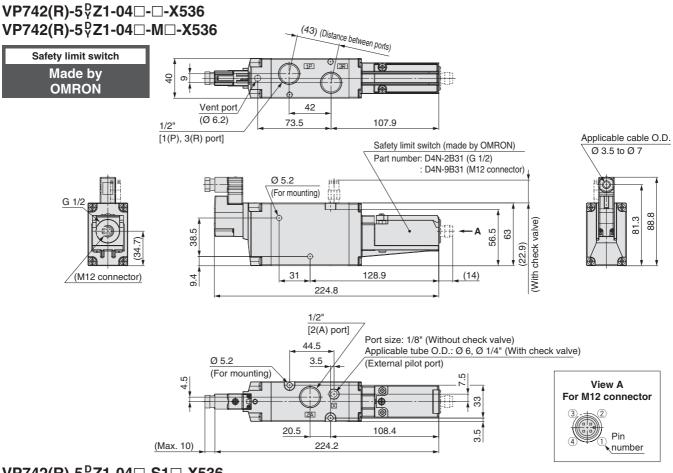


VP742(R)-5^DZ1-04□-S1□-X536

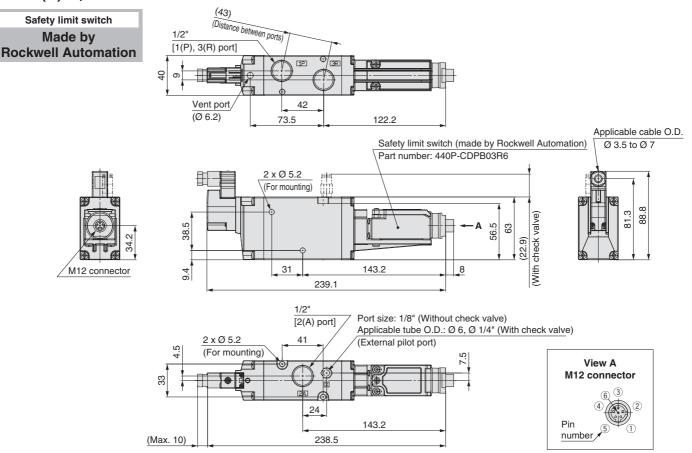

SMC


VP544(R)-5^PZ1-03□-□-X538 VP544(R)-5^PZ1-03□-M□-X538

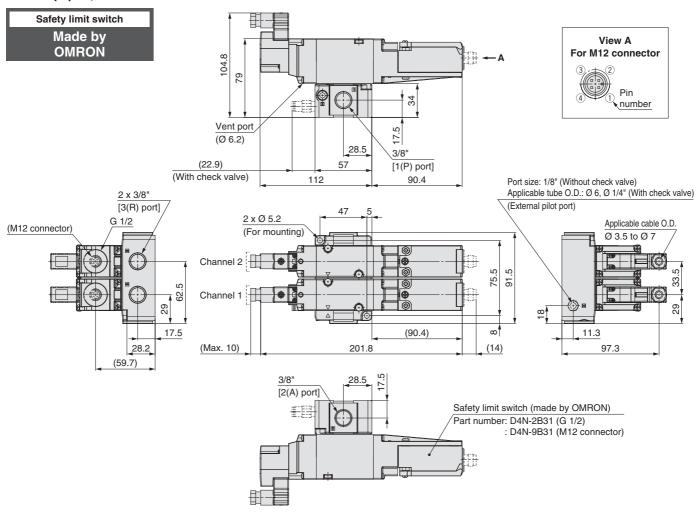


Dimensions

Dual Residual Pressure Release Valve (-X538)

VP544(R)-5^D_YZ1-03□-S1□-X538

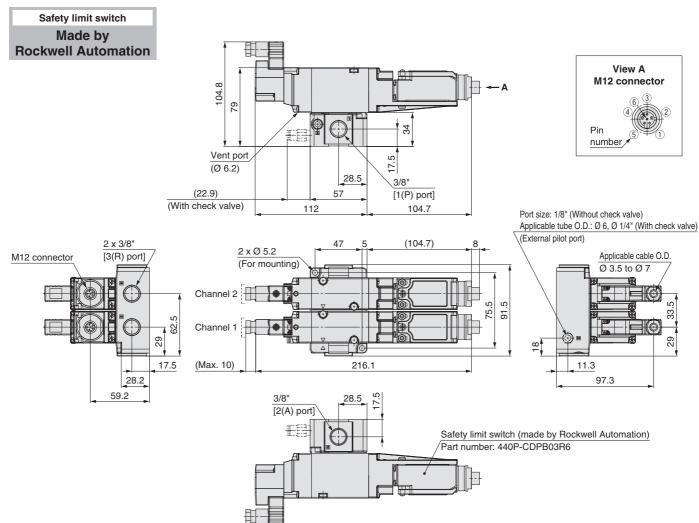

VP744(R)-5^PZ1-04□-□-X538 VP744(R)-5^PZ1-04□-M□-X538

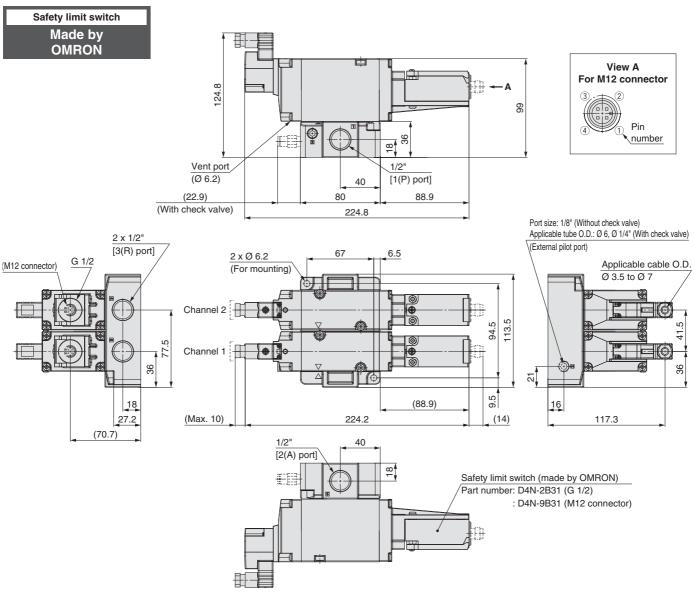


Dimensions

Dual Residual Pressure Release Valve (-X538)

VP-X538

VP744(R)-5^D_YZ1-04□-S1□-X538

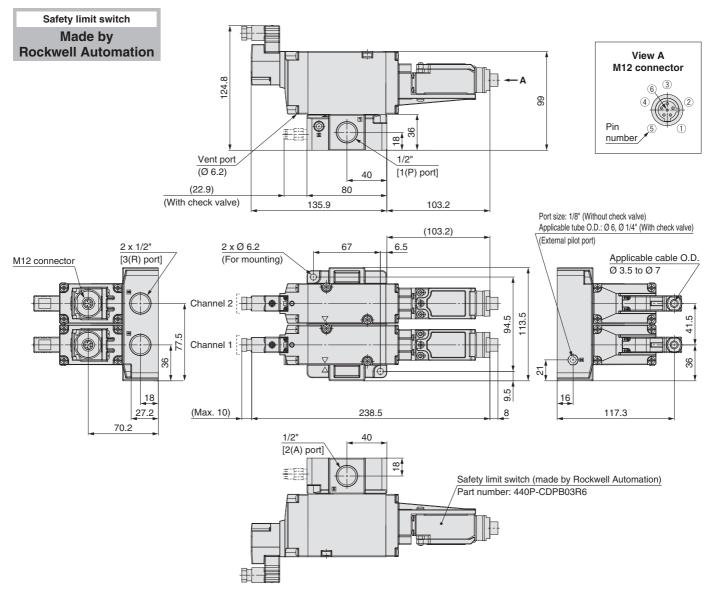



VP-X555, X585


Dimensions

Dual Residual Pressure Release Valve with Soft Start-up Function (-X555/X585)

VP544(R)-5^P_YZ1-03□-□□-X555/X585 VP544(R)-5^P_YZ1-03□-M□□-X555/X585

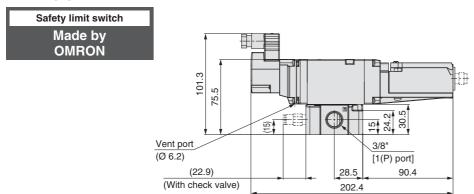


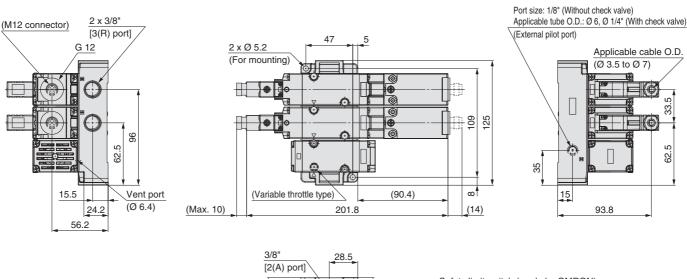


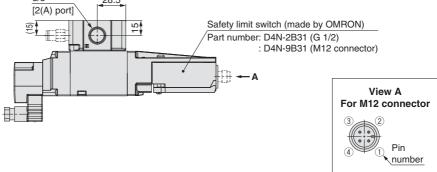


Dual Residual Pressure Release Valve with Soft Start-up Function (-X555/X585


VP544(R)-5^D_YZ1-03□-S1□□-X555/X585/X585

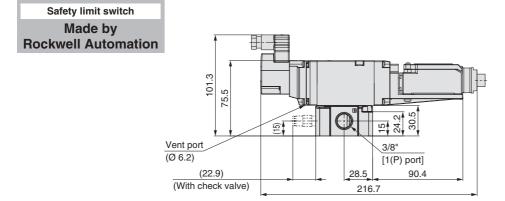

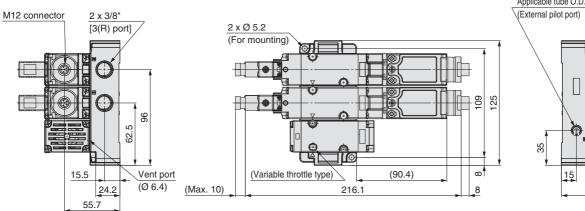

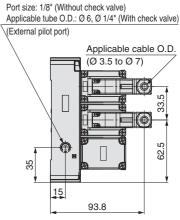

Pin number

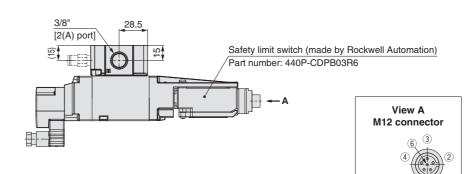



VP-X555, X585


Dimensions

Dual Residual Pressure Release Valve with Soft Start-up Function (-X555/X585)

VP744(R)-5^D_YZ1-04□-□□-X555/X585 VP744(R)-5^D_YZ1-04□-M□□-X555/X585

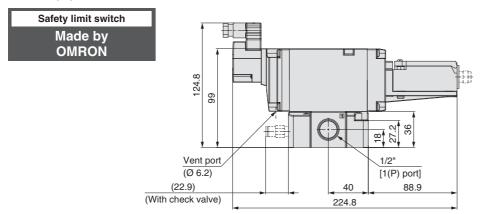


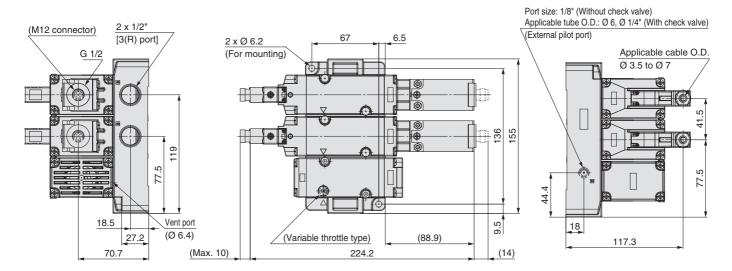


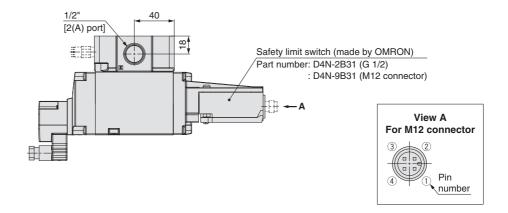


Dual Residual Pressure Release Valve with Soft Start-up Function (-X555/X585)

VP744(R)-5^DZ1-04□-S1□□-X555/X585

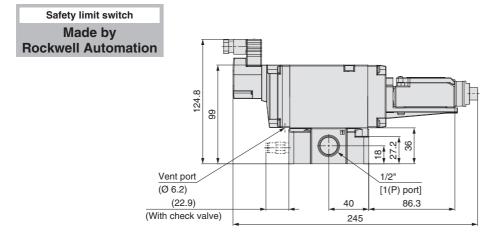

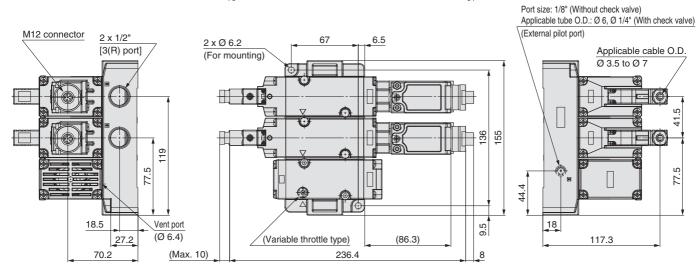


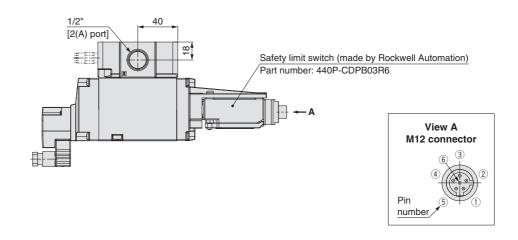

VP500/700-X538, X555, X585 Optional Accessories

Piping Adapter: 3/8, 1/2

 
A piping adapter allows installation/removal of the component without removing the piping and thus makes maintenance easier.




Part no. Note)	Port size	Α	В	D
E300-□03-A	3/8	31.8	30	30
E400-□04-A	1/2	31.8	36	36


Note) ☐ in part numbers indicates a pipe thread type. No indication is necessary for Rc; however, indicate N for NPT, and F for G.


Spacer with Bracket

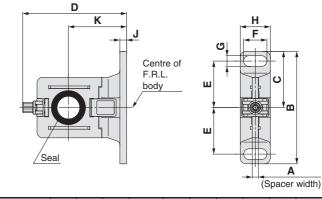

Ī	Part no.	Α	В	С	D	Е	F	G	Н	J	K
	Y300T-A	4.2	82	41	71.5	35	14	7	19	4	41
	Y400T-A	5.2	96	48	86.1	40	18	9	26	5	50

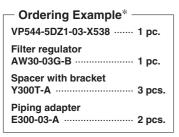


 

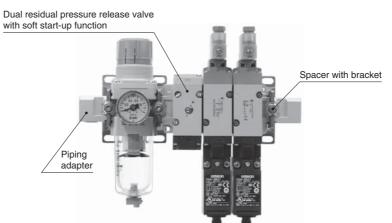


Spacer with Bracket Mounting Position

Dual residual pressure release valve (-X538)

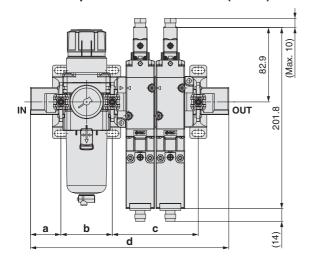

Model	а	b	С	d	Note
VP544-5DZ1-03-X538	33.9	57.2	95.7	220.7	AW30-03G-B Y300T-A E300-03-A
VP744-5DZ1-04-X538	34.4	75.2	118.7	262.7	AW40-04G-B Y400T-A E400-04-A

Dual residual pressure release valve with soft start-up

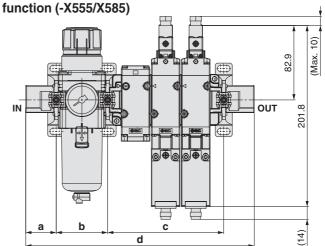

Model	а	b	С	d	Note
VP544-5DZ1-03-X555 VP544-5DZ1-03-X585	33.9	57.2	129.2	254.2	AW30-03G-B Y300T-A E300-03-A
VP744-5DZ1-04-X555 VP744-5DZ1-04-X585	34.4	75.2	160.2	304.2	AW40-04G-B Y400T-A E400-04-A

^{*} Separate interfaces are required for modular unit.



VP500/700-X536, X538, X555, X585 **Specific Product Precautions**

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to the Operation Manual on the SMC website, http://www.smc.eu

How to Use DIN Terminal Connector

⚠ Caution

Connection

- 1. Loosen the holding screw and pull the connector out of the solenoid valve terminal block.
- 2. After removing the holding screw, insert a flat blade screwdriver etc. into the notch on the bottom of the terminal block and pry it open, separating the terminal block and the housing.
- 3. Loosen the screw (slotted screws) in the terminal block. Insert the lead core wires to the terminals according to the connection method, and secure the wires by re-tightening the terminal
- 4. Secure the cord by fastening the ground nut.

When making connections, please note that using other than the supported size (Ø 3.5 to Ø 7) heavy-duty cord will not satisfy IP65 (enclosure) standards. Also, be sure to tighten the ground nut and holding screw within their specified torque ranges.

Changing the entry direction

After separating the terminal block and housing, the cord entry can be changed by attaching the housing in the desired direction (4 directions at 90° intervals).

* When equipped with a light, be careful not to damage the light with the cord's lead wires.


Precautions

Plug in and pull out the connector vertically without tilting to one side.

Compatible cable

Cord O.D.: Ø 3.5 to Ø 7

(Reference) 0.5 mm², 2-core or 3-core, equivalent to JIS C 3306

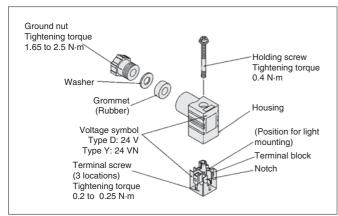

Type "Y"

 
DIN connector type Y is a DIN connector that confirms to the DIN pitch 8-mm standard.

- D type DIN connector with 9.4 mm pitch between terminals is not interchangeable.
- To distinguish from the D type DIN connector, "N" is listed at the end of voltage symbol.
- Dimensions are completely the same as D type DIN connector.

Light/Surge Voltage Suppressor

DIN Terminal

With light (DZ) (YZ)



There is no polarity

Note) Surge voltage suppressor of varistor has residual voltage corresponding to the protective element and rated voltage; therefore, protect the controller side from the surge voltage.

Limit Switch Cable

OMRON or Rockwell Automation M12 connector limit switch cable is available.

M12 Connector Cable (4 Pins) Made by OMRON

Part number	Cable length [mm]
ZS-37-L	300
ZS-37-M	500
ZS-37-N	1000
ZS-37-P	2000
ZS-37-C	5000

M12 Connector Cable (6 Pins) Made by Rockwell Automation

	, ,
Part number	Cable length [mm]
VP500-231-1	2000

Installation

Use the external pilot type when using VP500/700-X536 or X538 with AV series. Install the AV series to the primary side.


Safety Standard ISO 13849-1 Certified

3 Port Solenoid Valve/Residual Pressure Release Valve with Detection of Main Valve Position **VG342-X87**





How to Order

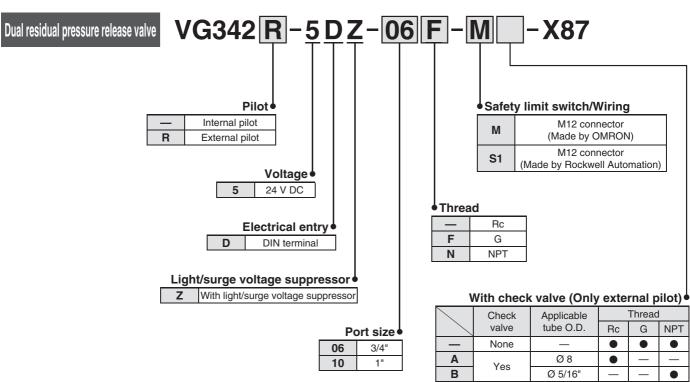


- * For internal pilot, the symbol is nil.
- Refer to "Piping for External Pilot Type" on page 20 for selection of the check valve.

Made to Order

1 Series Compatible with Secondary Batteries

For details about 25A-, please contact SMC.

How to Order

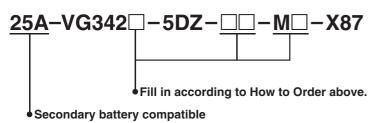

Note) Electrical entry can be selected only for D type.

Check valve type is available only when the thread type is Rc.





Valve Specifications

Fluid	Air				
Type of actuation	N.C. (Spring return)				
Operation	Internal pilot	External pilot			
Operating pressure range	0.25 to 0.7 MPa	0.25 to 0.7 MPa			
External pilot pressure	_	0.25 to 0.7 MPa (Same as operating pressure)			
Maximum operating frequency	30 times	s/minute			
Minimum operating frequency	1 time/week				
Operating and ambient temperature	−10 to 50 °C (No freezing)				
Ambient humidity	95 %RH or less (No condensation)				
Manual override	None				
Pilot exhaust	Individual exhaust				
Lubrication	Not re	quired			
Mounting orientation	Unres	tricted			
Impact/Vibration resistance	150/50 m/s²				
Enclosure	IP40				
Operating environment	Indoors				
Weight	2.8 kg 2.9 kg				
B10d (MTTFd calculation)	900000 times				

Internal Pilot Type

Valve may not operate properly when air supply to P port is not adequate and the supply pressure to the valve is lower than 0.25 MPa, the minimum operating pressure. Be careful with insufficient supply pressure.

Piping for External Pilot Type

The product may not operate when the external pilot pressure is insufficient due to simultaneous operation or restricted air piping. In this case, use the check valve (AKH series) with the external pilot port, change the piping size or adjust the set pressure to provide a constant pressure of 0.25 MPa or more.

Flow Rate Characteristics

		Flow rate characteristics							
	Series	1→2 (P→A)			2→3 (A→R)				
		C [dm³/(s·bar)]	b	Cv	Q [I/min (ANR)]*	C [dm³/(s·bar)]	b	Cv	Q [I/min (ANR)]*
	VG342-X87	26.6	0.04	5.5	5864	28.6	0.03	5.6	6278

^{*} These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa

Solenoid Specifications

Electrical entry	DIN terminal
Rated voltage	24 V DC
Allowable voltage fluctuation	-15 % to +10 % of rated voltage
Power consumption	2.2 W
Suppressor	Diode
Indicator	LED

Safety Limit Switch Specifications

Manufacturer	OMRON	Rockwell Automation			
Electrical wiring	M12 connector				
Contact resistance	25 m Ω or less	50 m Ω or less			
Min. applicable load	5 V DC, 1 mA (Load resistance)	5 V DC, 5 mA (Load resistance)			
Max. voltage	24 V DC				
Max. load current	50 mA				
Max. load inductance	0.5 H				
Insulation voltage	300 V 600 V				
Protection against electric shock	Class II (EN 60	947-5-1: 2004)			

VG342-X87

Symbols

Safety limit switch

Made by OMROŃ

Symbol

Pin Numbers (Built-in switch 2N.C.)




M12 connector pin number	Wiring specification
1)	
2	3 2
3	4
4	


VG342(R)-X87


Internal pilot

External pilot

External pilot/With check valve

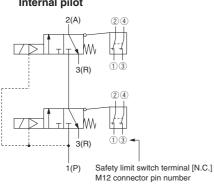

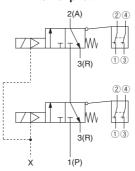

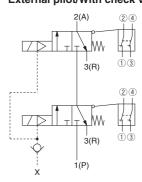


Safety limit switch Made by

Rockwell Automation

Symbol


Pin Numbers (Built-in switch 3N.C.)



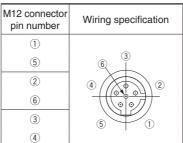


VG342(R)-X87

Internal pilot

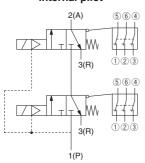

External pilot 3(R) 3(R) 1(P) **SMC**

External pilot/With check valve

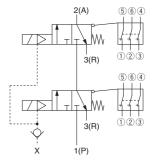



Dimensions


Dual Residual Pressure Release Valve (-X87)

VG342(R)-5DZ-06□-M□-X87

 Safety limit switch
Made by
OMRON

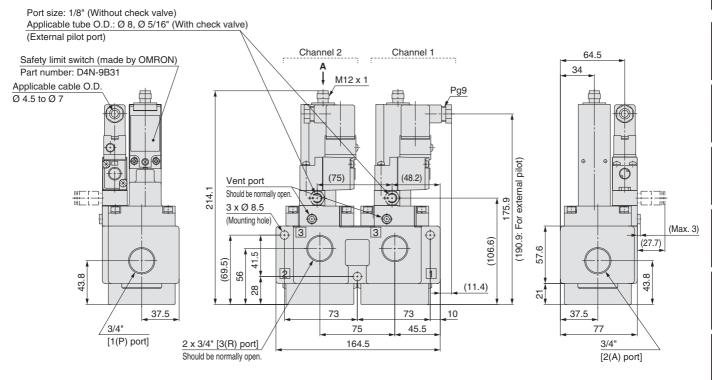


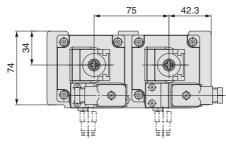



VG342(R)-5DZ-10□-M□-X87


Safety limit switch Made by OMRON

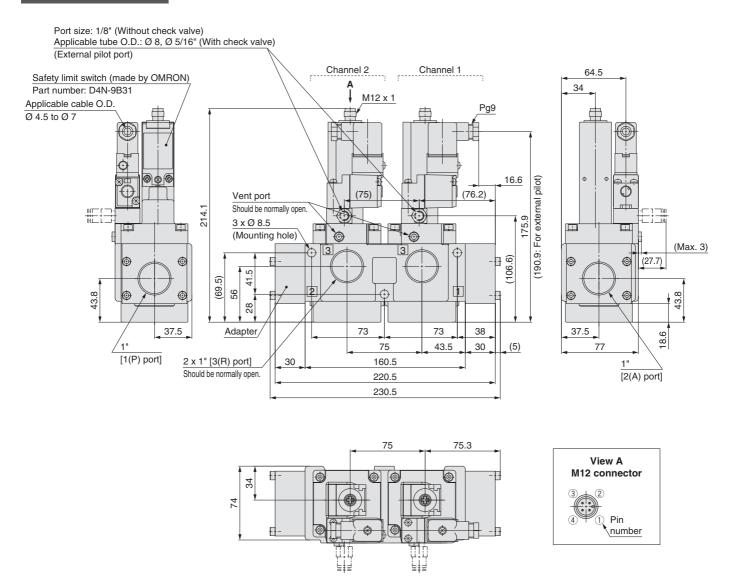



Dual Residual Pressure Release Valve (-X87)

VG342(R)-5DZ-06□-S1□-X87

 Safety limit switch Made by **Rockwell Automation**

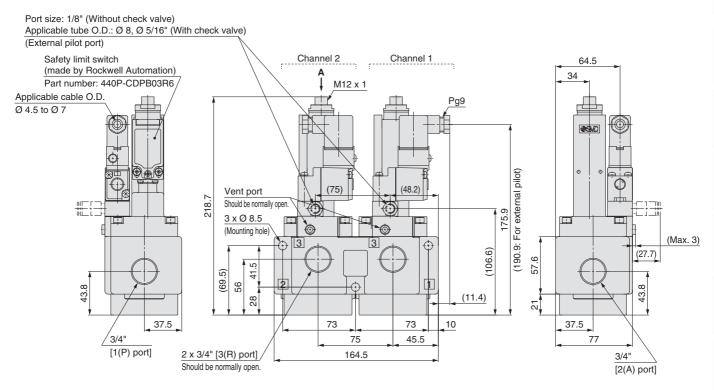


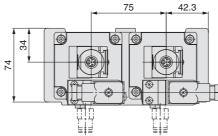






VG342(R)-5DZ-10□-S1□-X87

 Safety limit switch Made by Rockwell Automation

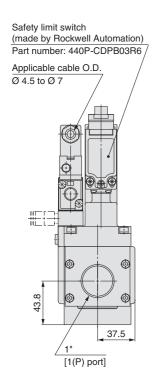

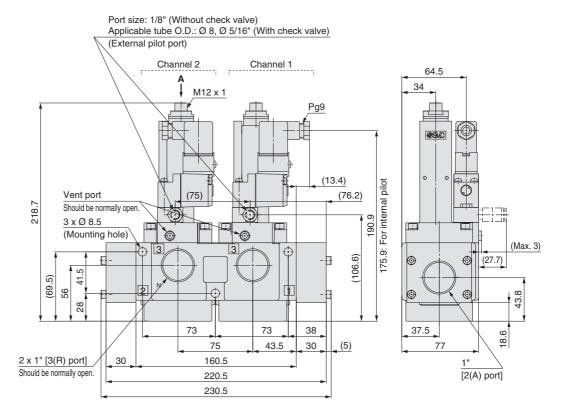

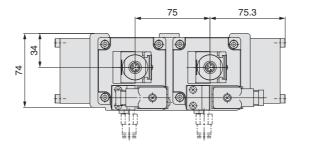





VG342-X87 Specific Product Precautions

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to the Operation Manual on the SMC website, http://www.smc.eu

How to Use DIN Terminal Connector

⚠ Caution

Connection

- Loosen the holding screw and pull the connector out of the solenoid valve terminal block.
- After removing the holding screw, insert a flat blade screwdriver etc. into the notch on the bottom of the terminal block and pry it open, separating the terminal block and the housing.
- Loosen the screw in the terminal block. Insert the lead core wires to the terminals, and secure the wires by re-tightening the terminal screw.
 - As the product has polarity, referring to the electric circuit diagram, wire the product correctly as per the symbol of the terminal No. of the terminal block.
- Secure the cord by fastening the ground nut.
 Tighten the ground nut and holding screw within the specified range of torque.

Changing the entry direction

After separating the terminal block and housing, the cord entry can be changed by attaching the housing in the opposite direction 180°

* Be careful not to damage the element etc. with the cord's lead wires.

Precautions


Plug in and pull out the connector vertically without tilting to one side.

Compatible cable


Cord O.D.: Ø 4.5 to Ø 7 (Reference) 0.5 to 1.5 mm², 2-core or 3-core, equivalent to JIS C 3306

Applicable crimped terminals

O-terminals: Equivalent to R1.25-4M defined in the JIS C 2805 Y-terminals: Equivalent to 1.25-3L made by J.S.T. Mfg. Co., Ltd. Rod-terminals: Up to size 1.5

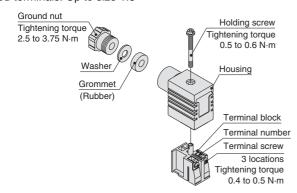

Light/Surge Voltage Suppressor

 

Limit Switch Cable

OMRON or Rockwell Automation M12 connector limit switch cable is available.

M12 Connector Cable (4 Pins) Made by OMRON

Part number	Cable length [mm]
ZS-37-L	300
ZS-37-M	500
ZS-37-N	1000
ZS-37-P	2000
ZS-37-C	5000

M12 Connector Cable (6 Pins) Made by Rockwell Automation

Part number	Cable length [mm]
VP500-231-1	2000

⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which if not avoided could result in minor or mode

which, if not avoided, could result in minor or moderate injury

ınjury.

⚠ Warning:

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious

injury.

⚠ Danger : Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠ Warning

 The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3.Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
 - An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, wichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

∧ Caution

 $\ensuremath{\mathsf{SMC}}$ products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

SMC Corporation (Europe)

Austria Belgium Bulgaria Croatia Czech Republic Denmark Estonia Finland France Germany Greece Hungary	☎ +43 (0)2262622800 ☎ +32 (0)33551464 ☎ +359 (0)2807670 ☎ +385 (0)13707288 ☎ +420 541424611 ☎ +45 70252900 ☎ +372 6510370 ☎ +338 207513513 ☎ +33 (0)164761000 ☎ +49 (0)61034020 ☎ +30 210 2717265 ☎ +36 23511390	www.smc.at www.smc.bg www.smc.hr www.smc.cz www.smcdk.com www.smcpneumatics.ee www.smc.fi www.smc.france.fr www.smc.de www.smc.de	office @ smc.at info @ smcpneumatics.be office @ smc.bg office @ smc.cz smc @ smcdk.com smc @ smcdk.com smc @ smc.fi info @ smc-france.fr info @ smc.de sales @ smchellas.gr office @ smc.hu	Lithuania Netherlands Norway Poland Portugal Romania Russia Slovakia Slovenia Spain Sweden Switzerland	## 370 5 2308118 34 30 5 2308118 43 6 7129020 44 8 222119600 43 51 226166570 40 213205111 47 8127185445 421 (0)413213212 43 4902184100 46 (0)86031200 41 (0)523963131	www.smclt.lt www.smcpneumatics.nl www.smc-norge.no www.smc.pl www.smc.eu www.smcromania.ro www.smc-pneumatik.ru www.smc.si www.smc.eu www.smc.eu www.smc.eu www.smc.nu	info@smclt.lt info@smcpneumatics.nl post@smc-norge.no office@smc.pl postpt@smc.smces.es smcromania@smcromania.ro info@smc-pneumatik.ru office@smc.sk dfice@smc.si post@smc.smces.es post@smc.nu info@smc.nu
Greece	2 +30 210 2717265	www.smchellas.gr	sales@smchellas.gr	Sweden	* +46 (0)86031200	www.smc.nu	post@smc.nu
Ireland	* +353 (0)14039000	www.smcpneumatics.ie	sales@smcpneumatics.ie	Turkey	* +90 212 489 0 440	www.smcpnomatik.com.tr	info@smcpnomatik.com.tr
Italy Latvia	☎+39 0292711 ☎+371 67817700	www.smcitalia.it www.smclv.lv	mailbox@smcitalia.it info@smclv.lv	UK	** +44 (0)845 121 5122	www.smcpneumatics.co.uk	sales@smcpneumatics.co.uk