



K-67 spring change


Open spring (as picture)cover with a small screw driver

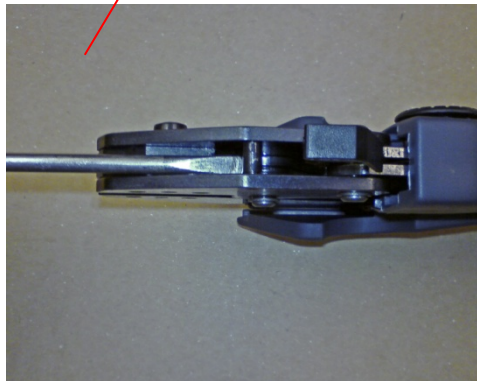


Open and bend up the upper handle to show the fastening point for the spring.

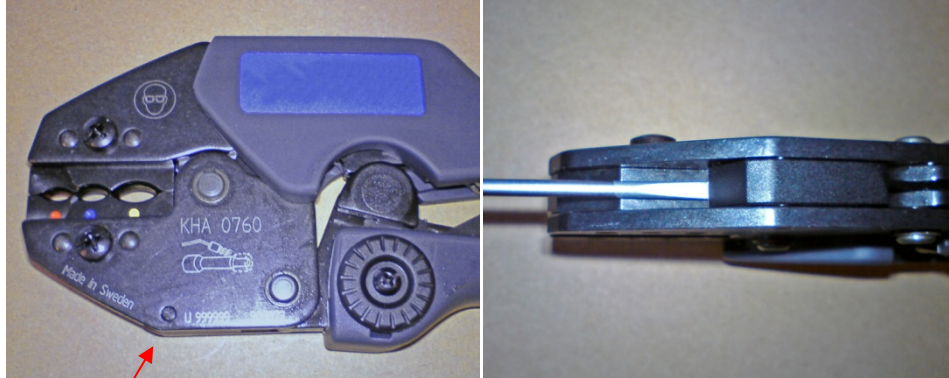

The spring is to be inserted as shown on the picture below.

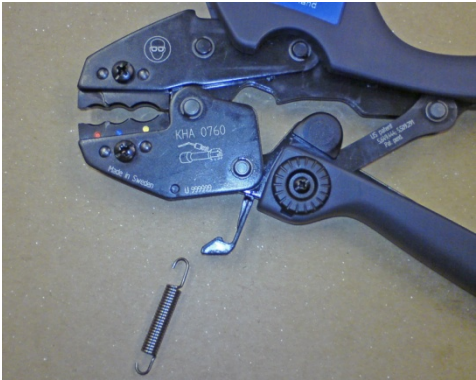

Put the small screwdriver into the spring as shown to put it in place in the tool

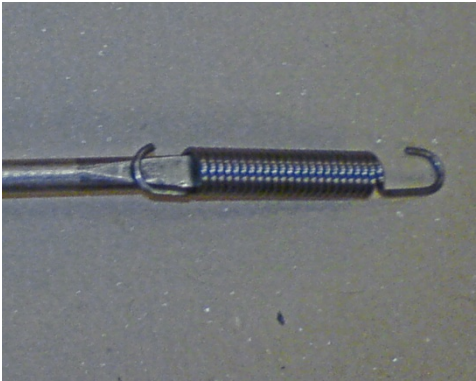

Insert the spring into the tool and make sure it hooks on to the axle in front end (see red arrow).



Use a tool shown in the picture to be able to stretch the spring onto the axle (see further pictures).



Hook the tool onto the spring as shown in picture



Stretch the spring and hook it onto the axle.



Close the spring cover and start using the tool.

