

JST

11




Open the tool.
Werkzeug öffnen.

12



Loosen the flap locator.
Klapppositionierer lösen.

13

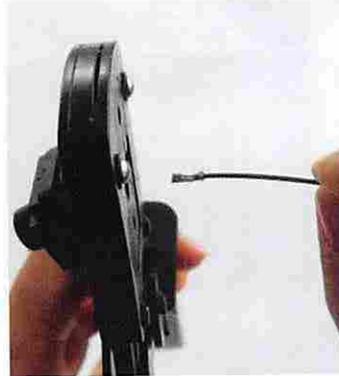

Remove the crimped contact.
Gecrimpten Kontakt entnehmen.

MAINTENANCE / WARTUNG

The tool has to be kept clean and oiled occasionally. Referring to the results of the life-time simulation we recommend the exchange of the locator after 1000 cycles at the latest. Furthermore we recommend checking the tool regularly by measuring the dimensions indicated in the specifications of the crimped contact.

Das Werkzeug muss unbedingt sauber gehalten und gelegentlich geölt werden. Bezugnehmend auf die Resultate des Lebensdauertests empfehlen wir den Austausch der Locator spätestens nach 1000 Zyklen. Weiterhin empfehlen wir, das Werkzeug in regelmäßigen Abständen durch Messen der in der Spezifikation des Crimpkontaktes angegebenen Maße zu überprüfen.

JST

Instruction Manual/Bedienungsanleitung
Crimp Tool/Crimp-Werkzeug CS 10 – WC 692






Application/Anwendungsbereich:

For processing of JST contacts
Zur Verarbeitung der JST Kontakte

SXA – 001T – P0.6 AWG 28 - 22
SXAM – 001 – P0.6 AWG 28 - 22

JST

JST

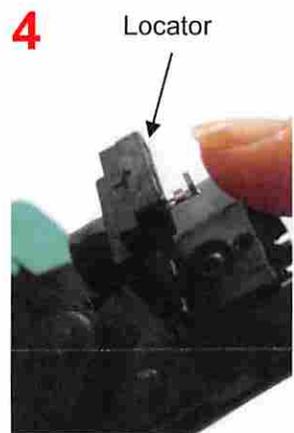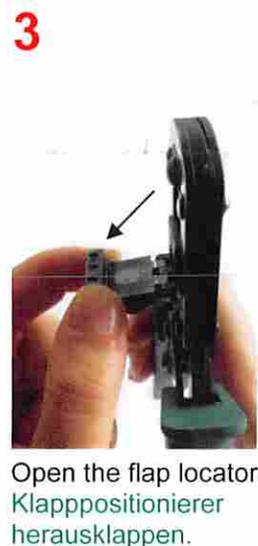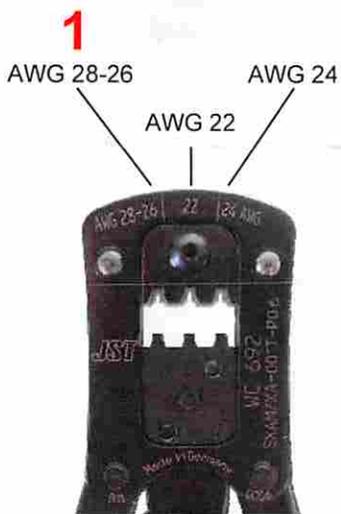

Contact has to be inserted until stop.
Please pay attention to the correct
cross section.
Kontakt bis Anschlag einschieben.
Querschnittsbereich beachten!

