

HTB

1/4" x 1-1/4" and 5 mm x 20 mm Panel-mount fuse holders



Agency information

- UL Recognized: File E14853, Guide IZLT2,
- CSA: File 47235, Class 6225-01,
- VDE: Certificate 136128 (M version, 5 x 20 mm only)
- CE



Product features

- For 1/4" x 1 1/4" and 5 mm x 20 mm fuses
- All holder bodies have the option of using 1/4" x 1 1/4" or 5 mm x 20 mm carriers
- Withstands 15 to 20 Lb-In torque to mounting nut when mounting fuse holder to panel
- High temperature, flame retardant thermoplastic meets UL 94 V-0

Environmental compliance




Specifications

Part number	UL Current rating (A)	CSA Current rating (A)	Voltage rating (V)	Fuse size	Quick-connect
HTB-x2I	20	16	250	1/4" x 1-1/4"	3/16"
HTB-x4I	20	16	250	1/4" x 1-1/4"	3/16"
HTB-x6I	20	16	250	1/4" x 1-1/4"	1/4"
HTB-x8I	20	16	250	1/4" x 1-1/4"	1/4"
HTB-x2M	16	16	250	5 mm x 20 mm	3/16"
HTB-x4M	16	16	250	5 mm x 20 mm	3/16"
HTB-x6M	16	16	250	5 mm x 20 mm	1/4"
HTB-x8M	16	16	250	5 mm x 20 mm	1/4"



Powering Business Worldwide

Ordering details

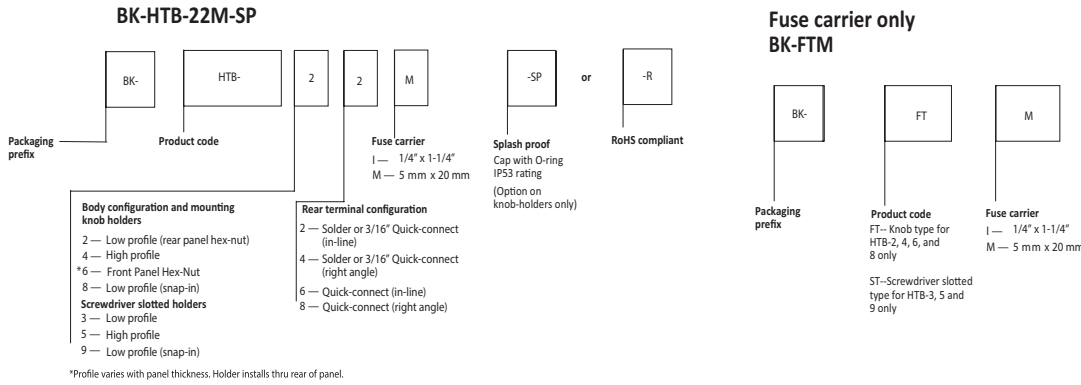


Packaging prefix

- Blank 10 pieces in a carton
- BK- 100 pieces in a cardboard shelf package


Dimensions- inches (mm)

Carrier

Knob type

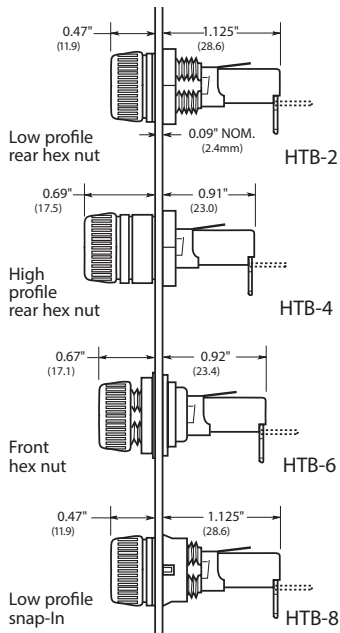


Screwdriver type

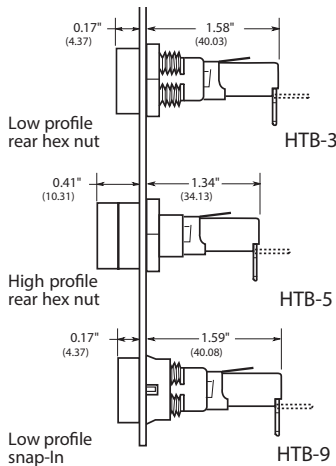


Mounting- inches (mm)


HTB-2, -3, -4, -5 and -6

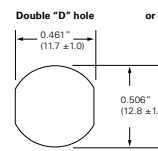


HTB-8, and -9

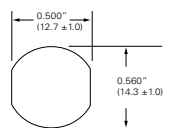

Solder or 3/16" Quick-connect

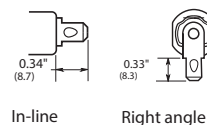

1/4" Quick-connect

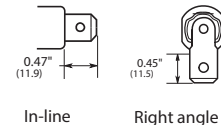

Maximum panel thickness

Body type	Inches	mm
HTB-2	0.30	7.62
HTB-3	0.30	7.62
HTB-4	0.125	3.18
HTB-5	0.125	3.18
HTB-6	0.30	7.62
HTB-8	0.125	3.18
HTB-9	0.125	3.18


Knob type	Solder or 3/16" Quick-connect		1/4" Quick-connect		Carrier options-Knob type	
	In-line	Right-angle	In-line	Right-angle	1/4" x 1-1/4"	5 mm x 20 mm
HTB-2	HTB-22I-R	HTB-24I-R	HTB-26I-R	HTB-28I-R	x	-
	HTB-22M-R	HTB-24M-R	HTB-26M-R	HTB-28M-R	-	x
HTB-4	HTB-42I-R	HTB-44I-R	HTB-46I-R	HTB-48I-R	x	-
	HTB-42M-R	HTB-44M-R	HTB-46M-R	HTB-48M-R	-	x
HTB-6	HTB-62I-R	HTB-64I-R	HTB-66I-R	HTB-68I-R	x	-
	HTB-62M-R	HTB-64M-R	HTB-66M-R	HTB-68M-R	-	x
HTB-8	HTB-82I-R	HTB-84I-R	HTB-86I-R	HTB-88I-R	x	-
	HTB-82M-R	HTB-84M-R	HTB-86M-R	HTB-88M-R	-	x

Screwdriver type	Solder or 3/16" Quick-connect		1/4" Quick-connect		Carrier options- Screwdriver type	
	In-line	Right-angle	In-line	Right-angle	1/4" x 1-1/4"	5 mm x 20 mm
HTB-3	HTB-32I-R	HTB-34I-R	HTB-36I-R	HTB-38I-R	x	-
	HTB-32M-R	HTB-34M-R	HTB-36M-R	HTB-38M-R	-	x
HTB-5	HTB-52I-R	HTB-54I-R	HTB-56I-R	HTB-58I-R	x	-
	HTB-52M-R	HTB-54M-R	HTB-56M-R	HTB-58M-R	-	x
HTB-9	HTB-92I-R	HTB-94I-R	HTB-96I-R	HTB-98I-R	x	-
	HTB-92M-R	HTB-94M-R	HTB-96M-R	HTB-98M-R	-	x


Knob



Screwdriver

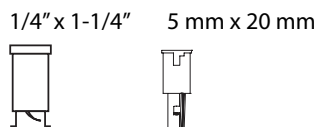

Replacement parts

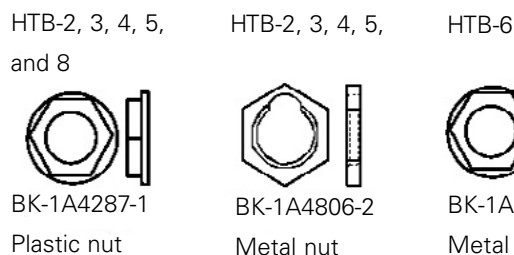

Life Support Policy: Eaton does not authorize the use of any of its products for use in life support devices or systems without the express written approval of an officer of the Company. Life support systems are devices which support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.

Eaton reserves the right, without notice, to change design or construction of any products and to discontinue or limit distribution of any products. Eaton also reserves the right to change or update, without notice, any technical information contained in this bulletin.

Eaton
Electronics Division
1000 Eaton Boulevard
Cleveland, OH 44122
United States
Eaton.com/electronics

© 2020 Eaton
All Rights Reserved
Printed in USA
Publication No. 2119
December 2020

Eaton is a registered trademark.

All other trademarks are property of their respective owners.

Follow us on social media to get the latest product and support information.



Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Eaton:

[BK/HTB-34I](#) [BK/HTB-34M](#) [BK/HTB-38I](#) [BK/HTB-38M](#) [BK/HTB-36M](#) [BK/HTB-36I](#) [BK/HTB-32M](#) [BK/HTB-32I](#)
[BK/HTB-26M](#) [BK/HTB-26I](#) [BK/HTB-22M](#) [BK/HTB-22I](#) [BK/HTB-28I](#) [BK/HTB-28M](#) [BK/HTB-24I](#) [BK/HTB-24M](#)
[BK/HTB-58I](#) [BK/HTB-58M](#) [BK/HTB-54I](#) [BK/HTB-54M](#) [BK/HTB-52I](#) [BK/HTB-52M](#) [BK/HTB-56I](#) [BK/HTB-56M](#)
[BK/HTB-96M](#) [BK/HTB-96I](#) [BK/HTB-92I](#) [BK/HTB-92M](#) [BK/HTB-98I](#) [BK/HTB-98M](#) [BK/HTB-94I](#) [BK/HTB-94M](#)
[BK/HTB-24](#) [BK/HTB-28](#) [BK/HTB-26](#) [BK/HTB-22](#) [BK/HTB-88I](#) [BK/HTB-88M](#) [BK/HTB-84I](#) [BK/HTB-84M](#) [BK/HTB-82M](#)
[BK/HTB-82I](#) [BK/HTB-86M](#) [BK/HTB-86I](#) [BK/HTB-42M-SP](#) [BK/HTB-24I-SP](#) [BK/HTB-42I-SP](#) [BK/HTB-44M-SP](#)
[BK/HTB-22M-SP](#) [BK/HTB-44I-SP](#) [BK/HTB-62M-SP](#) [BK/HTB-48I-SP](#) [BK/HTB-26M-SP](#) [BK/HTB-26I-SP](#) [BK/HTB-46I-](#)
[SP](#) [BK/HTB-66M-SP](#) [BK/HTB-62I-SP](#) [BK/HTB-28I-SP](#) [BK/HTB-22I-SP](#) [BK/HTB-46M-SP](#) [BK/HTB-36M-R](#) [BK/HTB-](#)
[64I-R](#) [BK/HTB-34M-R](#) [BK/HTB-52I-R](#) [BK/HTB-52M-R](#) [BK/HTB-54I-R](#) [BK/HTB-54M-R](#) [BK/HTB-56I-R](#) [BK/HTB-56M-](#)
[R](#) [BK/HTB-48I-R](#) [BK/HTB-62M-R](#) [BK/HTB-46I-R](#) [BK/HTB-64M-R](#) [BK/HTB-66I-R](#) [BK/HTB-82I-R](#) [BK/HTB-86I-R](#)
[BK/HTB-86M-R](#) [BK/HTB-88I-R](#) [BK/HTB-88M-R](#) [BK/HTB-62I-R](#) [BK/HTB-34I-R](#) [BK/HTB-22M-R](#) [BK/HTB-24I-R](#)
[BK/HTB-24M-R](#) [BK/HTB-26I-R](#) [BK/HTB-26M-R](#) [BK/HTB-28I-R](#) [BK/HTB-28M-R](#) [BK/HTB-48M-R](#) [BK/HTB-32M-R](#)
[BK/HTB-22I-R](#) [BK/HTB-36I-R](#) [BK/HTB-38I-R](#) [BK/HTB-42I-R](#) [BK/HTB-44I-R](#) [BK/HTB-44M-R](#) [BK/HTB-32I-R](#) [HTB-](#)
[92I-R](#) [HTB-38M-R](#) [HTB-46M-R](#)