



1. Filling with MATOFULL Fillerpump.

Replace the stud by the filler nipple supplied with filler pump. Place this filler nipple onto the pump adaptor and operate pump until piston rod is fully out and resistance is felt.

2. Filling with cartridges (400g)

Unscrew grease gun head, pull piston rod out as far as possible insert cartridge into gun tube ensuring both ends are open.

3. Filling with putty-knife.

Unscrew grease gun head, pull piston rod out fill with small amounts of grease reciprocally avoiding any air bubbles until gun is filled.

4. BILK FILLING IS ALSO AVAILABLE.

5. Closing after filling

Screw on gun head release piston rod by pressing on locking lever and push it fully into the barrel.

Warning!

Improper use could result in serious injury.

Never point high pressure parts at anyone, check hoses for signs of wear , leaks or loose fittings and replace if necessary.

Only use original accessories and spares.