

Interior Temperature Hygrometer User Manual

1. Product performance:

- Environment comfort display: **COMFORT** (comfortable), **WET** (high humidity), **DRY** (do bath)
- Temperature measuring range: 0°C~50°C (32°F~120°F)
- Temperature measurement accuracy: ±1.0°C (1.8°F)
- Temperature display resolution: 0.1°C (0.1°F)
- Humidity measuring range: 10% RH~90% RH
- Humidity measuring accuracy: ±5% (40% RH~80% RH) other ±8%
- Battery: AAA 1.5V
- Time/temperature/humidity display
- °C/°F temperature units the way self-locking switch show
- Highest/lowest temperature and humidity memory function
- Calendar shows that the whole point timekeeping, daily alarm functions, 12/24 hour clock

2. Feature set

2-1 The basic function keys


- **[MODE]** clock/alarm function mode switching
- **[ADJ]** settings adjust the value of projects/On, Off alarm clock/display date
- **[MEMO]** showed that the maximum memory, the most low-temperature, humidity values, and clear the memory of temperature and humidity values
- **[°C/°F]** self-locking switch means temperature display unit
- **[RESET]** to clear all settings and memory data back system the initial status

2-2 Clock and date settings

- Press **[MODE]** key to set the replacement of items: Minutes → CLOCK → 12/24Time → Month Date → Exit → Set.
Press **[ADJ]** key to add one item, hold down the **[ADJ]** 2 second after 8Hz Express since increasing minute second set automatically cleared, set the month, when the day's largest auto-adjust the number of days, 1 minute without keys automatically exit.
- Detail: According to **[MODE]** 2 second to enter the clock setting mode, minutes begin blinking, press **[ADJ]** regulation minutes. Then **[MODE]** click, clock start blinking, press **[ADJ]** regulator clock.
- Then **[MODE]** click conversion 12/24 hours, according to **[ADJ]** regulation. Then **[MODE]** about the month start flashing, press **[ADJ]** regulation.



- Then **[MODE]** about the date of start blinking, press **[ADJ]** regulation. Then click the **[MODE]** to confirm and exit mode.

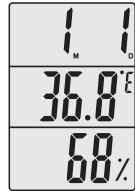

2-3 Alarm clock settings

- Press **[ADJ]** key to set the replacement items:
Alarm Clock → The whole point timekeeping → Alarm clock, the whole point of time at the same time open → Alarm clock, the whole point timekeeping clearance simultaneously.
- Detailed Description: according to **[MODE]** click to display the alarm time, and then press and hold **[MODE]** 2 seconds, minutes start flashing in accordance with **[ADJ]** regulation minutes, and then **[MODE]** you start blinking clock according to **[ADJ]** regulator clock, row by **[MODE]** twice to confirm.
- Open and turn off the alarm:
Click the **[MODE]** key to display the alarm time, click the **[ADJ]** button of "↔" symbols, Then **[ADJ]** button click the "⚙" symbols, Then **[ADJ]** button click the "⚙↔" symbols, Two functions simultaneously express the opening of a row by the **[ADJ]** key to enable or turn off this feature, press **[MODE]** button to confirm exit.



2-4 Date of Show

- At the current status of the clock click **[ADJ]** automatically display the date, not three seconds after the exit button.

2-5 Maximum/minimum temperature and humidity values showed that

- According to **[MEMO]** showed that temperature and humidity memory Maximum (MAX)/minimum (MIN), Length by more than 2 seconds to clear memory of temperature and humidity values.

2-6 Environment comfort display

- Temperature at 20°C~26°C (68°F~78.8°F), relative humidity at 50% RH~70% RH show between "●COMFORT" comfort symbols.
- At any temperature, relative humidity above 70% RH show "●WET" sign high humidity.
- At any temperature, relative humidity below 50% RH show "●DRY" symbols do bath.

Note:

- Applicable environment: home, office and places of non-corrosive gas.
- Use the ambient temperature range: 0°C~50°C (32°F~120°F).

