




Portable Filtration System Replacement Elements

Stock Nos. 193-5531, 193-5547 and 193-5553

Figure 1.

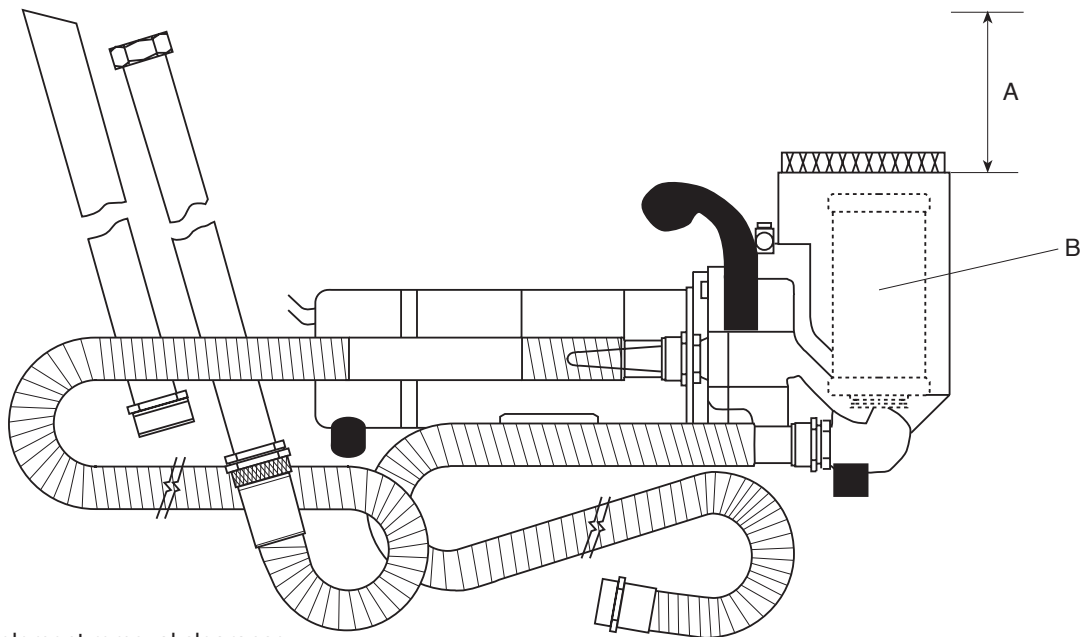

- A. 140 minimum element removal clearance
- B. Removable element

Element servicing

- A. Switch off the filter unit and isolate from the power supply.
- B. Rotate the element housing cover (1) anti-clockwise and remove.
- C. Remove the dirty/contaminated element from the housing and dispose of. (Elements are non-cleanable).
- D. Ensure the element housing (5) is clean.
- E. Place the new element (3) in the element housing (5) fitting the O-ring seal (4) into the lower location hole.
- F. Inspect the element housing cover O-ring (2) and replace if necessary.
- G. Replace the element housing cover and hand tighten.

Note: It is recommended the filter unit is cleaned and flushed between uses.

Figure 2.

