magnetic field sensor for pneumatic cylinders BIM-UNR-AP6X W/M



Туре	BIM-UNR-AP6X W/M
Ident-No	4685842
	1005012
Pass speed	≤ 3 m/s
Repeatability	≥ ± 0.1 mm
Temperature drift	≤ 0.1 mm
Hysteresis	≤ 1 mm
Repeatability	≥ ± 0.1 mm
Ambient temperature	-25+ 70 °C
Operating voltage	10 30 VDC
Residual ripple	$\leq 10 \% U_{ss}$
DC rated operational current	≤ 100 mA
No-load current I ₀	≤ 15 mA
Residual current	≤ 0.1 mA
Rated insulation voltage	≤ 0.5 kV
Short-circuit protection	yes / cyclic
Voltage drop at l _e	≤ 1.8 V
Wire breakage / Reverse polarity protection	yes / complete
Output function	3-wire, NO contact, PNP
Switching frequency	≤ 0.3kHz
Housing	rectangular, UNR
Dimensions	18 x 2.9 x 4.6 mm
Housing material	Plastic, PP
Material active face	Plastic, PP
Tightening torque fixing screw	0.2 Nm
Electrical connection	cables
Cable quality	Ø 2, grey, Lif9Y-11Y, PUR, 2 m
Cable cross section:	3 x 0.08mm ²
Litz wire	40 x 0.05mm ²
Vibration resistance	55 Hz (1 mm)

LED yellow cable clip

30g (11 ms)

IP67



- For C-groove cylinders without mounting accessories
- Optional accessories for mounting on other cylindrical housings.
- One-hand mounting possible
- Stable mounting
- Magneto-resistive sensor
- DC 3-wire, 10...30 VDC
- NO contact, PNP output
- Cable connection

Wiring diagram



Functional principle

Magnetic field sensors are activated by magnetic fields and are especially suited for piston position detection in pneumatic cylinders. Based on the fact that magnetic fields can permeate non-magnetizable metals, it is possible to detect a permanent magnet attached to the piston through the aluminium wall of the cylinder.

Shock resistance

Protection class

Switching state

Included in scope of supply

Mounting on the following profiles

magnetic field sensor for pneumatic cylinders BIM-UNR-AP6X W/M

TURCK WHS

Mounting instructions

mounting instructions





One-hand mounting of the sensor in the groove from the top. The sensor can be mounted as follows with the patented wing screw: The wing screws and the female thread feature a left-hand thread. Two small plastic lips keep the screw in position and guarantee a ready-to-install sensor on delivery. With clockwise rotation, the screw is removed from the thread and hits the upper grooves with the wings. As a consequence, the sensor is pressed down and is thus locked. A quarter turn of the screw with a standard screw driver or a 1.5 mm Allen key is enough for vibration resistant mounting. The allowed fixing torque of 0.2 Nm is sufficient for safe mounting without damaging the cylinder. Cable clips are included in the scope of delivery to enable smooth cable routing in the groove. Accessories for mounting on other cylindrical housings have to be ordered separately.