

# RS PRO 2D Area Image Barcode Scanner


## User's Manual

RS Stock No:234-3219



Scan to Check Scanner Version

### Appearance and function

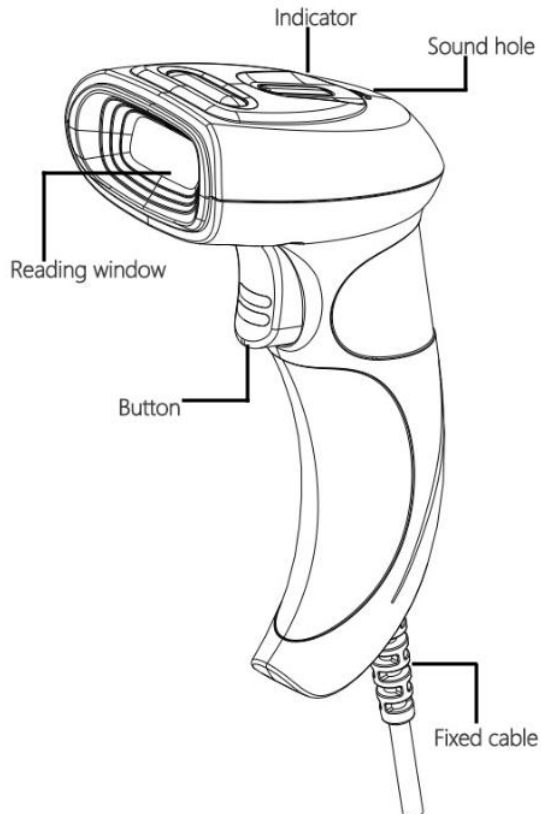

## Communication interface:

The communication interface of the reader is USB.

## Reading:


- 1、 To ensure that the reader has the right to connect the host
- 2、 Hold down the trigger button to activate the red line and the white light area. The lighting area is used to illuminate the barcode, the line of sight is used to locate, help you find the best reading distance. Keep red aiming line in the center of a bar code.
- 3、 On a successful reading, there'll be a beep sound, illumination & aiming patterns die out. The reader then transmits barcode message to the Host.

**NOTE: Experiences tell a certain range of distances has higher successful reading rate. This range is the Optimum Reading Stance.**

## Setting:

**Note:** The default settings of the factory have the \* sign

### Language keyboard Setting

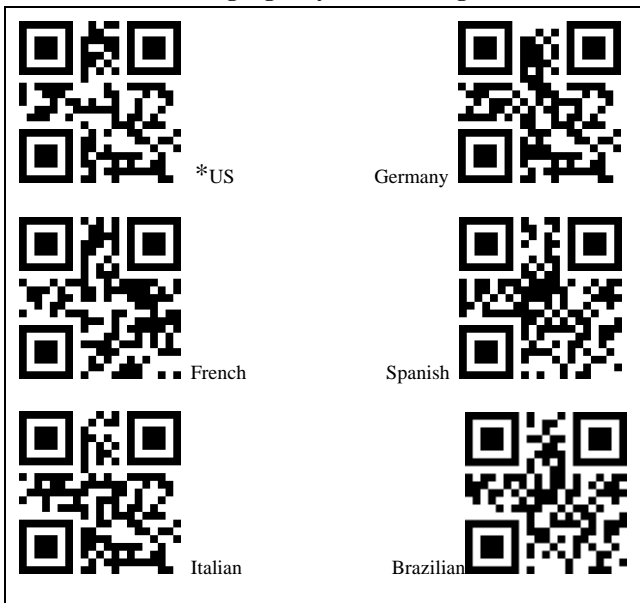

### Select Terminator



CR\*



None



TAB

### Reading Mode Selection



\*Trigger Mode



Continuous Mode



Auto Sensor Mode

**Standard Product Defaults. Use carefully:**



Please contact the seller for more functional settings

## Warranty Card

TEL: \_\_\_\_\_

ADDR: \_\_\_\_\_

Model: \_\_\_\_\_

Date: \_\_\_\_\_

Description: \_\_\_\_\_

Buy Place: \_\_\_\_\_

## Certificate

Name: \_\_\_\_\_

Model: \_\_\_\_\_

SN: \_\_\_\_\_

Inspector: \_\_\_\_\_

Date: \_\_\_\_\_



The product meets the requirements of the quality standard and the industry standard, and the product is qualified.