

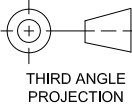
NOTES:

1. OPERATION

1. GENTLY LIFT LATCH AT SIDE OF CONNECTOR.
2. SWING COVER OFF OF CONTACTS.
3. SLIDE THE FLEX TAPE INTO THE CONNECTOR PLACING THE EDGE OF THE FLEX TAPE UNDER 2 HOLD DOWN TABS. MAKE SURE THE POLARITY IS MATCHED BETWEEN THE FLEX TAPE AND THE CONNECTOR COVER.
4. FOLD OVER THE COVER AND PRESS IN PLACE UNTIL THE LATCH IS FULLY ENGAGED.

2. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.

JKL PART NO.: ZFS-CH138-8J

		METRIC  THIRD ANGLE PROJECTION		DIMENSIONS ARE IN mm (INCHES) TOLERANCE UNLESS OTHERWISE SPECIFIED 1 PL +/- REF. 2 PL +/- REF. ANGLE +/-		JKL COMPONENTS CORPORATION					
RELEASE & CANCEL PL-1301-02		3/5/13		DRAWN BY L. WENGSTROM		APP'D BY L.R.		DATE 3/5/13		TITLE NO SOLDER 8mm FLEX TAPE JOINER CONNECTOR	
				- CAD DRAWING - MANUAL REVISIONS NOT PERMITTED		SIZE A		FSCM NO. 55335		DRAWING NO. ZFS-CH138-8J	
REV. NO.	DESCRIPTION/ECO NUMBER	APPVD DATE			SCALE	RELEASED DATE	REVISION DATE	REV. NO.	SHEET 1 OF 1		
					NONE	3/5/13					

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[JKL Components:](#)

[ZFS-CH138-8J](#)