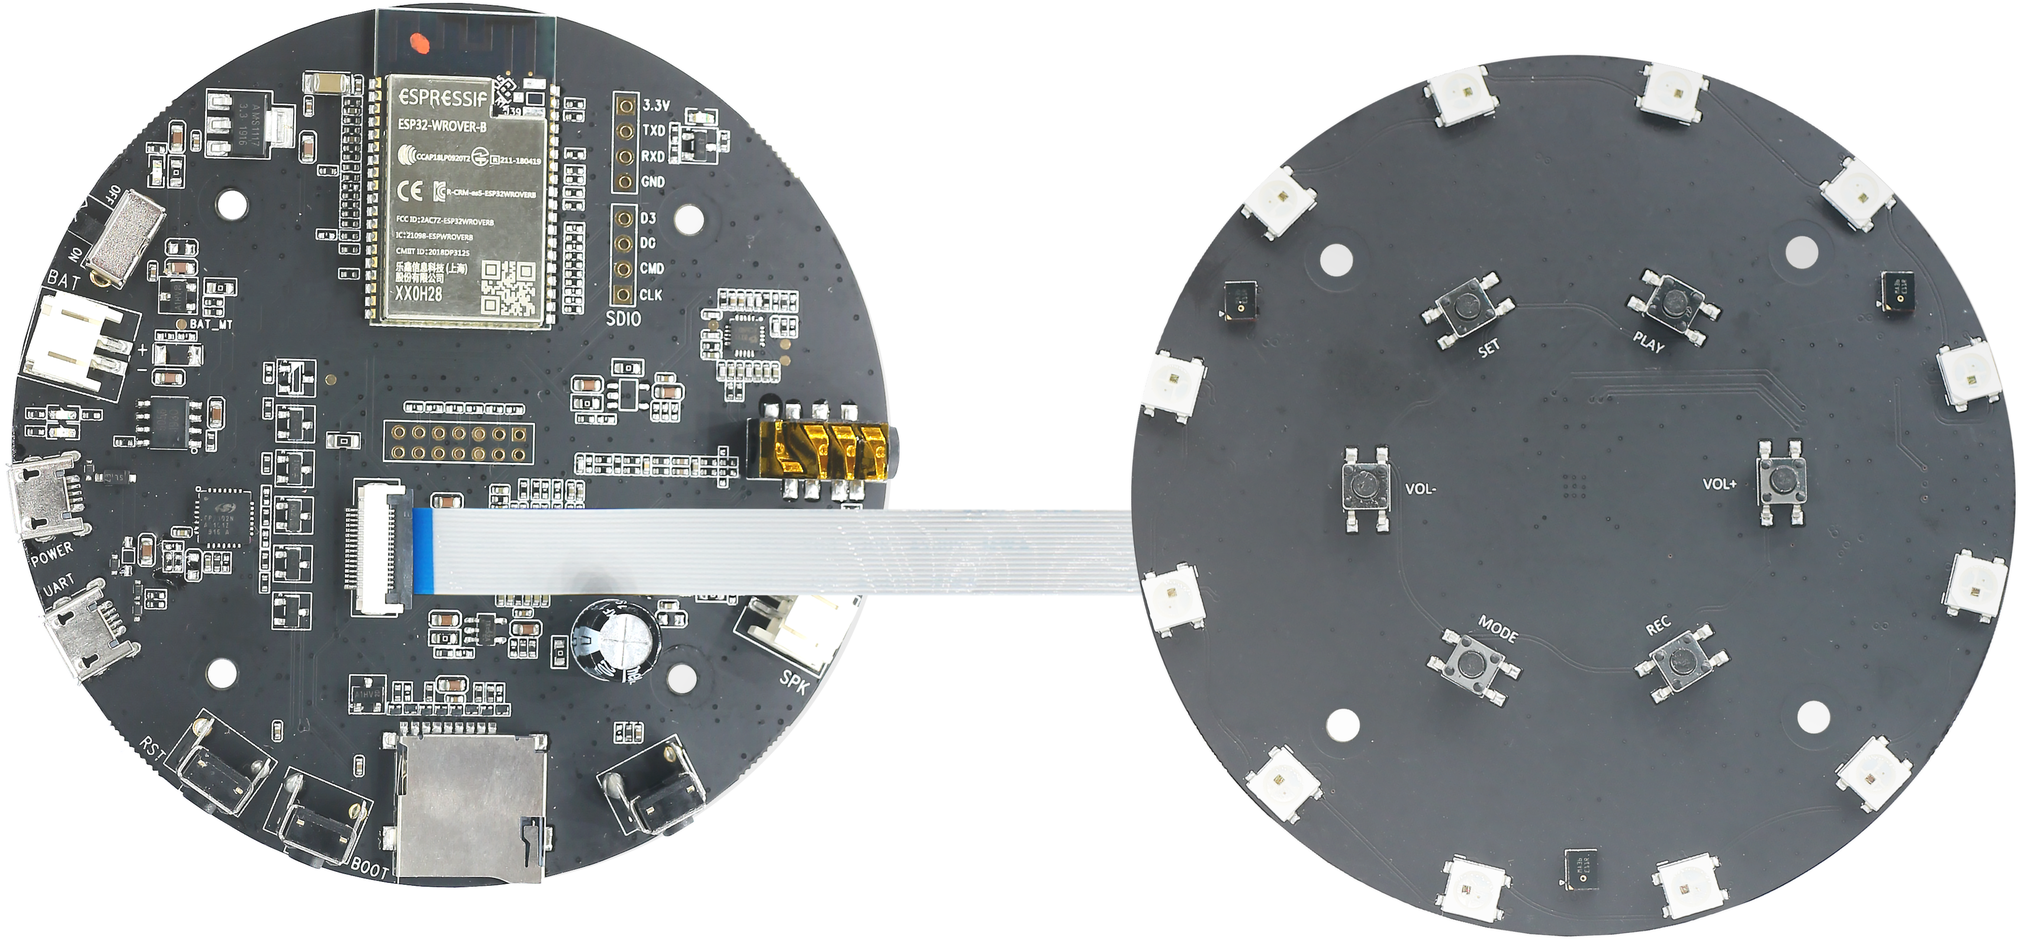
ESPRESSIF
ESP32-WROVER-B
XX0H28
3.3V
TXD
RXD
GND
D3
DC
CMD
CLK
SDIO
OFF
ON
BAT
BAT_MT
POWER
UART
RST
BOOT
SPK
SET
PLAY
VOL-
VOL+
MODE
REC