


M6x0,5 / M8x1

KM 6 / *KM 8




Locknut
BV 8

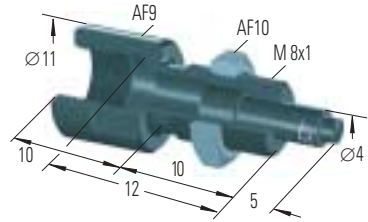


Side Load Adaptor
for MC 10-880

AH 6 / *AH 8

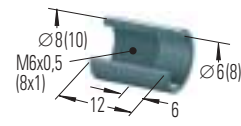


Stop Collar

PB 8

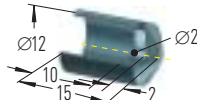


Steel Shroud

MB 6 / *MB 8

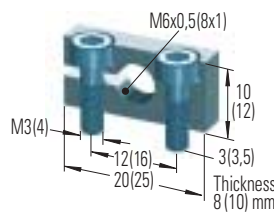

Clamp Mount

RF 6 / *RF 8

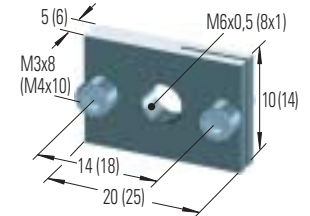

Rectangular Flange

Accessories, mounting, installation... see pages 31 to 32.

* for M8x1 Dimensions in ()


M10x1

KM 10




Locknut

AH 10

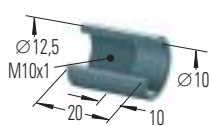


Stop Collar

PS 10

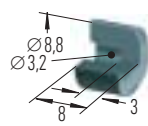


Steel Button
(for switch)

MB 10

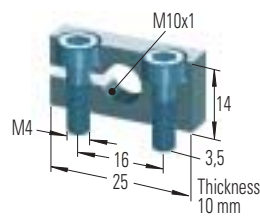


Clamp Mount
not for MC 25 and SC² 25

RF 10

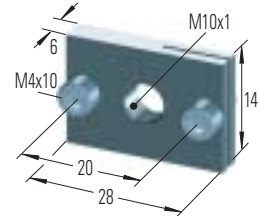


Rectangular Flange

UM 10

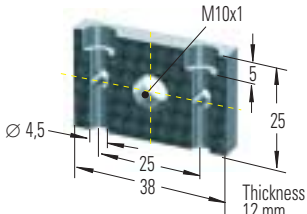


Universal Mount

BV 10

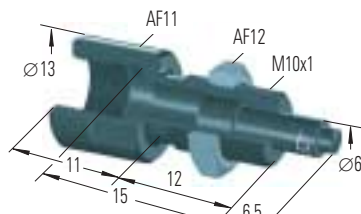


Side Load Adaptor
for MC 25-880

PB 10

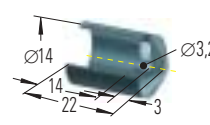

Steel Shroud

AS 10

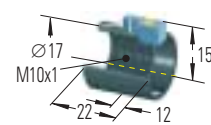

Switch Stop Collar
inc. Proximity Switch

Accessories, mounting, installation... see pages 31 to 32.


M12x1

KM 12




Locknut

AH 12

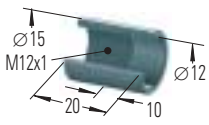


Stop Collar

PS 12

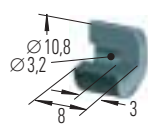


Steel Button
(for switch)

MB 12

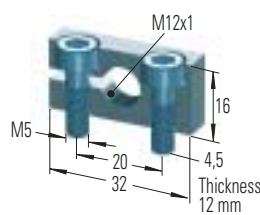


Clamp Mount
not for SC² 75

RF 12

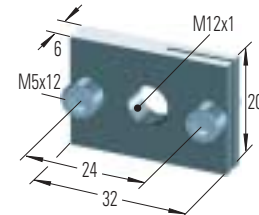


Rectangular Flange

UM 12

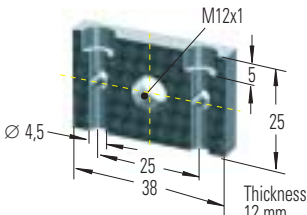


Universal Mount

BV 12

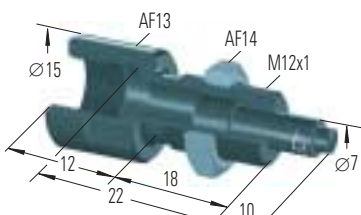


Side Load Adaptor
for MC 75-880

PB 12

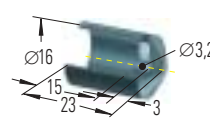

Steel Shroud

AS 12

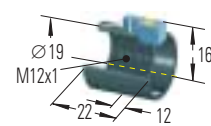

Switch Stop Collar
inc. Proximity Switch

Accessories, mounting, installation... see pages 31 to 32.


M14x1,5

KM 14




Locknut

AH 14

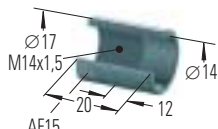


Stop Collar

PS 14
****PS 14 A**

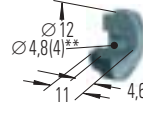


Steel Button
for MC 150 M and MA 150 M
**PS 14 A for SC 190 M

MB 14

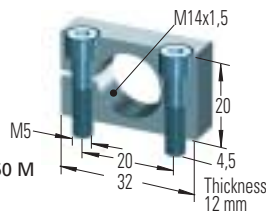


Clamp Mount
not for SC² 190

RF 14

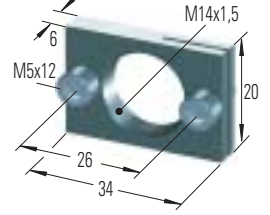


Rectangular Flange

UM 14

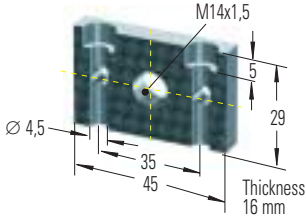


Universal Mount

PP 150

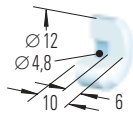


Nylon Button
for MC 150 M
and MA 150 M

BV 14

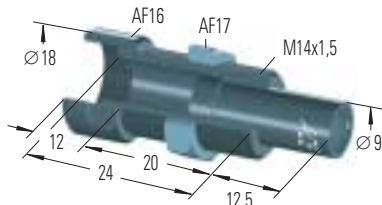


Side Load Adaptor
for MC 150 M and MA 150 M

BV 14 SC

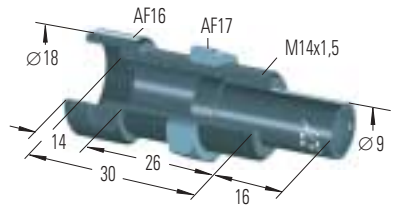


Side Load Adaptor
for SC 190 M-880

SP 14

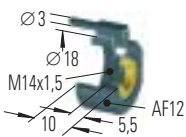


Air Bleed Collar
for MC 150 M

PB 14

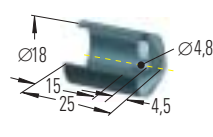


Steel Shroud
PB 14 for MA 150 M, MC 150 M

PB 14 SC

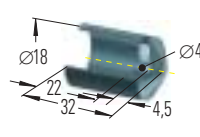

Steel Shroud
PB 14 SC for SC 190 M

AS 14

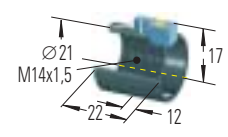

Switch Stop Collar
inc. Proximity Switch

Accessories, mounting, installation... see pages 31 and 32.


M20x1,5

KM 20




Locknut

AH 20

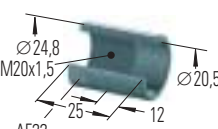


Stop Collar

PS 20

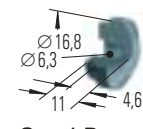


Steel Button
for MC 225 M, PS 20 A for
MA/MVC 225 M and
SC 300 M

MB 20

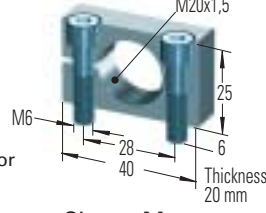


Clamp Mount
not for SC² 300

RF 20

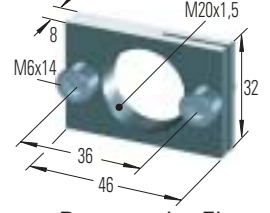


Rectangular Flange

UM 20

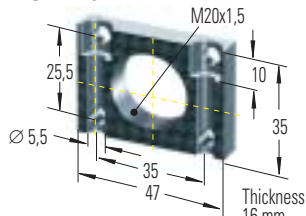


Universal Mount

PP 225

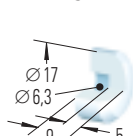


Nylon Button
for MC 225 M

BV 20

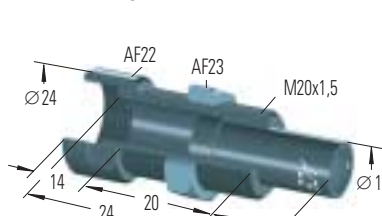


Side Load Adaptor
for MC 225 M

BV 20 SC
****BV 20 SC²**

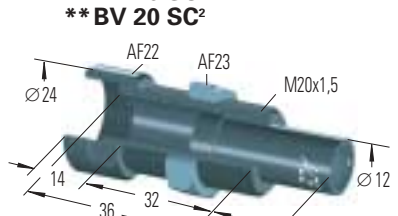


Side Load Adaptor
for SC 300 M 0-4-880 and MA/
MVC 225 M-880 **for SC 300 M 5-9-880

SP 20

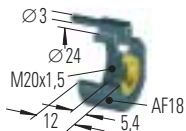


Air Bleed Collar
for MC 225 M

PB 20

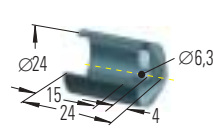

Steel Shroud
PB 20 for MC 225 M

PB 20 SC

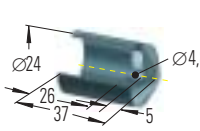

Steel Shroud
PB 20 SC for SC 300 M and
MA/MVC 225 M

AS 20



Switch Stop Collar
inc. Proximity Switch

Accessories, mounting, installation... see pages 31 to 32.

M25x1,5


30

KM 25




Locknut

AH 25

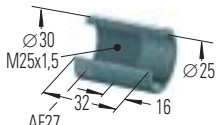


Stop Collar

PS 25

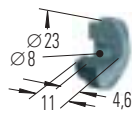


Steel Button
PS 25 for MC 600 M
PS 25 A for MA/MVC 600 M,
MA/MVC 900 M and
SC 650/925 M

MB 25

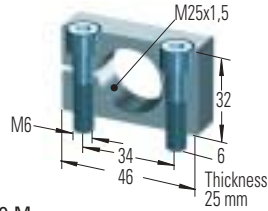


Clamp Mount
not for SC² 650

RF 25

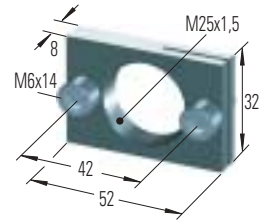


Rectangular Flange

UM 25

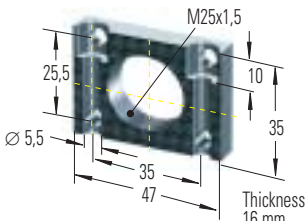


Universal Mount

PP 600

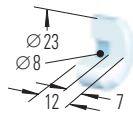


Nylon Button
for MC 600 M

BV 25

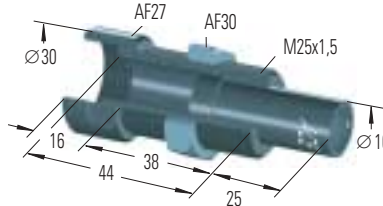


Side Load Adaptor
for MC 600 M

**BV 25 SC
** BV 25 SC²**

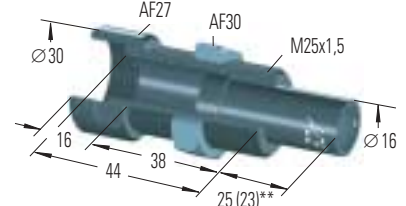


Side Load Adaptor
for SC 650 M 0-4-880 and MA/
MVC 600 M-880 ** for SC 650 M 5-9

SP 25

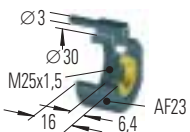


Air Bleed Collar
for MC 600 M

PB 25

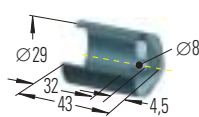


Steel Shroud
PB 25 for MC 600 M

PB 25 SC

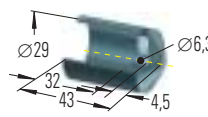


Steel Shroud
PB 25 SC for SC 650 M
and MA/MVC 600 M

AS 25

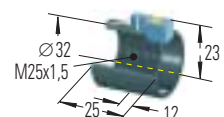


Switch Stop Collar
inc. Proximity Switch

CR 25

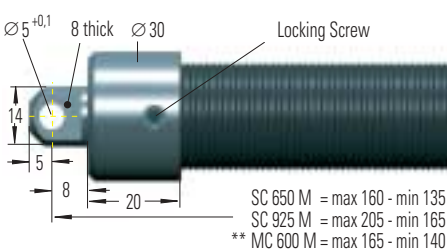

Rear Clevis
for SC 650 M, SC 925 M and MC 600 M

**CF 25
** CFC 25**

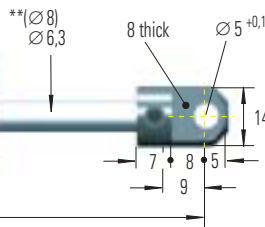

Front Clevis
CF 25 for SC 650 M and SC 925 M
**CFC 25 for MC 600 M

CRA 25



Rear Clevis
for MA/MVC 600 M and MA/MVC 900 M

CF 25

Front Clevis
for MA 600 M and MA 900 M



Installation:

1. Warm standard button and remove from shock absorber.
2. Mount CF 25 and lock in place.
3. Thread on CR or CRA to body and adjust centre to centre length.
4. Lock CR or CRA in place.
5. Mechanical stops must be fitted at both ends of travel. (approx. 0.5 to 1 mm before end of stroke).

Accessories, mounting, installation... see pages 31 to 32.