




GSM2 click™



1. Introduction

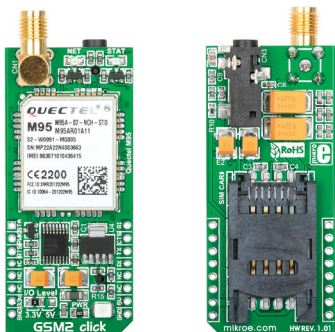


GSM2 Click™ is an accessory board in **mikroBUS™** form factor. It's a compact and easy solution for adding GSM module to your design. It features **Quectel M95** GSM module, audio connector, SIM card socket as well as SMA antenna connector. GSM2 Click™ communicates with target board microcontroller via **mikroBUS™** UART (Tx, Rx), PWM, INT, AN, RST and CS lines. The board is designed to use 3.3V and 5V I/O voltage levels. LED diode (GREEN) indicates the presence of power supply.

2. Soldering the headers


Before using your click board™, make sure to solder 1x8 male headers to both left and right side of the board. Two 1x8 male headers are included with the board in the package.

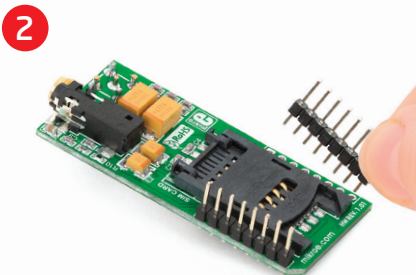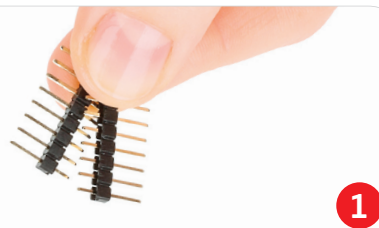

Turn the board upside down so that bottom side is facing you upwards. Place shorter parts of the header pins in both soldering pad locations.

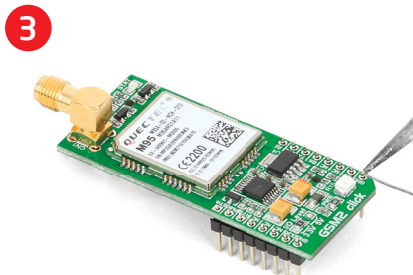


Turn the board upward again. Make sure to align the headers so that they are perpendicular to the board, then solder the pins carefully.

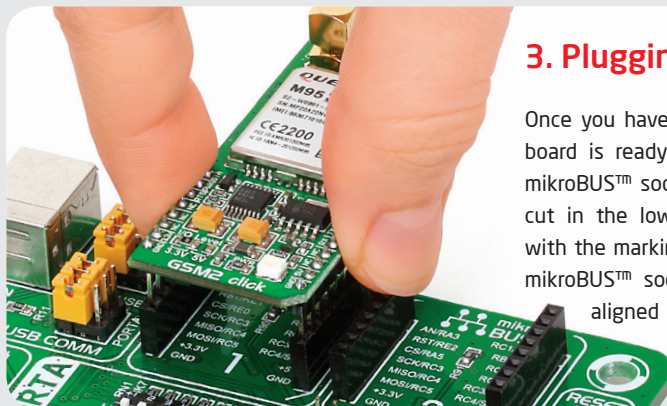

3. Plugging the board in

Once you have soldered the headers your board is ready to be placed into desired mikroBUS™ socket. Make sure to align the cut in the lower-right part of the board with the markings on the silkscreen at the mikroBUS™ socket. If all of the pins are aligned correctly, push the board all the way into the socket.

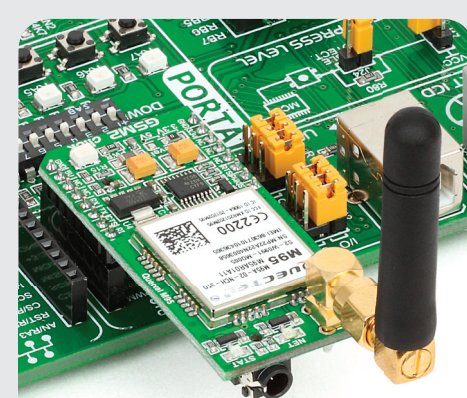

4. Essential features



GSM2 Click™ with its **Quectel M95** IC is ideal for mobile devices. The **Quectel M95** is a quad-band GSM/GPRS engine that works at frequencies of GSM850MHz, GSM900MHz, DCS1800MHz or PCS1900MHz with 85.6 kbps GPRS data transfer. It supports internet service protocols, such as TCP/IP, UDP, FTP and PPP.

click™
BOARD
www.mikroe.com

GSM2 click Manual
ver. 1.01



5. GSM2 Click™ Board Schematic

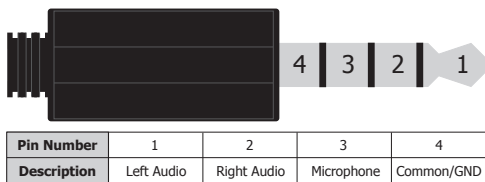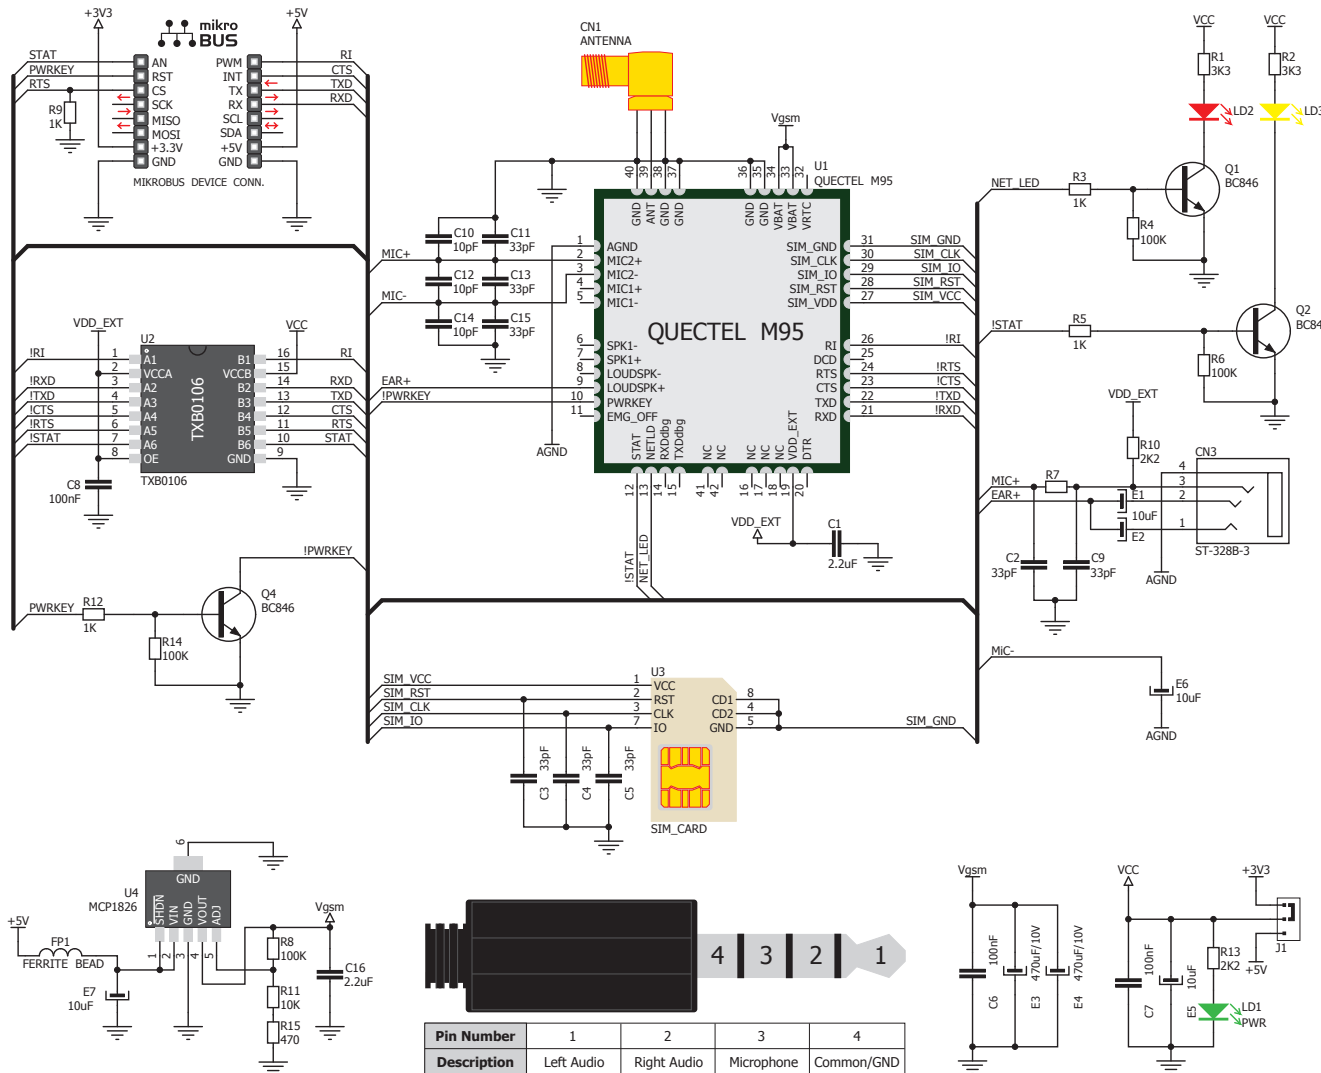

6. SMD Jumpers



There is one zero-ohm SMD jumper **J1** used to select whether 3.3V or 5V I/O voltage level is used. Jumper **J1** is soldered in 3.3V position by default.

7. Code Examples

Once you have done all the necessary preparations, it's time to get your click board up and running. We have provided the examples for mikroC, mikroBasic and mikroPascal compilers on our **Libstock** website. Just download them and you are ready to start.



8. Support

MikroElektronika offers **Free Tech Support** (www.mikroe.com/esupport) until the end of product lifetime, so if something goes wrong, we are ready and willing to help!

