

# ANT-DB1-LCD-ccc

## Data Sheet



### Product Description

The Linx LCD Dipole Antenna is a superior solution for users searching for best-in-class performance for WLAN devices using Dual-Band WiFi (802.11ac, 802.11n, 802.11ax) or U-NII applications.

With a compact package and low price, the LCD's high peak gain and superior efficiency make it an excellent option for high volume, cost sensitive applications.

Dipole design means that no additional ground plane is required.

### Features

- Excellent performance
- Dual-band
- Very low VSWR
- Omni-directional pattern
- Tilt and swivel base
- Standard SMA or Part 15 compliant RP-SMA connector



### Ordering Information

- ANT-DB1-LCD-RPS (with RP-SMA connector)
- ANT-DB1-LCD-SMA (with SMA connector)

Electrical Specifications			
Parameter	2.4GHz WIFI	U-NII	5.8GHz WIFI/ U-NII-3 Band
Recommended Frequency Range	2.4 – 2.5GHz	5.125 – 5.725GHz	5.725 – 5.875GHz
VSWR	<2:1	<2:1	<2:1
Peak Gain (max in the band)	2.8dBi	4.5dBi	2.92dBi
Average Gain (typical)	-0.6dBi	-1.5dBi	-2.2dBi
Efficiency (typical)	85%	70%	65%
Polarization	Linear		
Radiation	Omni-Directional		
Max Power	10W		
Wavelength	1/2-wave		
Impedance	50-ohms		
Connection	SMA Plug (Male) or RPS (Reverse Polarity Male)		
Weight	7.4g (0.26oz.)		
Operating Temperature Range	-40°C to +80°C		

Measurements taken on a 100 x 100mm ground plane, mounted on the edge, bent 90°.

## Product Dimensions



## Dipole antennas, ground planes and additional orientations

Since it is not always possible to provide an adequate ground plane, dipole antennas like the LCD are designed with a built-in ground plane, so an external ground plane is not required for the antenna to radiate properly.

Linx knows how our customers most frequently use our antennas in their designs, typically mounted to enclosures, conductive or non-conductive, so we tested our LCD antenna in 2 different configurations: straight, without ground (free space), and edge of a ground plane bent at 90°.



Straight, without ground



Bent 90°, on edge of ground

Linx tested the LCD dipole antenna to ensure excellent radiation behavior and minimize the risk to the customer when implementing a new design, regardless of complexity.


Additionally, there are many other configurations with which our LCD antenna will have similar performance to the Bent 90°, on edge of ground, with minimal difference, as shown below.




## Antenna straight on non-conductive surface/ Free space




### VSWR

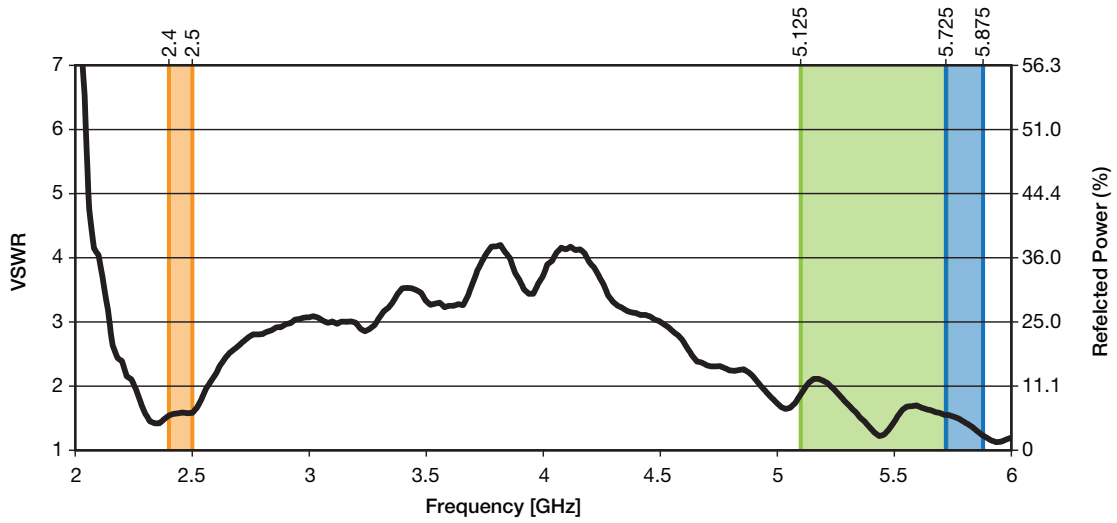


### Return Loss

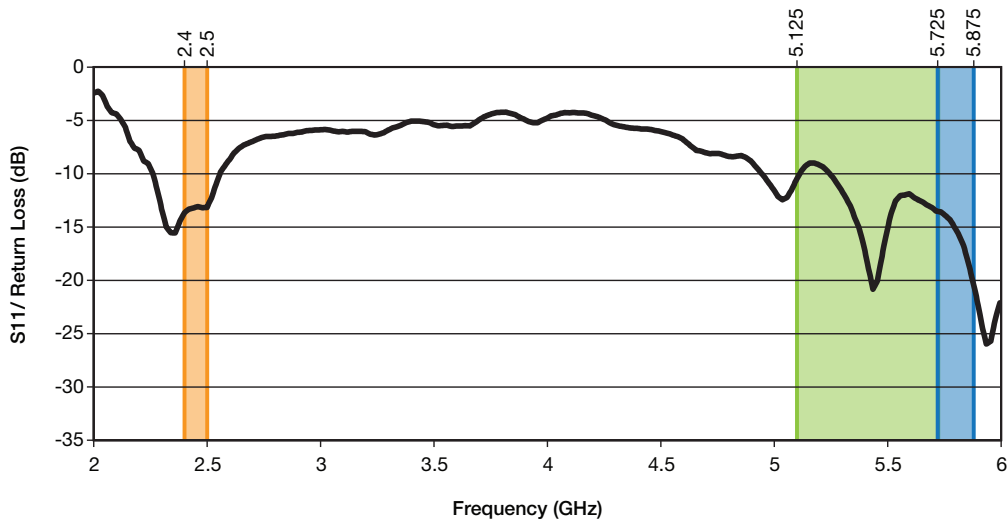


## Peak Gain

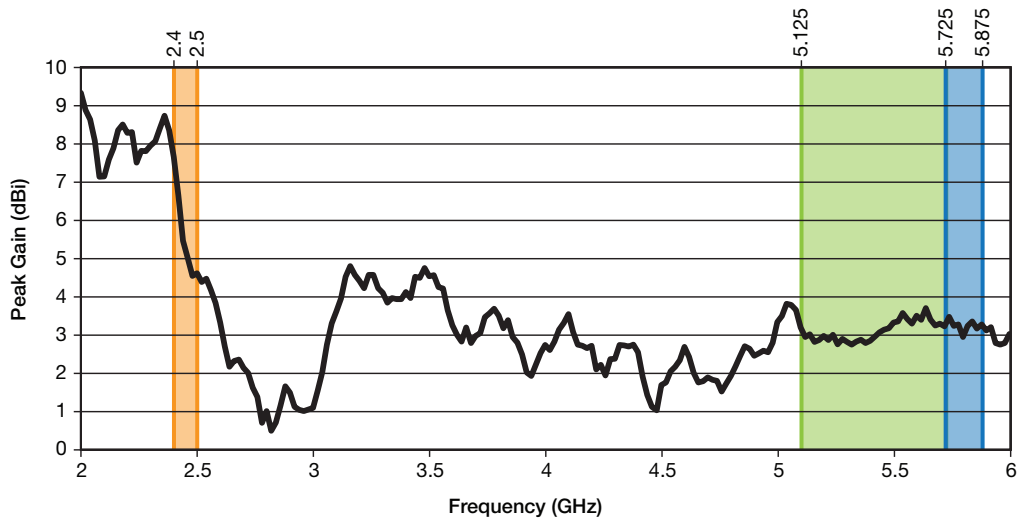

## Average Gain

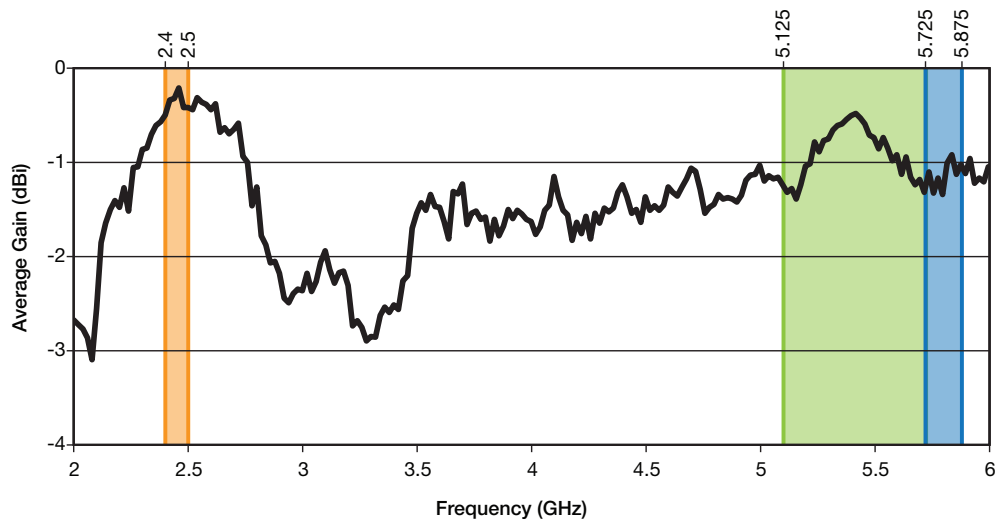

## Radiation Efficiency

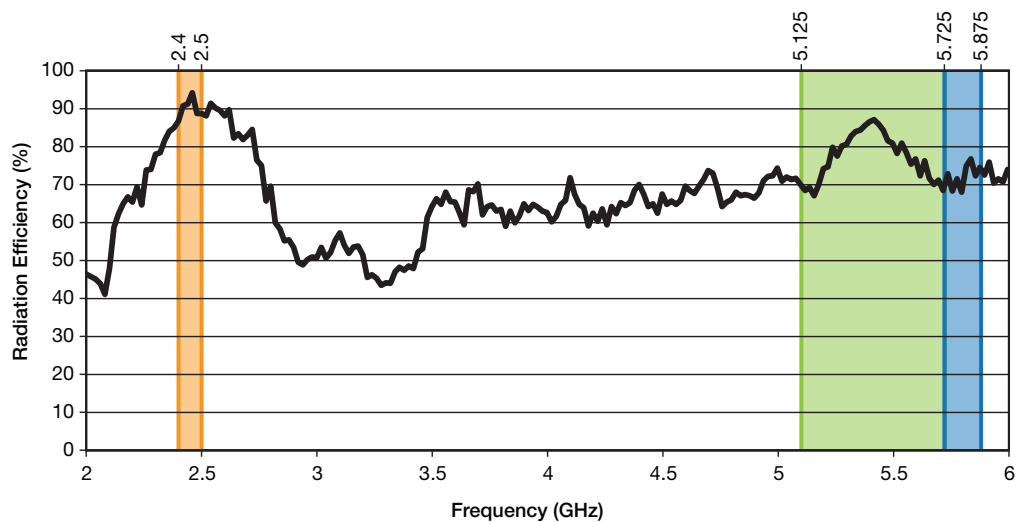

## Antenna straight on non-conductive surface/ Free space



XZ-Plane Gain




YZ-Plane Gain




XY-Plane Gain


### 2400 - 2500MHz

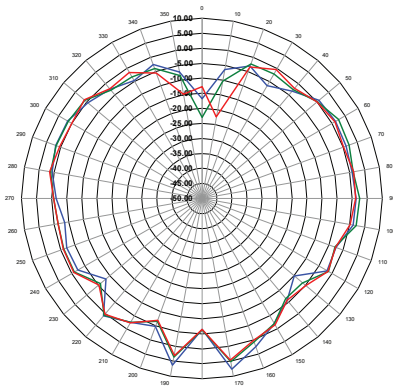


XZ-Plane Gain

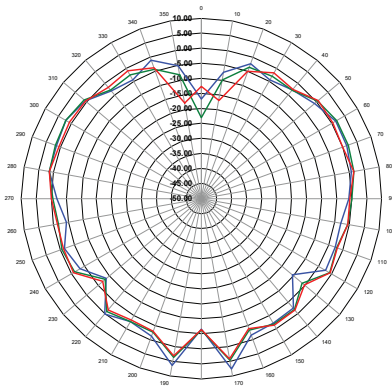


YZ-Plane Gain

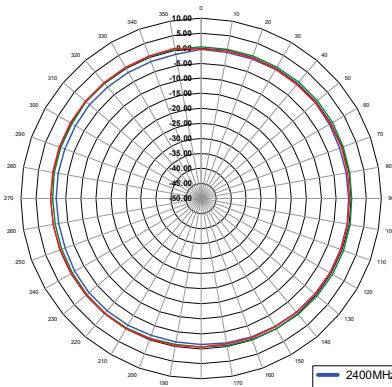


XY-Plane Gain




### 5720 - 5880MHz

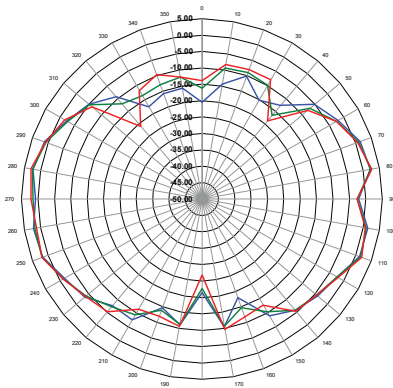


XZ-Plane Gain

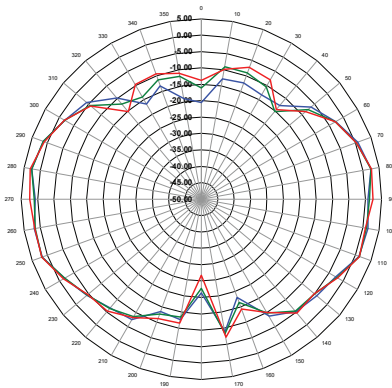

YZ-Plane Gain

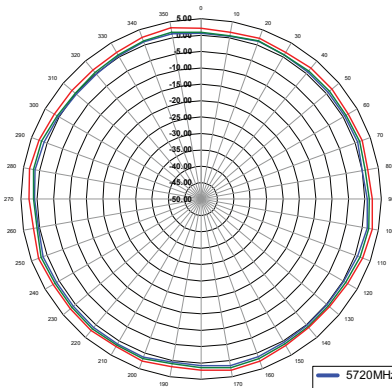


XY-Plane Gain




## Edge of the Ground Plane, Bent 90°




### VSWR

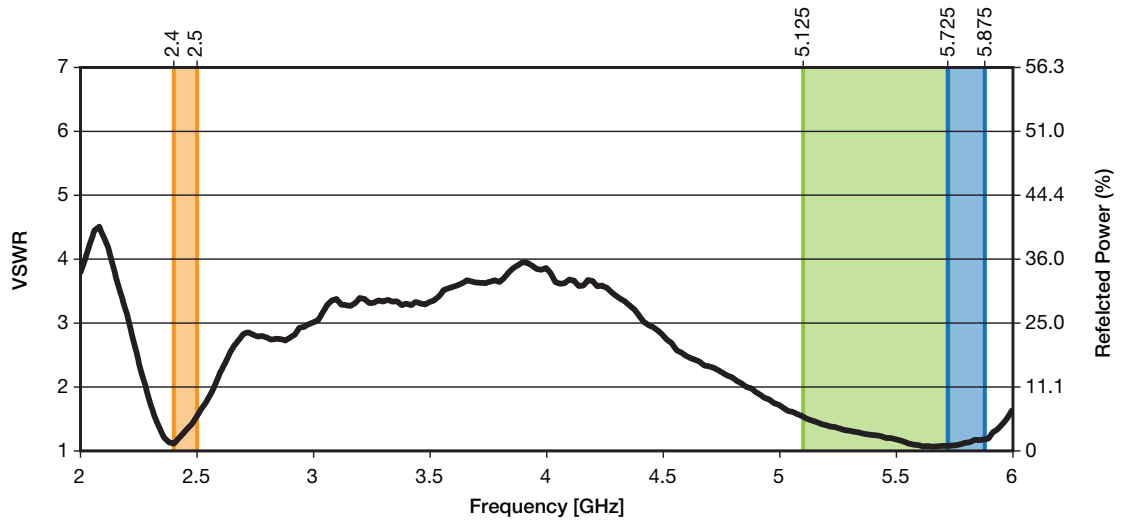


### Return Loss

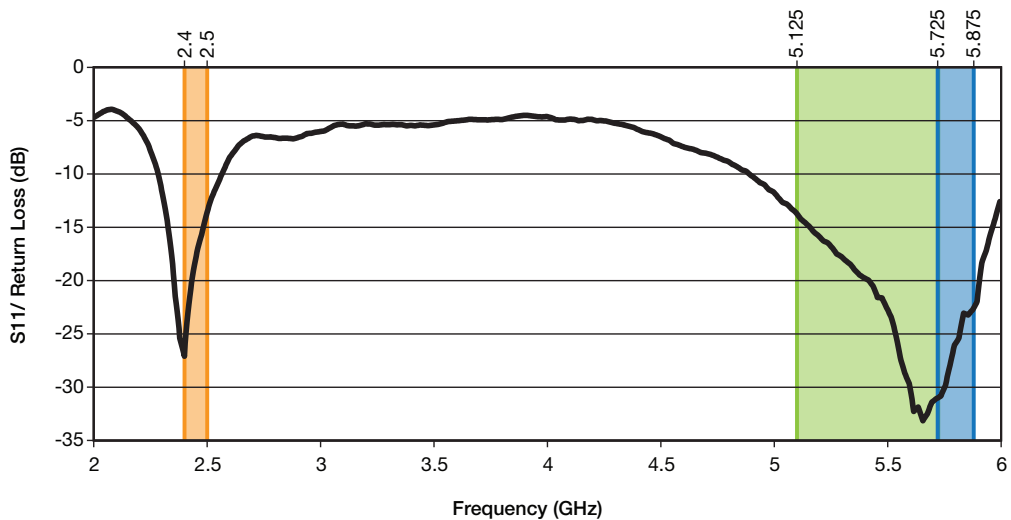


## Peak Gain

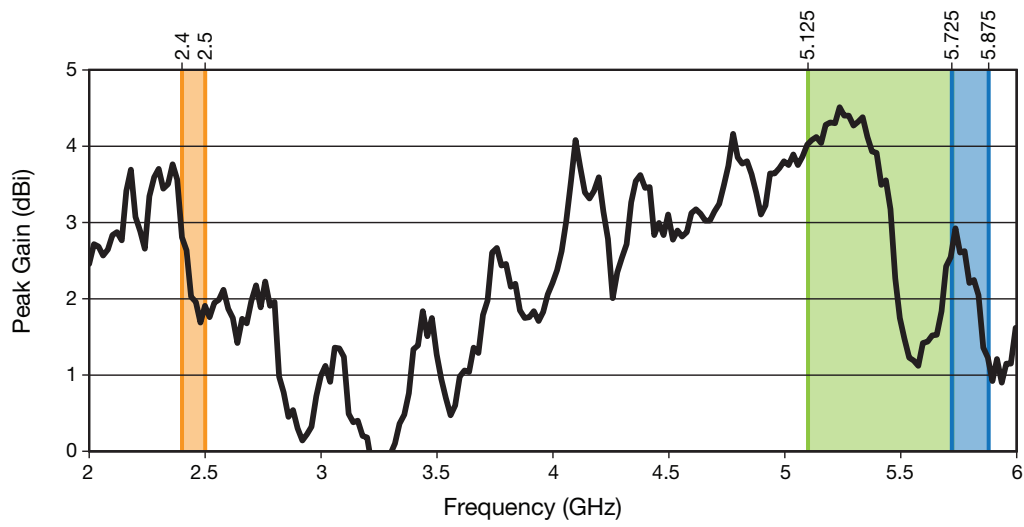

## Average Gain

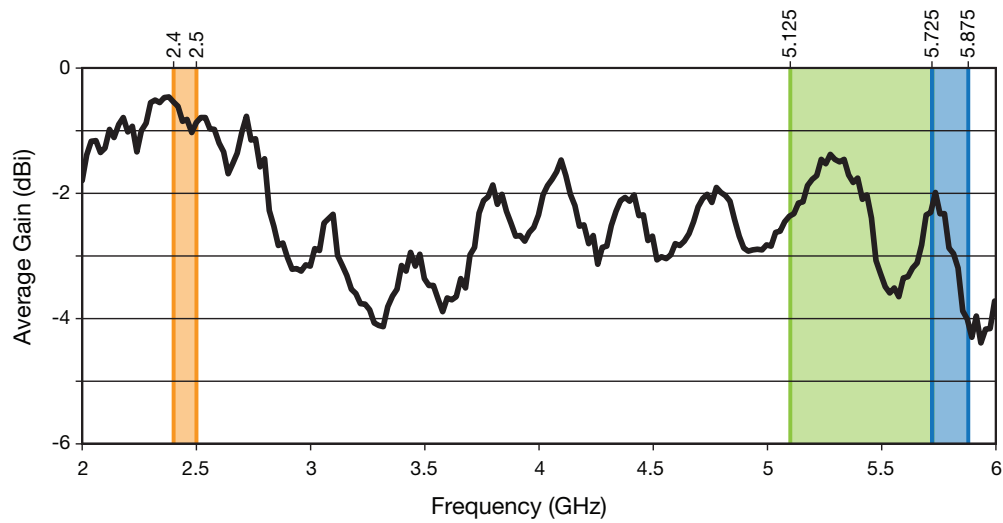

## Radiation Efficiency

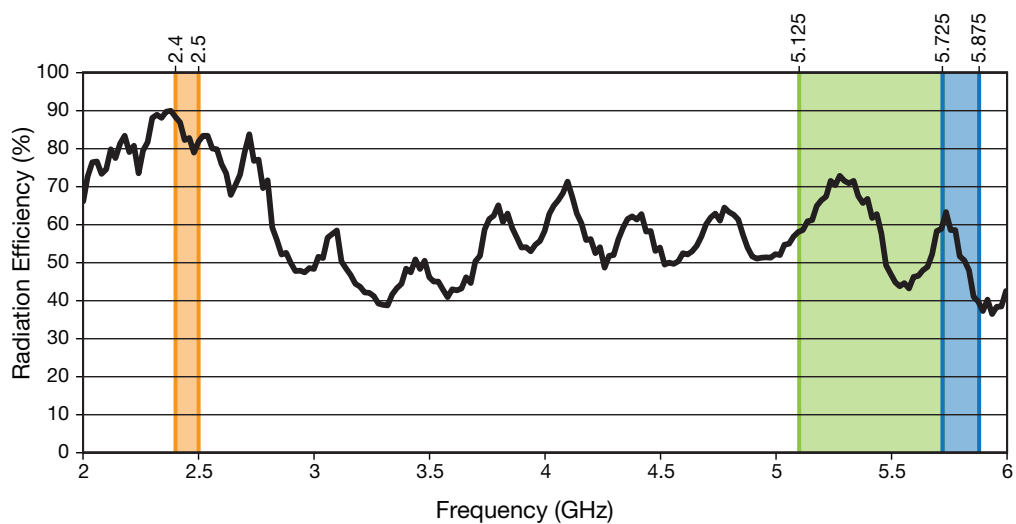



## Gain Plots - Edge of Plane, Bent 90°



XZ-Plane Gain




YZ-Plane Gain




XY-Plane Gain


### 2400 - 2500MHz

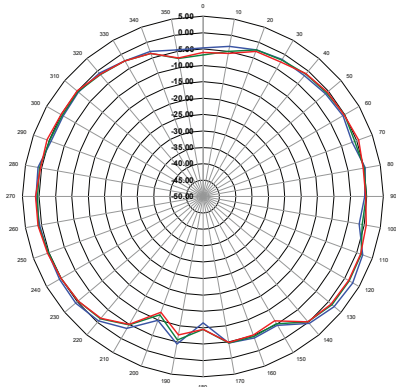

XZ-Plane Gain

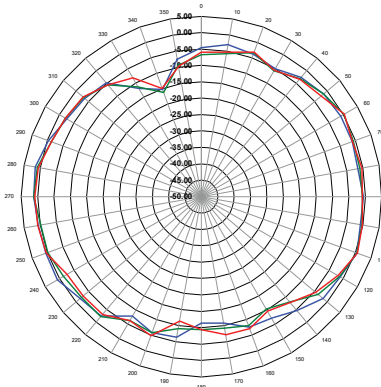


YZ-Plane Gain

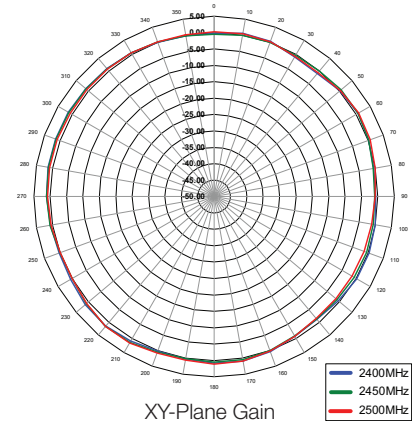


XY-Plane Gain




### 5720 - 5880MHz

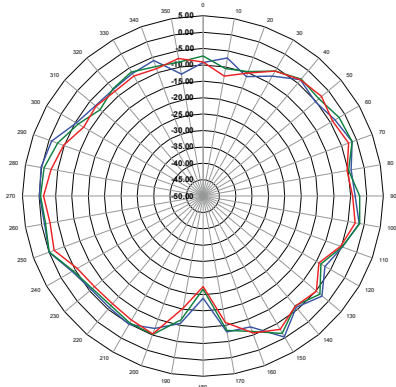

XZ-Plane Gain

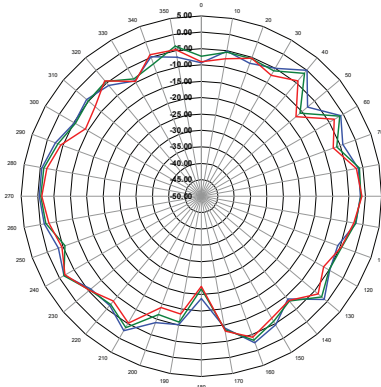

YZ-Plane Gain

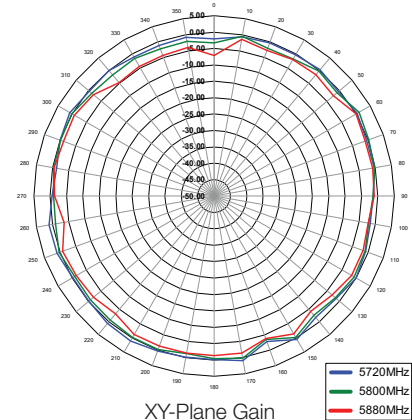

XY-Plane Gain



## Performance in the U-NII Band - Antenna straight on non-conductive surface/ Free space



XZ-Plane Gain




YZ-Plane Gain




XY-Plane Gain


### 5120 - 5720MHz

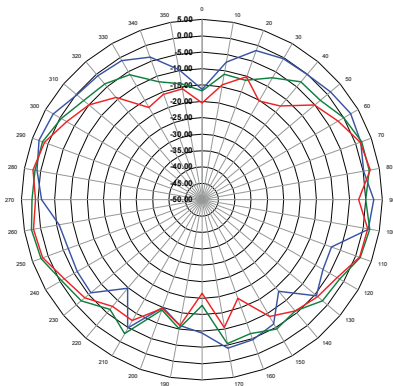

XZ-Plane Gain

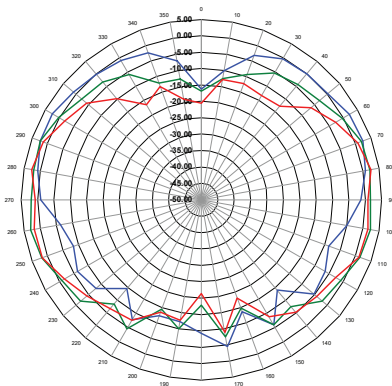


YZ-Plane Gain

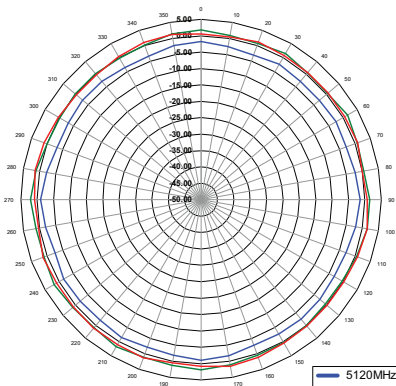

XY-Plane Gain



### VSWR

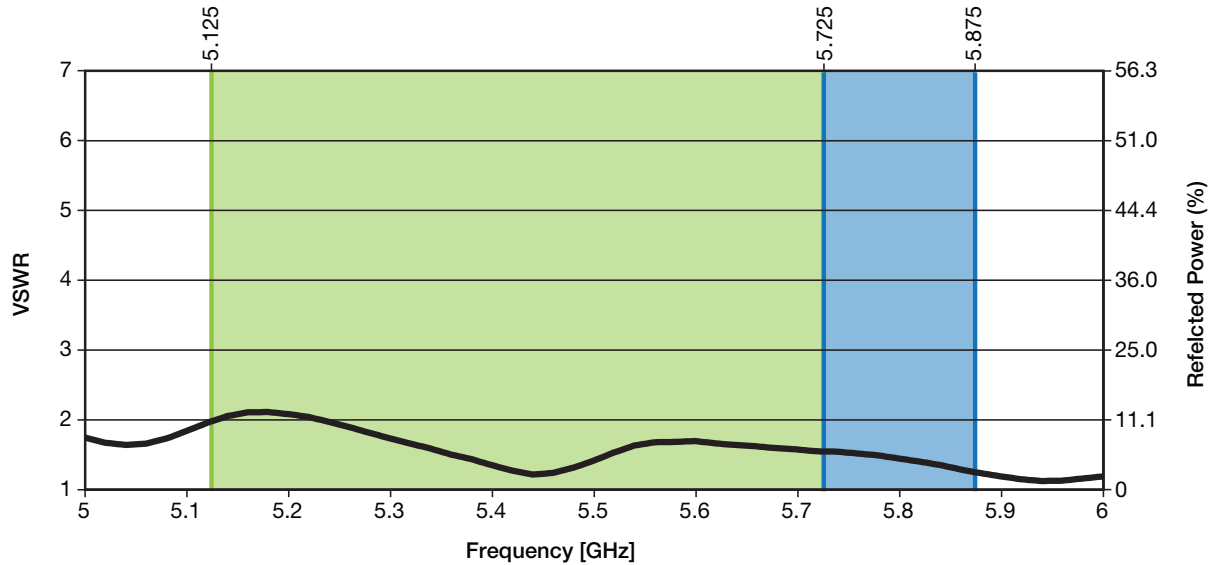

## Performance in the U-NII Band - Edge of the Ground Plane, Bent 90°



XZ-Plane Gain




YZ-Plane Gain




XY-Plane Gain


### 5120 - 5720MHz

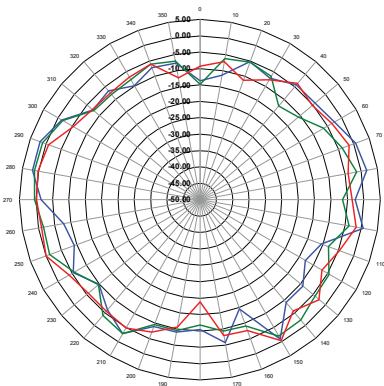

XZ-Plane Gain

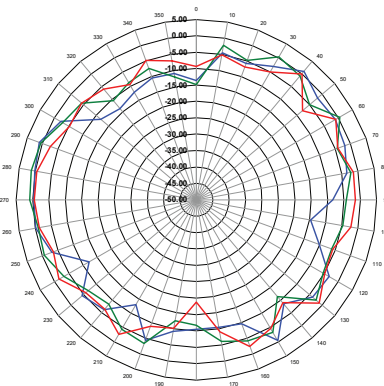


YZ-Plane Gain

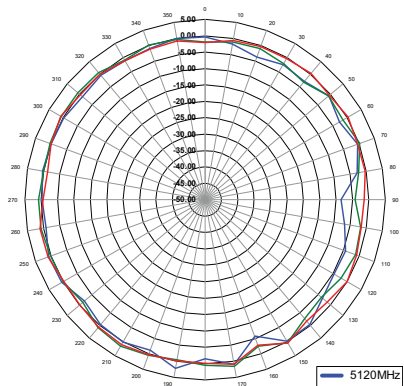

XY-Plane Gain



### VSWR

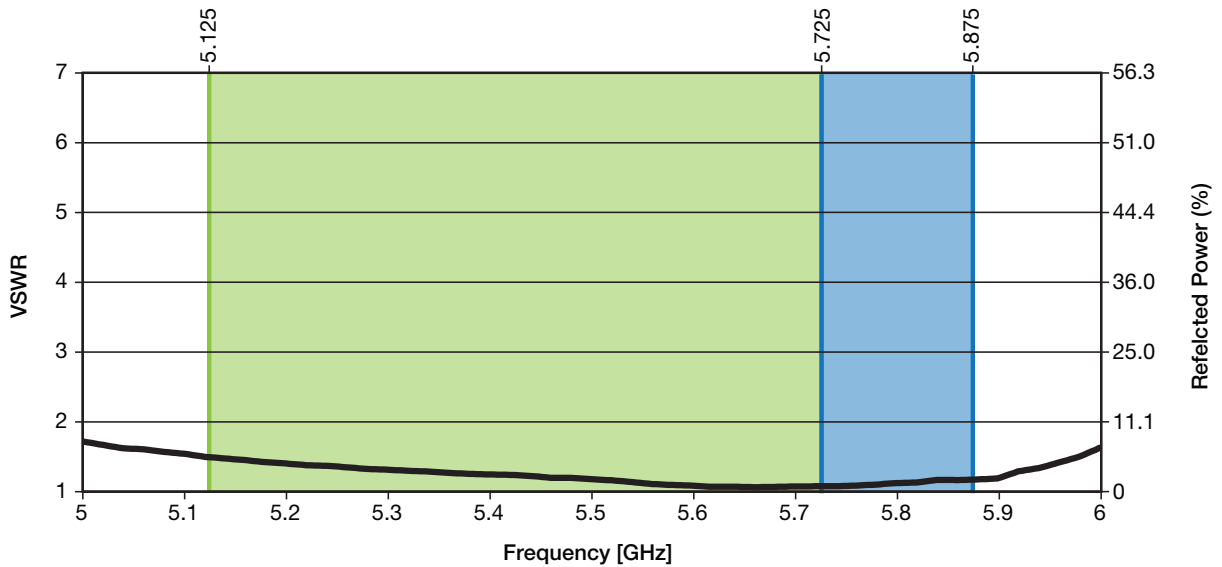


## Matching Network

Linx tests all our antennas in ideal scenarios where effects from conductive surfaces, non-conductive surfaces or human proximity issues are eliminated. As a designer, you do not have much control over the environment your product will be used in.

Linx has always worked closely with our customers, and we know what the primary concerns and pitfalls are for designers and how to prepare for them. Whether you are designing for a monopole or a dipole antenna, or an external or even an embedded surface mount antenna, the most common question is, “Why isn’t my design working?”, and frequently it turns out the design needed a matching network.

As your product design progresses, the chances for proximity effect increases as other components are added. Some components can act like ground planes, if they have large conductive surface areas, and can cause interference. This interference is called proximity effect, which can cause a downward shift in the center frequency of the circuit, depending on how strong the effects are. Proximity effect is commonly caused by components like pc boards, batteries, motors, sensors, actuators and even non-conductive enclosures like radomes. Interference can also occur from human proximity, like when using a hand-held mobile device.

Although our dipole antennas have been designed to minimize these effects, we strongly recommend the use of a matching network, so you can ensure that you retain optimum signal levels. A matching network is a circuit that balances the impedance and ensures there is minimum reflected energy coming back from the antenna. This enables the integrator to optimize the performance in a specific band or to level performance across all bands. The most common matching network design is called a Pi circuit, placed between the antenna and the radio; it is a simple circuit of two capacitors to ground on either side of a series inductor.

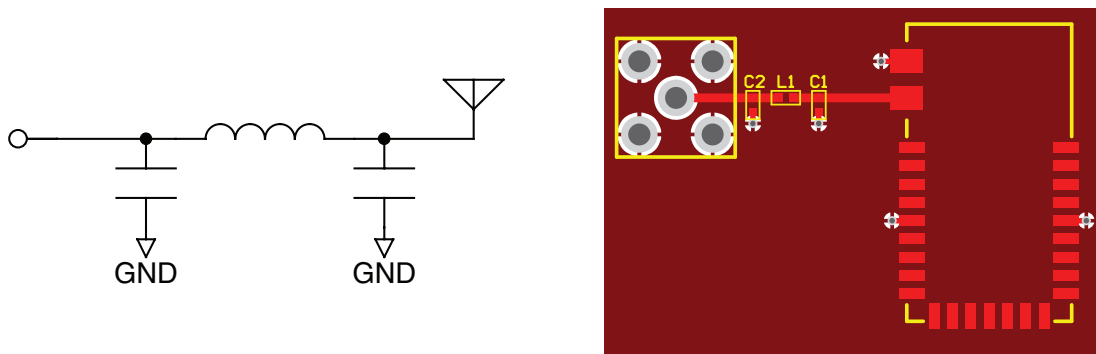

The values can be selected to electrically tune the antenna. It does take test equipment, such as a network analyzer, to get this right though. Often a design ends up having little or no proximity effect, eliminating the need to retune the matching section. In these cases, the matching section can have a zero ohm resistor in place of the Inductor, leaving the other two shunt components un-populated.

The values of the matching components are determined experimentally on the product’s board. Since there are many variables that play into the antenna’s final performance, it is very difficult to predict what it will do on any specific design. It is best to design in the matching network, see what the antenna does on the prototype and then dial the performance in with the network components. Not all of the components may be needed on a particular design, so they do not need to be populated in production; but it is a good idea to have the component pads on the board in case they are needed. The components should be placed close to the antenna connection. The component pads should be placed on the 50-ohm line between the radio and the antenna.


Linx Technologies offers a service to help customers tune our antennas to their circuit boards. Please contact Linx for more details.

## About Gain Plots

The true measure of the effectiveness of an antenna in any given application is determined by the gain and radiation pattern measurement. For antennas gain is typically measured relative to a perfect (isotropic) radiator having the same source power as the antenna under test, the units of gain in this case will be decibels isotropic (dBi). The radiation pattern is a graphical representation of signal strength measured at fixed distance from the antenna.

Gain when applied to antennas is a measure of how the antenna radiates and focuses energy into free space. Much like a flashlight focuses light from a bulb in a specific direction, antennas focus RF energy into specific directions. Gain in this sense refers to an increase in energy in one direction over others.

It should also be understood that gain is not “free”, gain above 0dBi in one direction means that there must be less gain in another direction. Pictorially this can be pictured as shown in the figures to the right. The orange pattern represents the radiation pattern for a perfect dipole antenna, which is shaped like a donut. The pattern for an omnidirectional antenna with gain is shown in blue. The gain antenna is able to work with a device located further from the center along the axis of the pattern, but not with devices closer to the center when they are off the axis – the donut has been squished.

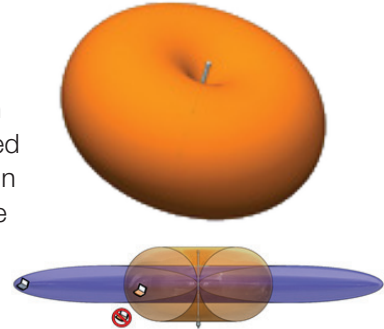

Gain is also related to the overall physical size of the antenna, as well as surrounding materials. As the geometry of the antenna is reduced below the effective wavelength (considered an electrically small antenna) the gain decreases. Also, the relative distance between an electrically small antenna and its associated ground impacts antenna gain.

## What is VSWR?

The Voltage Standing Wave Ratio (VSWR) is a measurement of how well an antenna is matched to a source impedance, typically 50-ohms. It is calculated by measuring the voltage wave that is headed toward the load versus the voltage wave that is reflected back from the load. A perfect match has a VSWR of 1:1. The higher the first number, the worse the match, and the more inefficient the system. Since a perfect match cannot ever be obtained, some benchmark for performance needs to be set. In the case of antenna VSWR, this is usually 2:1. At this point, 88.9% of the energy sent to the antenna by the transmitter is radiated into free space and 11.1% is either reflected back into the source or lost as heat on the structure of the antenna. In the other direction, 88.9% of the energy recovered by the antenna is transferred into the receiver. As a side note, since the “:1” is always implied, many data sheets will remove it and just display the first number.

## How to Read a VSWR Graph

VSWR is usually displayed graphically versus frequency. The lowest point on the graph is the antenna's operational center frequency. In most cases, this is different than the designed center frequency due to fabrication tolerances. The VSWR at that point denotes how close to 50-ohms the antenna gets. Linx specifies the recommended bandwidth as the range where the typical antenna VSWR is less than 2:1.