


FIGURE 1

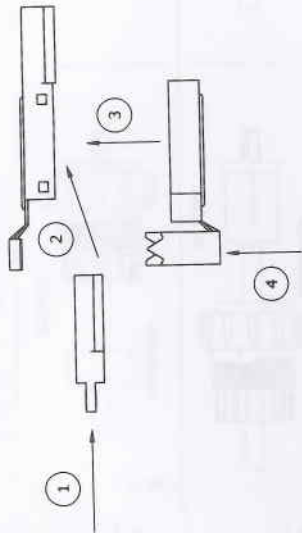

**HDMI PLUG ASSEMBLY INSTRUCTIONS**

1. SOLDER THE CABLE WIRES TO THE PCB BODY. SEE FIGURE 3 FOR RECOMMENDED CABLE STRIPPING DETAILS.
2. PLACE THE PCB BODY INTO THE FRONT SHELL AND PUSH FORWARD UNTIL IT SITS FIRMLY INTO THE FRONT SHELL.
3. SNAP THE BACK SHELL ONTO THE FRONT SHELL.
4. CRIMP THE BACK SHELL CLAMP AROUND THE CABLE JACKET.



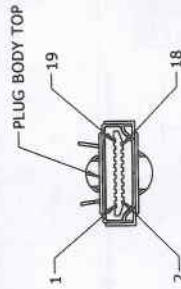


FIGURE 2

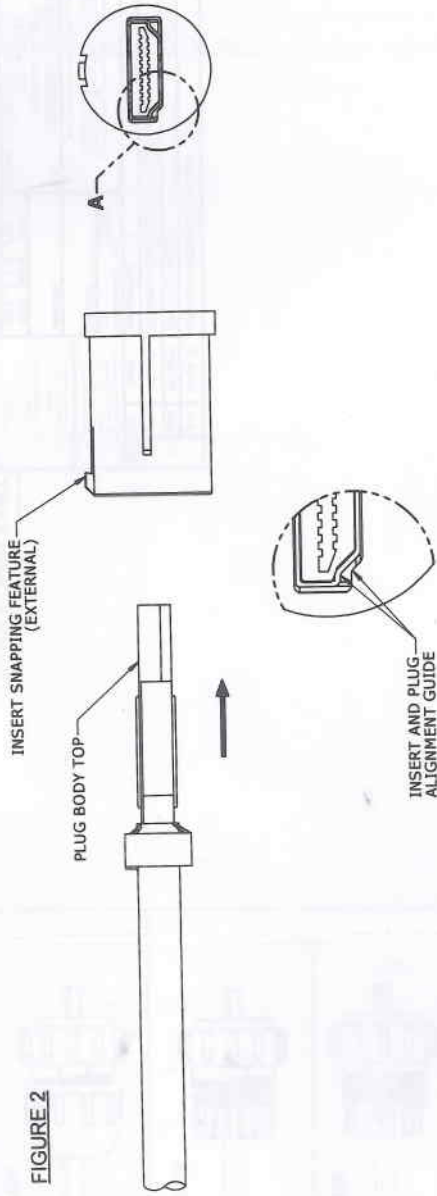

**DETAIL A**

FIGURE 3

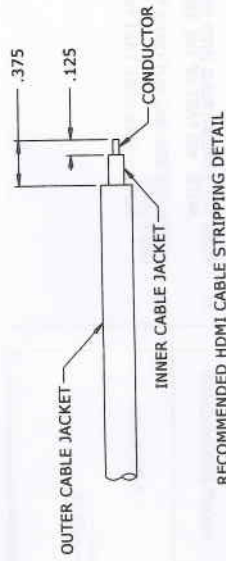

RECOMMENDED HDMI CABLE STRIPPING DETAIL

MA	01-29-18	DRAWING RELEASED PER PDR 12003	
JGK	10/31/15	UPDATED MODEL	
JGK	5/22/13	DRAWING CREATED PER PROJECT #12003	
REV	INIT	DATE	DESCRIPTION
	JGK		DESIGNED BY: JGK
			DESIGNED BY: JGK
			DATE: 5/22/13
			APPROVED BY:
			DATE:
			REV: 3 OF 3
			REVISIONS:
			FILE:
			DCC-HDMI SERIES
			SLW
			REV: A

**CONTEGAL**  
 8013 WALNUT HILL PARK, L. 08181  
**INDUSTRIAL HDMI PLUG**  
 FILE: DCC-HDMI  
 DAT: 14-CON-X  
 STANDARD PRODUCT  
 PART NUMBER: DCC-HDMI SERIES

**RoHS COMPLIANT**