JUUSUL

Digital Timer H5CX-

Ultra-compact Timer Provides Advanced Functions and Security Settings.

Basic Features

- Short body with depth of only 59 mm (for 24-VAC / 12 to 24-VDC Models with Screw Terminals). *
- Character height of 12 mm for better readability (on models with 4 digits).
- The present value display characters can be switched between red, green, and orange. *2

Safety and Reliability

- Power supply circuit and input circuits are isolated for safety and reliability. *3
- New set value limit and output counter functions have been added.

Other Features

- Front Panel can be changed to white or light gray. *4
- · Models with instantaneous contact output added to the series.
- For 100 to 240 VAC Models with Screw Terminals 78 mm, Models with Sockets: 63.7 mm *1. (case dimension). The H5CX-A11, H5CX-L8 and H5CX-B Timers have only red characters.
- Specifications: 100 to 240 VAC Replacement Front Panels sold separately

Features


Basic Features

Ultra Short Body

The body depth has been greatly reduced. Helps in making thinner control panels. (Models with Screw Terminals)

24-VAC / 12 to 24-VDC Models with Screw Terminals: 59 mm 100 to 240-VAC / VDC Models with Screw Terminals: 78 mm * Models with Sockets: 63.7 mm (case dimension)

- * The shortest body for a timer with isolated power supply and input circuits and a maximum ambient temperature of 55°C (according to OMRON investigation in June 2009).




Easier to Read

For better readability, the character height for the present value display is 12 mm (on models with 4 digits), the largest class in the industry. The wide viewing angle and brightness provide excellent visibility. The number of display segments has also been increased to make settings easier to understand, and the present value display can be switched between red, green and orange so that output status can be seen from a distance.

Model with 4 Digits Model with 6 Digits






(Display example)

Note: The H5CX-A11 and H5CX-L8 Timers have only red characters.

The Easiest Operation

Operation is simplified by the Up/Down Keys for each digit on 4-digit models and Up Keys for each digit on 6-digit models.






Refer to "Safety Precautions" on page 41.

Safety and Reliability

Isolated Power Supply and Input Circuits ^{*1}

Power supply circuit and input circuits are isolated for safety and reliability.

Previous non-isolated timers had wiring restrictions and could be damaged if wired incorrectly. The New H5CX removes these worries.

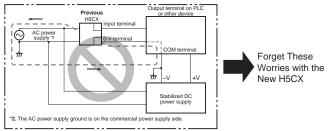

*1. New Models (H5CX--N) with 100 to 240-VAC specifications.

Set Value Limit

You can set an upper limit for the set value to prevent unexpected operation of output devices caused by setting mistakes.



Output Counter


The output counter counts the number of times the output turns ON (alarm display, count monitoring, count in increments of 1,000). This counter is useful in managing the service life of the Timer or the load.

OMRON

Other Features

Change the Front Panel Color

The Front Panel can be replaced with an optional Front Panel (order separately) with a different color to match the installation site. Select from black, white, and light gray.

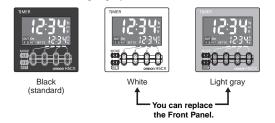

Models with Instantaneous Contact Output

Models with instantaneous contact outputs have been added to the lineup for use with self-holding circuits and as auxiliary relays. These models are also convenient when replacing analog timers.

Model Number Structure

Universal NPN/PNP Input

DC 2-wire sensors can be connected for a wide range of input devices.

Waterproof, Dust-proof Structure (UL508 Type 4X and IP66)


Worry-free application is possible in locations subject to water. **Note:** When the Y92S-29 Waterproof Packing is used.

Key Protection

Select from any of seven protection patterns. Use the best one for the application.

New Modes

Modes, such as a stopwatch mode (Mode S), have been added. Select any of 15 modes.

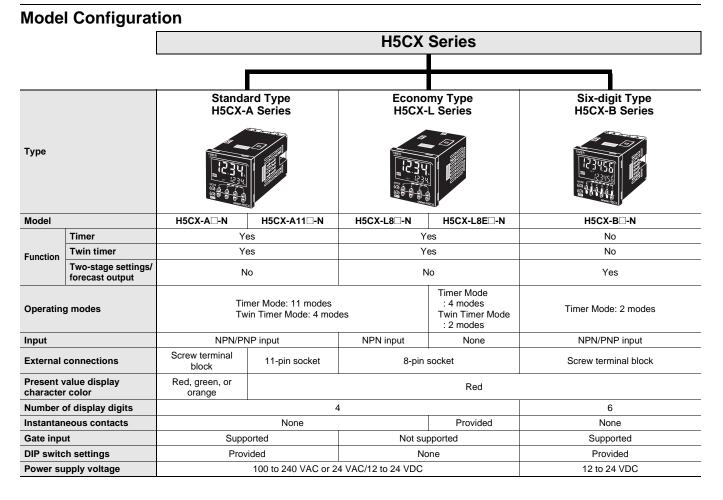

Model Number Legend (Not all possible combinations of functions are available.) H5CX-

$\frac{1}{1}$ $\frac{2}{2}$ $\frac{3}{3}$ $\frac{4}{4}$ $\frac{5}{5}$

1. Type Classifier

| Symbol | Meaning |
|--------|---------------|
| А | Standard type |
| В | 6-digit type |
| L | Economy type |

4. Output type

| Symbol | Meaning |
|--------|--|
| None | Contact output (time-limit SPDT) |
| Е | Contact output (time-limit SPDT + instantaneous SPDT) * |
| S | Transistor output |

* Can be used as a time-limit DPDT output.

Ordering Information

List of Models

2. External Connections

| Symbol | Meaning |
|--------|-----------------|
| None | Screw terminals |
| 8 | 8-pin socket |
| 11 | 11-pin socket |

3. Settings

| Symbol | Meaning |
|--------|------------|
| None | One stage |
| W | Two stages |

5. Supply voltage

| Symbol | Meaning | |
|--|--------------------------------|--|
| None | 100 to 240 VAC 50/60 Hz | |
| D | 12 to 24 VDC/24 VAC 50/60 Hz * | |
| * The H5CX-BWSD-N is available only for 12 to 24 VDC | | |

The H5CX-BWSD-N is available only for 12 to 24 VDC.

| Туре | Time specifications | Operating modes | External connections | Inputs | Outputs | Supply voltage | Models |
|--------|--|---|----------------------|---|---|-------------------------|--------------|
| | | | | Contact output | 100 to 240 VAC | H5CX-A-N | |
| | | Timer Mode A: Signal ON Delay I A-1: Signal ON Delay II A-2: Power ON Delay I A-3: Power ON Delay II | Screw terminals | | (time-limit SPDT) | 12 to 24 VDC/ 24 VAC | H5CX-AD-N |
| | | | Sciew terminals | | Transistor | 100 to 240 VAC | H5CX-AS-N |
| Н5СХ-А | | | | Signal, Reset, Gate (NPN/ | output (SPST) | 12 to 24 VDC/ 24 VAC | H5CX-ASD-N |
| | | b: Repeat cycle 1 | | PNP inputs) | Contact output | 100 to 240 VAC | H5CX-A11-N |
| | 0.001 to 9.999 s | b-1: Repeat cycle 2 d: Signal OFF Delay E: Interval F: Cumulative Z: ON/OFF-duty-adjustable flicker S: Stopwatch | 11-pin socket | | (time-limit SPDT) | 12 to 24 VDC/ 24 VAC | H5CX-A11D-N |
| | 0.01 to 99.99 s | | TT-pill Socket | | Transistor output (SPST) | 100 to 240 VAC | H5CX-A11S-N |
| | 0.1 to 999.9 s 1 to 9999 s | | | | | 12 to 24 VDC/ 24 VAC | H5CX-A11SD-N |
| | 0.1 to 999.9 min | to 9999 min min to 99 h 59 min 0.1 to 999.9 h to 9999 h | | Contact output | | 100 to 240 VAC | H5CX-L8-N |
| | 1 to 9999 min 1 min to 99 h 59 min 0.1 to 999.9 h 1 to 9999 h | | | Signal, Reset | (time-limit SPDT) | 12 to 24 VDC/ 24 VAC | H5CX-L8D-N |
| | | | | (NPN inputs) | Transistor output (SPST) | 100 to 240 VAC | H5CX-L8S-N |
| | | | | | | 12 to 24 VDC/ 24 VAC | H5CX-L8SD-N |
| H5CX-L | Ţ | | | None | Contact output (time-limit SPDT + instantaneous SPDT) Models with instantaneous contact outputs | 100 to 240 VAC | H5CX-L8E-N |
| | | | | | | 12 to 24 VDC/ 24 VAC | H5CX-L8ED-N |
| H5CX-B | 0.01 to 9999.99 s 1 s to 99 h 59 min 59 s 0.1 to 99999.9 min 0.1 to 99999.9 h | A: Signal ON Delay I F-1: Cumulative | Screw terminals | Signal, Reset, Gate (NPN/ PNP inputs) | Transistor output (DPST) | 12 to 24 VDC | H5CX-BWSD-N |

Note: 1. The functions that are provided depend on the model. Check detailed specifications before ordering.
2. Refer to page 33 and later for information on H5CX-B Timers (6-digit display).

Accessories (Order Separately)

Front Panels (Replacement Parts)

| Models | Color | Applicable Timers | Page |
|------------|---------------------|-------------------|------|
| Y92P-CXT4G | Light gray (5Y7/1) | | |
| Y92P-CXT4S | White (5Y9.2 / 0.5) | Four-digit models | 12 |
| Y92P-CXT4B | Black (N1.5) | | |

Note: 1. You can change the color of the front panel when mounting the Timer. The Timer is shipped with a black (N1.5) Front Panel. **2.** "TIMER" is printed on the front of Replacement Front Panels.

Soft Cover

| Models | Remarks | Page |
|-----------|---------|------|
| Y92A-48F1 | | 12 |
| 1324-4011 | | 12 |

Hard Cover

| Models | Remarks | Page |
|---------|---------|------|
| Y92A-48 | | 12 |

Flush Mounting Adapter

| Models | Remarks | Page |
|---------|---|------|
| Y92F-30 | Included with models with terminal blocks. | |
| Y92F-45 | Use this Adapter to install the Timer in a cutout previously made for a DIN 72 x 72 mm device (panel cutout: 68 x 68 mm). | 12 |

Waterproof Packing

| Models | Remarks | Page |
|---------|--|------|
| Y92S-29 | Included with models with terminal blocks. | 12 |

Connection Sockets

| Models | Туре | Connectable Timers | Remarks | Page |
|-----------|--|--------------------|--|------|
| P2CF-08 | Front Connecting Socket | | | |
| P2CF-08-E | Front Connecting Socket (Finger-safe Type) | H5CX-L8 | Round crimp terminals cannot be used on Finger-safe Sockets. Use forked crimp terminals. | |
| P2CF-11 | Front Connecting Socket | | | 13 |
| P2CF-11-E | Front Connecting Socket (Finger-safe Type) | H5CX-A11□ | Round crimp terminals cannot be used on Finger-safe Sockets. Use forked crimp terminals. | |
| P3G-08 | Pack Connecting Socket | H5CX-L8 | A Y92A-48G Terminal Cover can be used with the | |
| P3GA-11 | Back Connecting Socket | H5CX-A11 | Socket to create a finger-safe construction. | |

Terminal Covers for P3G-08 and P3GA-11 Back-connecting Sockets

| Models | Remarks | Page |
|----------|---------|------|
| Y92A-48G | | 14 |


H5CX-A -N/-L -N

H5CX-A -N/-L -N Digital Timers

- Switch the display color* between red, green, and orange to see the output status from a distance.
- Up/Down Keys for each digit enable easy operation.
- Cyclic control is easy with the Twin Timer and Variable ON/OFF Duty modes.
- * Not supported by the H5CX-A11 or H5CX-L8 .

Specifications

Ratings

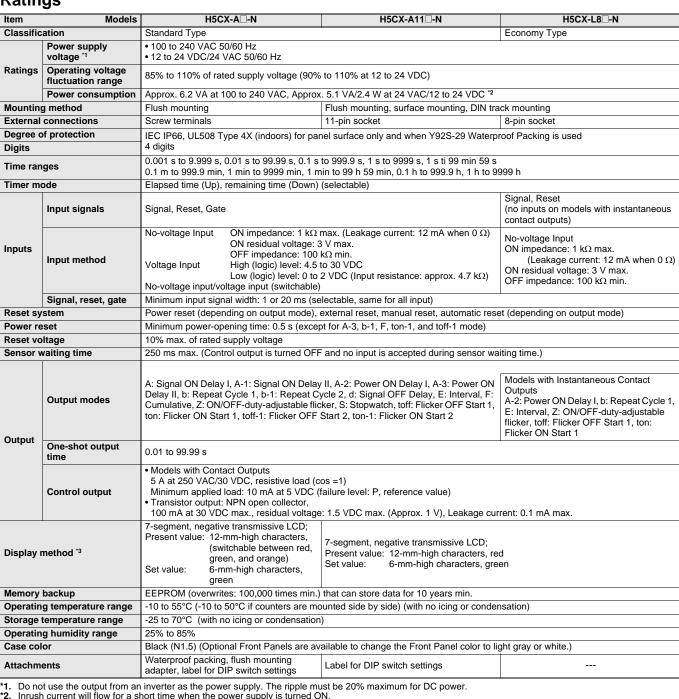

Inrush current will flow for a short time when the power supply is turned ON

| | Infush Current (Reference values) | | | |
|--|-----------------------------------|-----------------|-----------------------------|--------|
| | Voltage | Applied voltage | Inrush current (peak value) | Time |
| | 100 to 240 VAC | 264 VAC | 5.3 A | 0.4 ms |
| | 12 to 24 VDC/24 VAC | 26.4 VAC | 6.4 A | 1.4 ms |
| | | 26.4 VDC | 4.4 A | 1.7 ms |

*3. The display is lit only when the power is ON. Nothing is displayed when power is OFF.




H5CX-A -N/-L -N

Characteristics

| Insulation resistance 100 MΩ min. (at 500 VDC) between current-carrying terminal and exposed non-current-carrying metal parts, and between non-continuous contacts Dielectric strength 2,000 VAC, 50/60 Hz for 1 min between current-carrying metal parts 2,000 VAC, 50/60 Hz for 1 min between power supply and input circuits for the models other than H5CX-□D-N 0.000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for the models other than H5CX-□D-N 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between non-continuous contacts 1,000 VAC, 50/60 Hz for 1 min between non-continuous contacts 1,000 VAC, 50/60 Hz for 1 min between non-continuous contacts 1,000 VAC, 50/60 Hz for 1 min between non-continuous contacts 1,000 VAC, 50/60 Hz for 1 min between non-continuous contacts 1,000 VAC, 50/60 Hz for 1 min between non-continuous contacts Impulse withstard voltage 3 kV (between power terminals) for 100 to 240 VAC, 15 kV for 24 VAC/12 to 24 VAC/12 to 24 VDC 4,5 kV (between power terminals) and ±600 V (between input terminals), square-wave noise by noise simulator (pulse width: 100 ns/1 µs, 1-ns rise) Static immunity Malfunction: 8 kV | Accuracy of operating time and setting error (including temperature and voltage influences) | | Power-ON start: ±0.01% ±50 ms max. (See note 1.) Signal start: ±0.005%±0.03 ms max. (See note 1.) Signal start for transistor output model: ±0.005%±3 ms max. (See note 1 and 2.) If the set value is within the sensor waiting time at startup the control output of the H5CX will not turn ON until the sensor waiting time passes. Note: 1. The values are based on the set value. 2. The value is applied for a minimum pulse width of 1 ms. |
|--|--|-------------|---|
| Dielectric strength non-current-carrying metal parts 2,000 VAC, 50/60 Hz for 1 min between power supply and input circuits for the models other than H5CX-□D-N 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for H5CX-□SD-N 2,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for the models 1,000 VAC, 50/60 Hz for 1 min between control output, power supply attribut 3 kV (between power terminals) for 100 to 240 VAC, 1 kV for 24 VAC/12 to 24 VDC 4.1.5 kV (between power terminals) and ±600 V (between input terminals), square-wave noise by noise simulator (pulse width: 100 ns/1 µs, 1-ns rise) | Insulation resis | stance | exposed non-current-carrying metal parts, and between non-continuous |
| Impulse withstand voltage to 24 VDC 4.5 kV (between current-carrying terminal and exposed non-current-carrying metal parts) for 100 to 240 VAC 1.5 kV for 24 VAC/12 to 24 VDC Noise immunity ±1.5 kV (between current-carrying terminals) and ±600 V (between input terminals), square-wave noise by noise simulator (pulse width: 100 ns/ 1 µs, 1-ns rise) Static immunity Malfunction: 8 kV Destruction: 15 kV Vibration resistance Destruction 10 to 55 Hz with 0.75-mm single amplitude each in three directions for 2 h each Shock resistance Destruction 10 to 55 Hz with 0.35-mm single amplitude each in three directions for 10 min each Shock resistance Destruction 10 to 55 Hz with 0.35-mm single amplitude each in three directions for 10 min each Life expectancy Mechanical 10,000,000 operations, three cycles Life expectancy Ilectrical 100,000 operations min. (under no load at 18,000 operations/h and ambient temperature of 23°C) | Dielectric strength | | non-current-carrying metal parts 2,000 VAC, 50/60 Hz for 1 min between power supply and input circuits for the models other than H5CX-[]D-N 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for H5CX-[]SD-N 2,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models |
| Noise immunity terminals), square-wave noise by noise simulator (pulse width: 100 ns/ 1 µs, 1-ns rise) Static immunity Malfunction: 8 kV Destruction: 15 kV Vibration resistance Destruction 10 to 55 Hz with 0.75-mm single amplitude each in three directions for 2 h each Malfunction 10 to 55 Hz with 0.35-mm single amplitude each in three directions for 2 h each Shock resistance Destruction 300 m/s² in three directions, three cycles Malfunction 100 m/s² in three directions, three cycles Life expectancy Mechanical 10,000,000 operations min. (under no load at 18,000 operations/h and ambient temperature of 23°C) Life Iloo,000 operations min. (5 A at 250 VAC, resistive load at 1,800 operations/h and ambient temperature of 23°C) * | Impulse withstand voltage | | to 24 VDC 4.5 kV (between current-carrying terminal and exposed non-current- |
| Static immunity Destruction: 15 kV Vibration resistance Destruction 10 to 55 Hz with 0.75-mm single amplitude each in three directions for 2 h each Malfunction 10 to 55 Hz with 0.35-mm single amplitude each in three directions for 10 min each Shock resistance Destruction 300 m/s ² in three directions, three cycles Malfunction 100 m/s ² in three directions, three cycles Life expectancy Mechanical 10,000,000 operations min. (under no load at 18,000 operations/h and ambient temperature of 23°C) Electrical 100,000 operations min. (5 A at 250 VAC, resistive load at 1,800 operations/h and ambient temperature of 23°C) * | Noise immunity | / | terminals), square-wave noise by noise simulator (pulse width: 100 ns/ |
| Vibration resistance Destruction 2 h each Malfunction 10 to 55 Hz with 0.35-mm single amplitude each in three directions for 10 min each Shock resistance Destruction 300 m/s ² in three directions, three cycles Malfunction 100 m/s ² in three directions, three cycles Life expectancy Mechanical 10,000,000 operations min. (under no load at 18,000 operations/h and ambient temperature of 23°C) Electrical 100,000 operations min. (5 A at 250 VAC, resistive load at 1,800 operations/h and ambient temperature of 23°C) * | Static immunity | / | |
| Malfunction No to 50 n2 with 0.50 mm single amplitude each m three directions for 10 min each Shock resistance Destruction 300 m/s ² in three directions, three cycles Life expectancy Mechanical 10,000,000 operations min. (under no load at 18,000 operations/h and ambient temperature of 23°C) Electrical 100,000 operations min. (5 A at 250 VAC, resistive load at 1,800 operations/h and ambient temperature of 23°C) * | Vibration | Destruction | |
| Malfunction 100 m/s² in three directions, three cycles Life expectancy Mechanical 10,000,000 operations min. (under no load at 18,000 operations/h and ambient temperature of 23°C) Electrical 100,000 operations min. (5 A at 250 VAC, resistive load at 1,800 operations/h and ambient temperature of 23°C) * | resistance | Malfunction | |
| Life expectancy Mechanical 10,000,000 operations min. (under no load at 18,000 operations/h and ambient temperature of 23°C) Electrical 100,000 operations min. (5 A at 250 VAC, resistive load at 1,800 operations/h and ambient temperature of 23°C) * | Shock | Destruction | 300 m/s ² in three directions, three cycles |
| Life expectancy Mechanical Electrical ambient temperature of 23°C) Electrical 100,000 operations min. (5 A at 250 VAC, resistive load at 1,800 operations/h and ambient temperature of 23°C) * | resistance | Malfunction | 100 m/s ² in three directions, three cycles |
| electrical operations/h and ambient temperature of 23°C) * | | Mechanical | |
| Weight Approx. 115 g (Timer only) | expectancy | Electrical | |
| | Weight | | Approx. 115 g (Timer only) |

* Refer to Life-test Curve.

Life-test Curve (Reference Values)

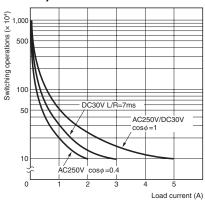

A maximum current of 0.15 A can be switched at 125 VDC ($\cos\phi = 1$) and a maximum current of 0.1 A can be switched if L/R is 7 ms. In both cases, <u>a</u> life of 100,000 operations can be expected.

Applicable Standards

| Approved safety standards | UL508/Listing, UL50 Type 4X for indoor use (enclosure rating), CSA C22.2 No. 14 ¹¹ , conforms to EN61812-1 (Pollution degree 2/overvoltage category III) B300 PILOT DUTY 1/4 HP 120 VAC, 1/3 HP, 240 VAC, 5 A resistive load VDE0106/P100 CCC: Pollution degree 2, Overvoltage category II ² | | |
|---------------------------|---|---|--|
| ЕМС | (EMI) Emission Enclosure: Emission AC mains: (EMS) Immunity ESD: Immunity RF-interference: Immunity Conducted Disturbance: Immunity Burst: Immunity Surge: Immunity Voltage Dip/Interruption: | EN61812-1 EN55011 Group 1 class A EN55011 Group 1 class A EN655011 Group 1 class A EN61812-1 EN61000-4-2: 6 kV contact discharge (level 2) 8 kV air discharge (level 2) 10 V/m (Amplitude-modulated, 80 MHz to 1 GHz) (level 3); 10 V/m (Pulse-modulated, 900 MHz 5 MHz) (level 3) EN61000-4-6: 10 V (0.15 to 80 MHz) (level 3) EN61000-4-6: 10 V (0.15 to 80 MHz) (level 3) EN61000-4-4: 2 kV power-line (level 3); 1 kV I/O signal-line (level 4) EN61000-4-5: 1 kV line to lines (power and output lines) (level 3); 2 kV line to ground (power and output lines) (level 3) EN61000-4-11: 0.5 cycle, 100% (rated voltage) | |

 The following safety standards apply to models with sockets (H5CX-A1 cUL (Listing): Applicable when an OMRON P2CF (-E) Socket is used. cUR (Recognition): Applicable when any other socket is used.
 Excluding the H5CX-ASD-N/-A11SD-N/-L8SD-N. ts (H5CX-A11□ or H5CX-L8□).

I/O Functions

For details, refer to the timing charts on page 20 and page 29.

| | | Normally functions to start timing. In modes A-2 and A-3, disable timing. In mode S, starts and stops timing. |
|----------------------|----------------------|---|
| Inputs ^{*1} | Reset | Resets present value. (In elapsed time mode, the present value returns to 0; in remaining time mode, the present value returns to the set value.) Count inputs are not accepted and control output turns OFF while reset input is ON. Reset indicator is lit while reset input is ON. |
| | Gate *2 | Disables timing. (If a reset occurs while the gate input is ON, a reset will be performed.) |
| Outputs | Control output (OUT) | Outputs take place according to designated operating mode when timer reaches corresponding set value. |

*1. The H5CX-L8E□ does not have an input.
*2. The H5CX-L□ does not have a gate input.

Response Delay Time When Resetting (Transistor Output)

The following table shows the delay from when the reset signal is input until the output is turned OFF.


| (Reference val | ue) |
|----------------|-----|
|----------------|-----|

| Minimum reset signal width | Output delay time |
|----------------------------|-------------------|
| 1 ms | 0.8 to 1.2 ms |
| 20 ms | 15 to 25 ms |

H5CX-A -N/-L -N

Connections


Block Diagram



Note: Basic insulation is provided between the power supply circuit and the input circuits. However, basic insulation is not provided in the H5CX-D-N.

Terminal Arrangement


Confirm that the power supply meets specifications before use.

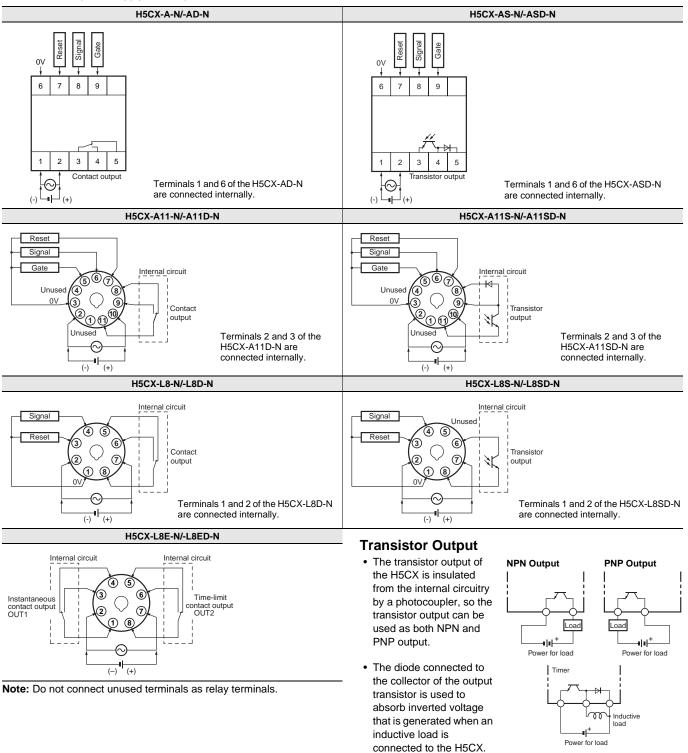

Input Circuits Signal, Reset, and Gate Input

No-voltage Inputs (NPN Inputs)

Voltage Inputs (PNP Inputs)




IApprox. 4.7 kΩ Internal circuit

Input Connections

The inputs are no-voltage (closed or open) inputs or voltage inputs except for the H5CX-L8. (The inputs of the H5CX-L8 are no-voltage inputs only. The H5CX-L8E does not have an input.)


No-voltage Inputs (NPN Inputs)

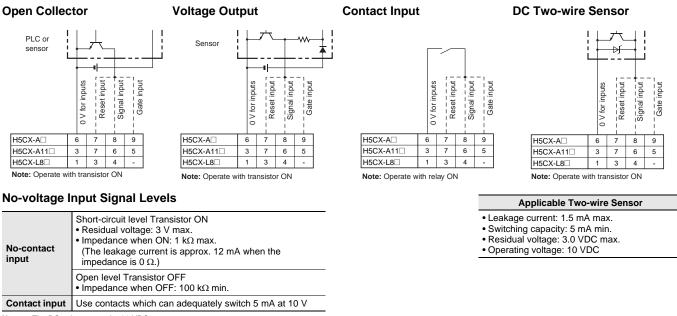

Note: The DC voltage must be 30 VDC max.

Voltage Inputs (PNP Inputs) The inputs of the H5CX-L8 are no-voltage inputs only.

No-contact Input (NPN Transistor)

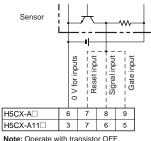



Note: Operate with transistor OF

Voltage Input Signal Levels

| High level (Input ON): 4.5 to 30 VDC | |
|--------------------------------------|--|
| Low level (Input OFF): 0 to 2 VDC | |

Note: 1. The DC voltage must be 30 VDC max. 2. Input resistance: Approx. 4.7 $k\Omega$

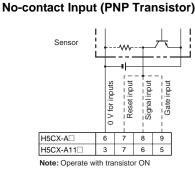


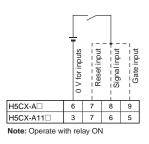

Contact Input

H5CX-A -N/-L -N

Nomenclature

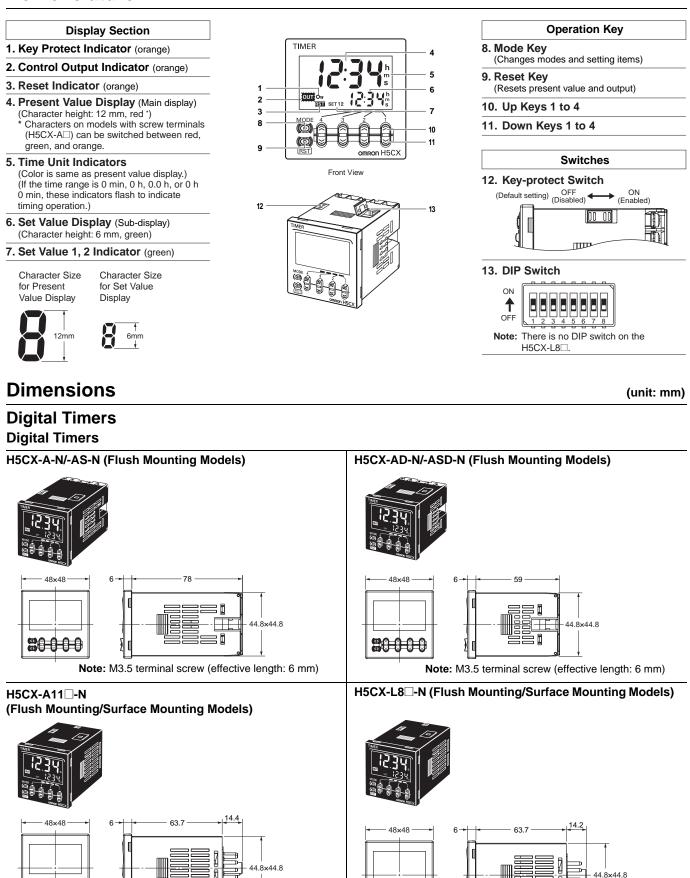


80000

10

80 0 0 0


Dimensions with Flush Mounting Adapter

H5CX-A-N/-AS-N (Provided with Adapter and Waterproof Packing)

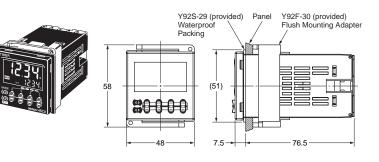


H5CX-AD-N/-ASD-N (Provided with Adapter and Waterproof Packing)



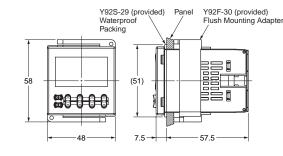

H5CX-A11 -N (Adapter and Waterproof Packing Ordered Separately)

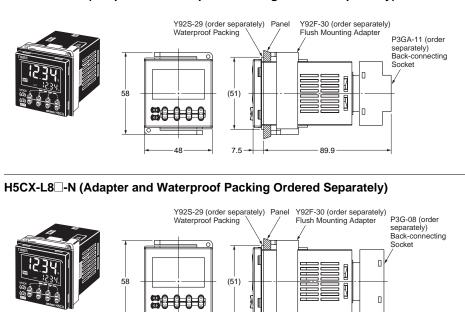

7.5


84.8

Panel cutouts areas shown below. (according to DIN43700). -60 min.-45+0.6 45+0 15 min 60 min. 1 ŧ Note: 1. The mounting panel thickness should be 1 to 5 mm. 2. To allow easier operation, it is recommended that Adapters be mounted so that the gap between sides with hooks is at least 15 mm (i.e., with the panel cutouts separated by at . least 60 mm). 3. It is possible to mount Timers side by side, but only in the

Panel Cutouts

side by side, but only in the direction without the hooks. (However, if Timers are mounted side by side, water resistance will be lost.)

Dimensions with Front Connecting Socket

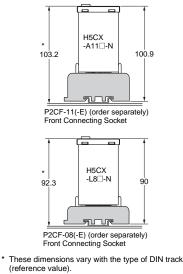

Accessories (Order Separately)

Note:

Depending on the operating environment, the condition of resin products may deteriorate, and may shrink or become harder. Therefore, it is recommended that resin products are replaced regularly.

Front Panel (Replacement Part)

You can change the color of the front panel when mounting the Timer. The Timer is shipped with a black (N1.5) Front Panel.

Y92P-CXT4S

Cover for Timer with 4 Digits White (5Y9.2/0.5)


Y92P-CXT4G

Cover for Timer with 4 Digits Light gray (5Y7/1)

Y92P-CXT4B

Cover for Timer with 4 Digits Black (N1.5)

Replacement Method

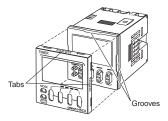

The Front Panel is attached to the Terminal with tabs in four locations. To remove the Front Panel, open the tabs and pull the Front Panel forward. To attach the Front Panel, press it onto the Timer so that all four tabs lodge into the groves on the

body of the Timer.

Soft Cover Y92A-48F1

Hard Cover Y92A-48





Protecting the Timer in Environments Subject to Oil

The H5CX's panel surface is water-resistive (IP \square 6, UL Type 4X) and so even if drops of water penetrate the gaps between the keys, there will be no adverse effect on internal circuits. If, however, there is a possibility of oil being present on the operator's hands, use the Soft Cover. The Soft Cover ensures protection equivalent to IP54 against oil. Do not, however, use the H5CX in locations where it would come in direct contact with oil.

Flush Mounting Adapter Y92F-30 Y92F-45

Order the Flush Mounting Adapter separately if it is lost or damaged. Note: A Flush Mounting Adapter is included with screw terminals.



Use this Adapter to install the Timer in a cutout previously made for a DIN 72 x 72 mm device (panel cutout: 68 x 68 mm).



Waterproof Packing




Order the Waterproof Packing separately if it is lost or damaged. The Waterproof Packing can be used to achieve IP66 protection.

The Waterproof Packing will deteriorate, harden, and shrink depending on the application environment. To ensure maintaining the IP \Box 6, UL Type 4X waterproof level, periodically replace the Waterproof Packing. The periodic replacement period will depend on the application environment. You must confirm the proper replacement period. Use 1 year or less as a guideline. If the Waterproof Packing is not replaced periodically, the waterproof level will not be maintained.

It is not necessary to mount the Waterproof Packing if waterproof construction is not required.

Connection Sockets Front-connecting Sockets

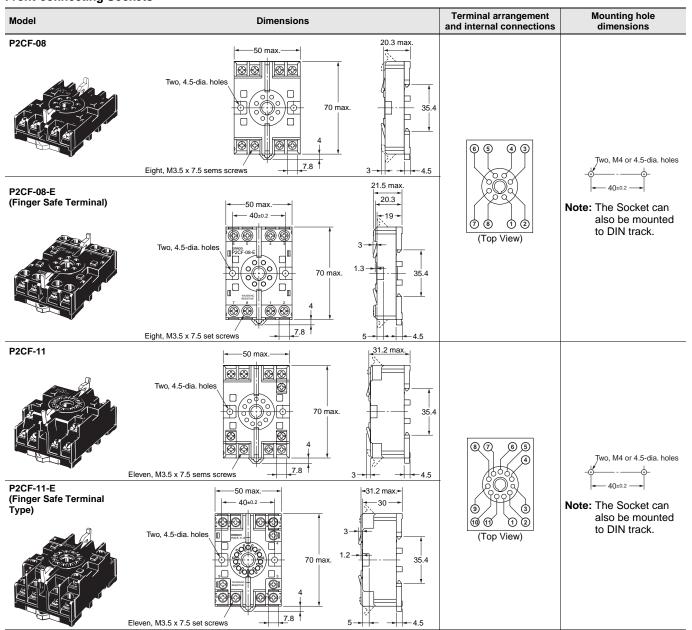

Note: Round crimp terminals cannot be used on Finger-safe Sockets. Use forked crimp terminals.


Back-connecting Sockets

| Model | Dimensions | Terminal arrangement and internal connections |
|---------|---|--|
| P3G-08 | | (Bottom View) |
| P3GA-11 | 45 + 27 dia + 45 + 27 dia + 45 + 25.6 4.5 + 16.3 + 6.2 | (Bottom View) |

Note: A Y92A-48G Terminal Cover can be used with the Socket to create a finger-safe construction.


H5CX-A -N/-L -N

Terminal Covers for P3G-08 and P3GA-11 Back-connecting Sockets

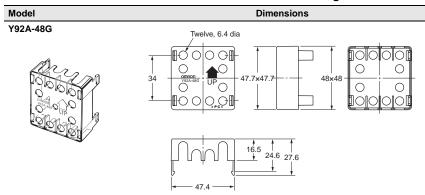

Note: The Terminal Cover can be used with a Back-mounting Socket (P3G-08 or P3GA-11) to create a finger-safe construction.

Optional Products for Track Mounting

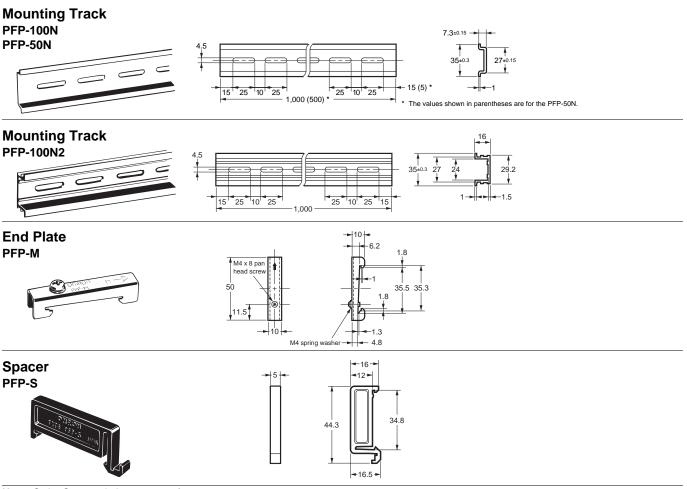

Note: Order Spacers in increments of 10.

Operating Procedures

Setting Procedure Guide

Settings for Timer Operation *


Use the following settings.

Settings for Twin Timer Operation *

Refer to page 25.

* It is not necessary to mount the Waterproof Packing if waterproof construction is not required.


Operating Procedures for Timer Function

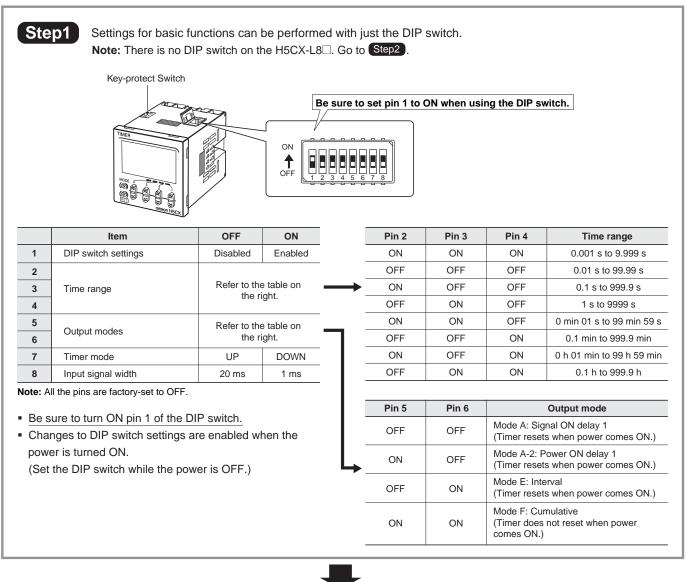

After making DIP switch settings for basic operation, advanced functions can be added using the operation keys on the front panel. Refer to Step2 on page 16 for details.

H5CX-A□-N/-L□-N Timer

| Ste | ep2 Settings | that cannot | t be performed with the DIP switch are performed with the operation | on keys. | |
|-----------------------|-----------------------|------------------------------|---|---------------------------------------|--|
| • Cha | inge to Function S | Setting Mode | | | |
| Γ | Power ON | | For details on operations in run mode, refer to page 19. | | |
| Ľ | | MODE 3 s min. *1 | | | |
| | Run mode | | on setting mode | | |
| _ | (| MODE 3 s min. *2 | | | |
| | 2. Changes made to s | ettings in functi | ion setting mode during operation, operation will continue. on setting mode are enabled for the first time when the mode is changed to run mode. he timer is reset (time initialized and output turned OFF). | | |
| | | | The characters displayed in reverse video are the default settings. When performing settings with operation keys only, set pin1 of the DIP switch to OFF (factory If pin 1 of the DIP switch is set to ON, the setting items indicated in will not be displayed | | |
| | Elme | Time range | ■ Set the time range using the 🚖 📚 keys. | | |
| | | | $(\rightarrow $ | Time Range L Display | Set Value |
| | MODE | | ➡ For details, refer to the Time Range List. | • • • • • • • • • • • • • • • • • • • | 0.01 s to 99.99 s (default setting) |
| | Limm | Timer mode | Set the timer mode using the 🚖 😒 keys. | | 0.1 s to 999.9 s |
| | | | (UP) (DOWN) | • • • • • ₈ | 1 s to 9999 s |
| | | | Set the output mode using the keys. | • •:• • • • • • • • • | 0 min 01 s to 99 min 59 s |
| | oütm | Output modes | (A) (A-1) (A-2) (A-3) (b) (b-1) (d) (E) (F) (Z) (S) | • • • • m | 0.1 min to 999.9 min |
| | MODE | | (A) (A-1) (A-2) (A-3) (b) (b-1) (d) (E) (F) (Z) (S) Note: Only modes A-2 b, E, and Z can be selected for models with instantaneous contact outputs. | • • • • m | 1 min to 9999 min |
| | | | Set each digit for the output time using the corresponding 🙁 keys. | :- - ^h | 0 h 01 min to 99 h 59 min |
| mode | OČĽM Hold | Output time | → <u>HăL d</u> / <u>D.D</u> /~ <u>99.99</u> → (Output hold) (0.01s) (99.99s) | • • • • ^h | 0.1 h to 999.9 h |
| Function setting mode | MODE | | (If the output time is set to 0.00, Hald is displayed.) Note: Displayed for modes A, A-1, A-2, A-3, b, b-1 and S only. | h | 1 h to 9999 h |
| -unctior | JFLE | Input signal | • Set the input signal width using the 🙁 keys. | •••• • • • | 0.001 s to 9.999 s |
| | 20~5 | | (→ 20m5 ↔ /m5 ↔ (20ms) (1ms) | | |
| | MODE | | Note: Not displayed for models with instantaneous contact outputs. | | |
| | imod | NPN/PNP input | ■ Set the NPN/PNP mode using the 😒 keys. | | |
| | <u></u> | | (NPN input) (PNP input) | | |
| | MODE | | Note: Only displayed for the H5CX-A and H5CX-A11. | | |
| | Colr | Display color | ■ Set the display color using the 🔿 📚 keys. | | |
| | | | (Red) (Green) (Orange) (Red-green) (Green-red) (Red-orange) (Orange-red) (Green-orange) Note: Displayed only for models with terminal screws (H5CX-A□). | | |
| | - ot nd | Instantaneous/ time-limit | Set the function (instantaneous or time-limit operation) for the instantaneous output (using the | (output 1) | |
| | | | | | |
| - | | | (Instantaneous) (Time-limit) Note: Displayed only for models with instantaneous contact outputs. | | |
| From n | ext page To next page | | | | |

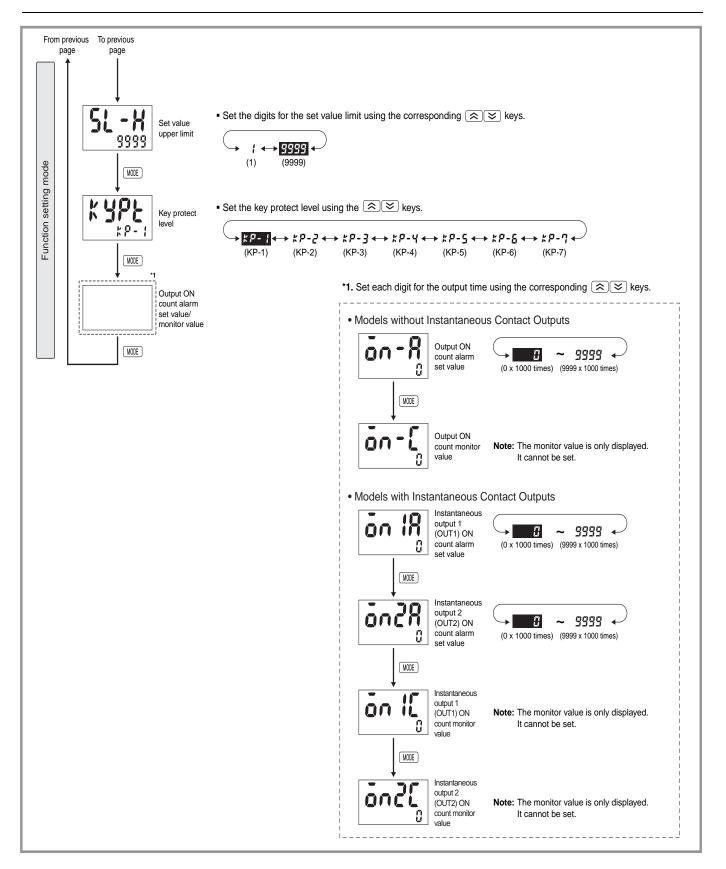

Explanation of Functions Operating Procedures for Timer Function

Items marked with stars (\star) can be set using the DIP switch.

Time Range (とこって)★

Set the range to be timed in the range 0.001 s to 9,999 h. Settings of type ---- h (9,999 h) and ---- min (9,999 min) cannot be made with the DIP switch. Use the operation keys if these settings are required.

Timer Mode (とこっっつ) ★

Set either the elapsed time (UP) or remaining time (DOWN) mode. In UP mode, the elapsed time is displayed, and in DOWN mode, the remaining time is displayed.

Output Mode (るじとっ)★

Set the output mode.

The possible settings are A, A-1, A-2, A-3, b, b-1, d, E, F, Z and S. Only output modes A, A-2, E, and F can be set using the DIP switch. Use the operation keys if a different setting is required.

(For details on output mode operation, refer to "Timing Charts" on page 20.)

Output Time (at in)

When using one-shot output, set the output time for one-shot output (0.01 to 99.99 s).

One-shot output can be used only if the selected output mode is A, A-1, A-2, A-3, b, b-1 or S.

If the output time is set to 0.00, **Hald** is displayed, and the output is held.

Input Signal Width (ごドしと) *

Set the minimum signal input width (20 ms or 1 ms) for signal, reset, and gate inputs.

The same setting is used for all external inputs (signal, reset, and gate inputs).

If contacts are used for the input signal, set the input signal width to 20 ms.

Processing to eliminate chattering is performed for this setting.

NPN/PNP Input Mode (แักเอ็ส)

Select either NPN input (no-voltage input) or PNP input (voltage input) as the input format.

Set an NPN input when using a 2-wire sensor.

For details on input connections, refer to "Input Connections" on page 9.

Display Color (LoLr)

(Terminal block model: H5CX-A only)

Set the color used for the present value.

| | Output OFF | Output ON |
|------------|--------------|-----------|
| rEd | Red (| fixed) |
| <u>Gen</u> | Green | (fixed) |
| õrű | Orange | e (fixed) |
| r-6 | Red | Green |
| 6-r | Green Red | |
| r-ŏ | Red Orange | |
| ŏ-r | Orange Red | |
| 6-ō | Green | Orange |
| ō-G | Orange Green | |

Key Protect Level (* 3Pt)

Set the key protect level. Refer to "Key Protect Level" on page 32.

Instantaneous/Time-limit (at ad)

Set the contact output to time-limit SPDT + instantaneous SPDT or time-limit SPDT operation.

Set Value Upper Limit (5L - H)

Set the upper limit for the set value when it is set in Run Mode. The limit can be set to between 1 and 9999. This setting does not apply to the ON duty in Z mode.

Output ON Count Alarm Set Value $(\bar{a}n - \bar{R})$

Set the alarm value for the output ON count.

The limit can be set to between 0×1000 (0 times) and 9999×1000 (9,999,000 times). Only the underlined values are set. The alarm will be disabled if 0 is set.

If the total ON count of the output exceeds the alarm set value, $\xi \exists$ will be displayed on the Timer to indicate that the output ON count alarm value was exceeded. Refer to "**Self-diagnostic Function**" on **page 32** for information on the $\xi \exists$ display.

ON Count Alarm Set Values for Outputs 1 and 2 (OUT1 and OUT2) ($\delta \alpha R$ and $\delta \alpha R$)

Set the ON count alarm values for the outputs 1 and 2. The limit can be set to between 0×1000 (0 times) and 9999×1000 (9,999,000 times). Only the underlined values are set. The alarm will be disabled if 0 is set.

If the total ON count of instantaneous output 1 or 2 exceeds the alarm set value, \mathcal{E} will be displayed on the Timer to indicate that the output ON count alarm value was exceeded. Refer to "**Self-diagnostic Function**" on **page 32** for information on the \mathcal{E} 3 display.


Output ON Count Monitor Value (an-L)

The monitor value is only displayed. It cannot be set. The output ON count will be 1,000 times the displayed value.

ON Count Monitor Values for Outputs 1 and 2 (OUT1 and OUT2) (an IC and and C)

The monitor value for output 1 or 2 is only displayed. It cannot be set. The output ON count will be 1,000 times the displayed value.

Operation in Run Mode Operating Procedures for Timer Function

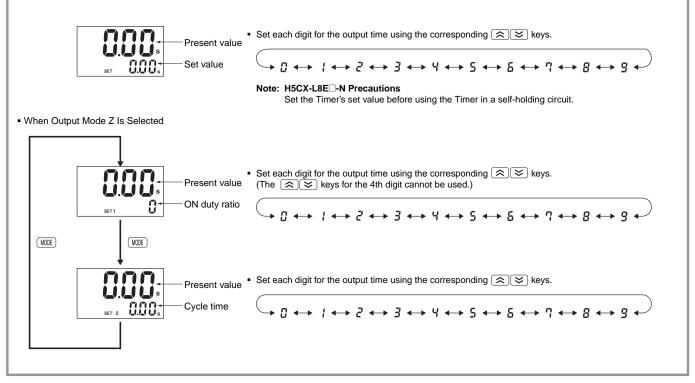

Present Value and Set Value

These items are displayed when the power is turned ON. The present value is displayed in the main display and the set value is displayed in the sub-display.

The values displayed will be determined by the settings made for the time range and the timer mode in function setting mode.

Present Value and ON Duty Ratio (Output Mode = Z)

The present value is displayed in the main display and the ON duty ratio is displayed in the sub-display. Set the ON duty ratio used in ON/ OFF-duty-adjustable flicker mode (Z) as a percentage.

ON time = Cycle time x
$$\frac{ON \text{ duty ratio (\%)}}{100}$$

The output accuracy will vary with the time range, even if the ON duty ratio setting is the same. Therefore, if fine output time adjustment is required, it is recommended that the time range for the cycle time is set as small as possible.

Examples: 1. When Time Range = - - - s (9999 s)

$$20(s) \times \frac{31(\%)}{100} = 6.2(s)$$

Rounded off to the nearest integer (because of the time range setting) \rightarrow ON time = 6 s

2. When Time Range = - -. - s (99.99 s)


$$20.00(s) \times \frac{31(\%)}{100} = 6.200(s)$$

Rounded off to 2 decimal places (because of the time range setting) \rightarrow ON time = 6.20 s

If a cycle time is set, cyclic control can be performed in ON/OFF-dutyadjustable flicker mode simply by changing the ON duty ratio.

Present Value and Cycle Time (Output Mode = Z)


The present value is displayed in the main display and the cycle time is displayed in the sub-display. Set the cycle time.

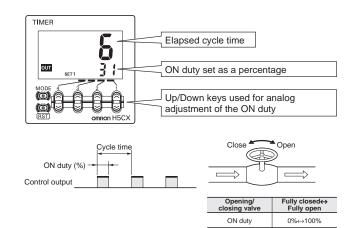

Timing Charts **Operating Procedures for Timer Function**


Models without Instantaneous Contact Outputs

The gate input is not included in the H5CX-L8 models.

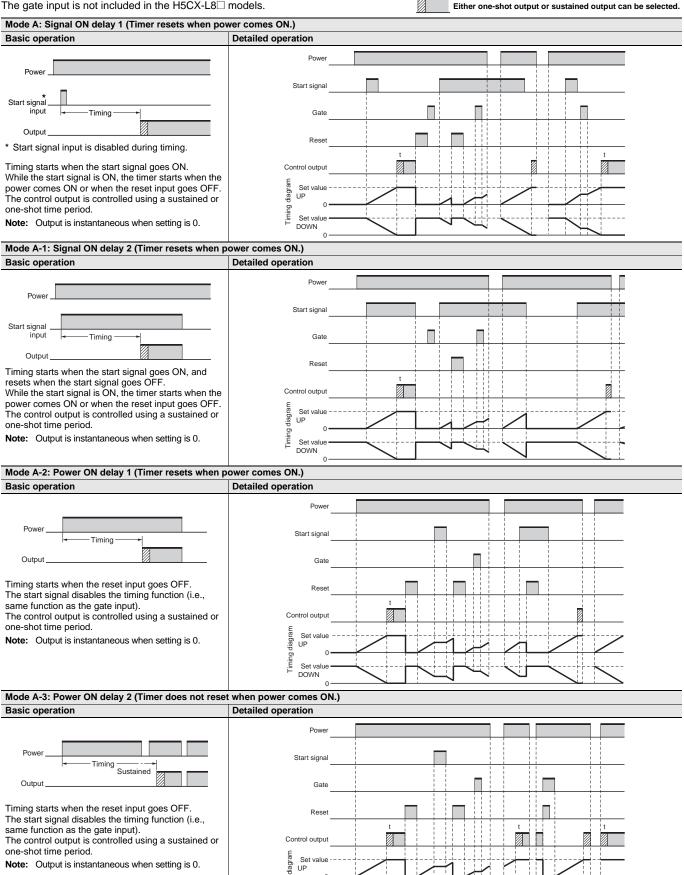


Timina Set value DOWN

20

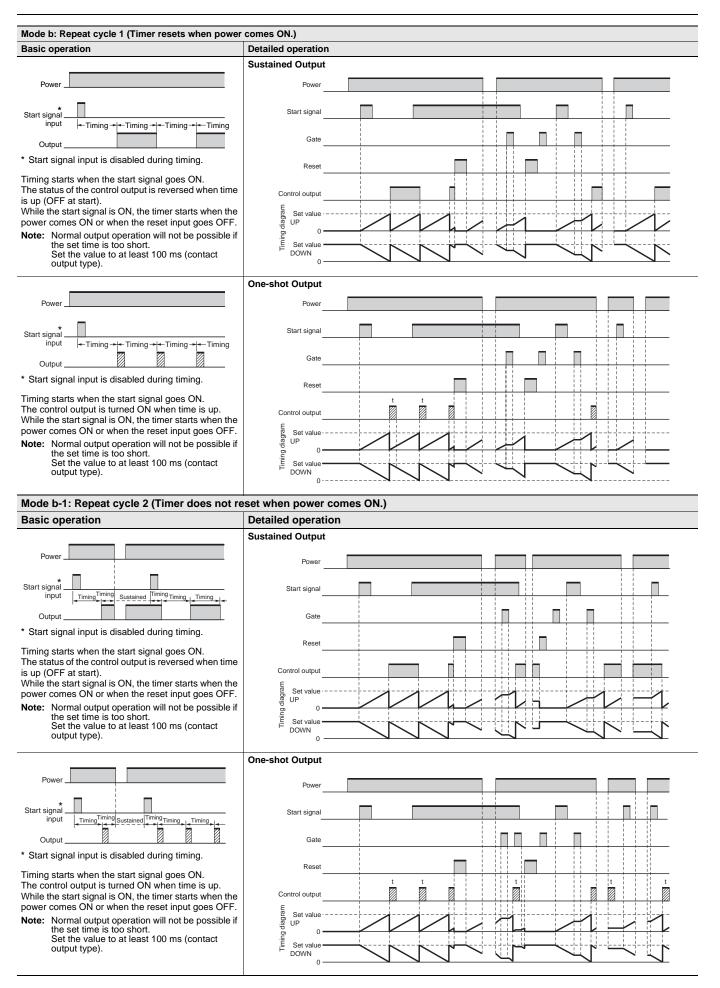


21

H5CX-A -N/-L -N Timer

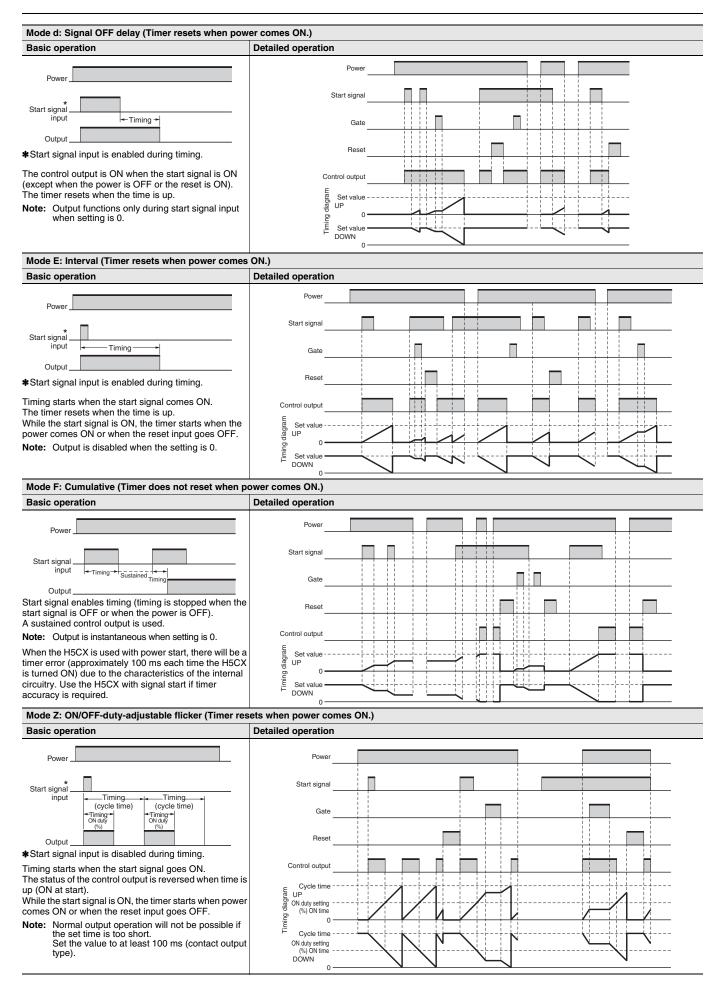

H5CX-A□-N/-L□-N Timer

Mode S: Stopwatch (Timer resets when power comes ON.) **Basic operation Detailed operation** Po Power Start signa Start signal input Timing Gate/Reset Gate/Reset 9999 Set time diagram UP Display iming (for elapsed * RST flashes Set t time) The signal starts and stops timing. DOWN The display is held and timing is continued if the reset or gate input is received during timing operation. The timer resets if the reset or gate input is received Output when the timing operation is stopped. Note: Output is instantaneous when setting is 0. Models with Instantaneous Contact Outputs Either one-shot output or sustained output can be selected.

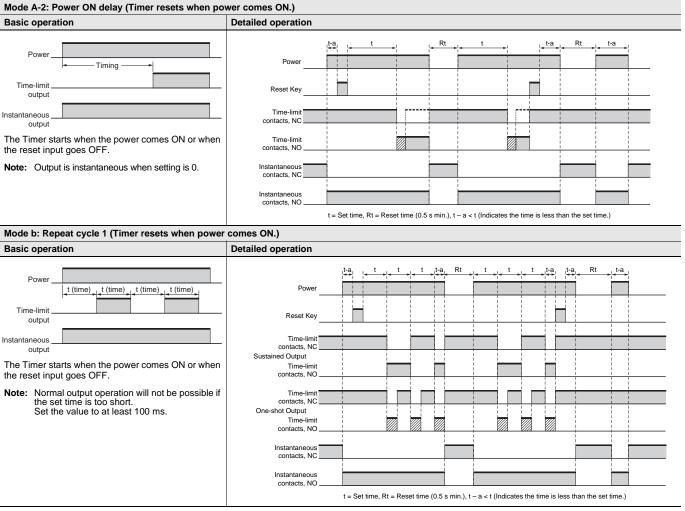

Note: H5CX-L8E -N Precautions


Set the Timer's set value before using the Timer in a self-holding circuit.

H5CX-A -N/-L -N Timer

| Mode E: Interval (Timer resets when power comes ON.) | | |
|---|---|--|
| Basic operation | Detailed operation | |
| Power Timing | Power | |
| Time-limit | Reset Key | |
| Instantaneous output | Time-limit contacts, NC | |
| The Timer starts when the power comes ON or when the reset input goes OFF. | Time-limit contacts, NO | |
| Note: Output is not instantaneous when setting is 0. | Instantaneous contacts, NC | |
| | Instantaneous contacts, NO | |
| | t = Set time, Rt = Reset time (0.5 s min.), t - a < t (Indicates the time is less than the set time.) | |
| Mode Z: ON/OFF-duty adjustable flicker (Timer res | | |
| Basic operation | Detailed operation | |
| PowerTiming (cycle time) | Power | |
| Time-limiti output I←Timing →I I←Timing →I (ON duty) I←Timing →I (ON duty) | Reset Key | |
| Instantaneous | Time-limit contacts, NC | |
| The Timer starts when the power comes ON or when the reset input goes OFF. | Time-limit contacts, NO | |
| Note: Normal output operation will not be possible if the set time is too short. Set the value to at least 100 ms. | Instantaneous contacts, NC | |
| | Instantaneous contacts, NO | |
| | t = Set time, dty = ON duty time, Rt = Reset time (0.5 s min.), t – a < t (Indicates the time is less than the set time.) | |


Note: H5CX-L8E□-N Precautions Set the Timer's set value before using the Timer in a self-holding circuit.

Setting Procedure Guide Operating Procedures for Twin Timer Function

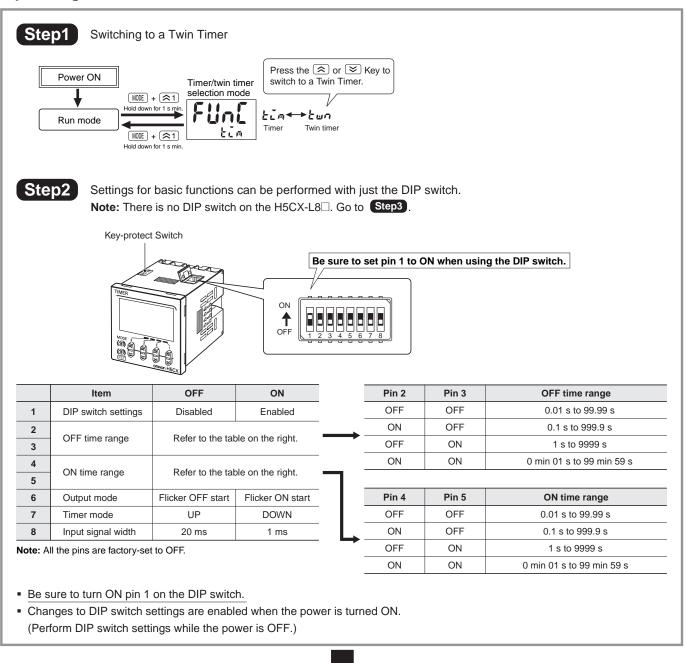


After making DIP switch settings for basic operation, advanced functions can be added using the operation keys on the front panel. Refer to **Step3** on **page 26** for details.

H5CX-A□-N/-L□-N Twin Timer

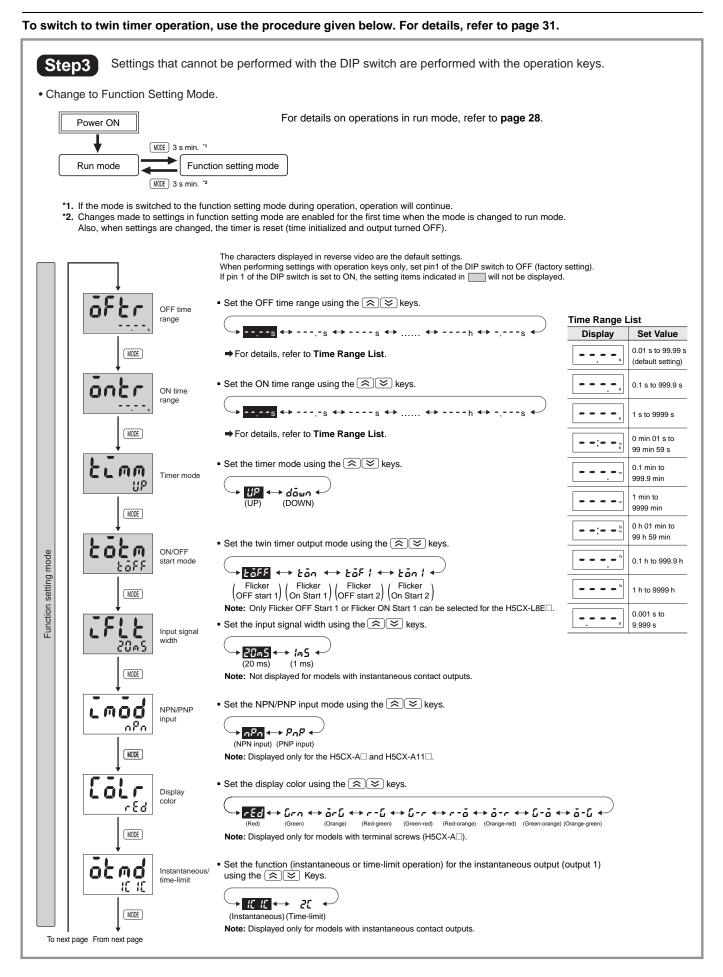

26

H5CX-A -N/-L -N Twin Timer

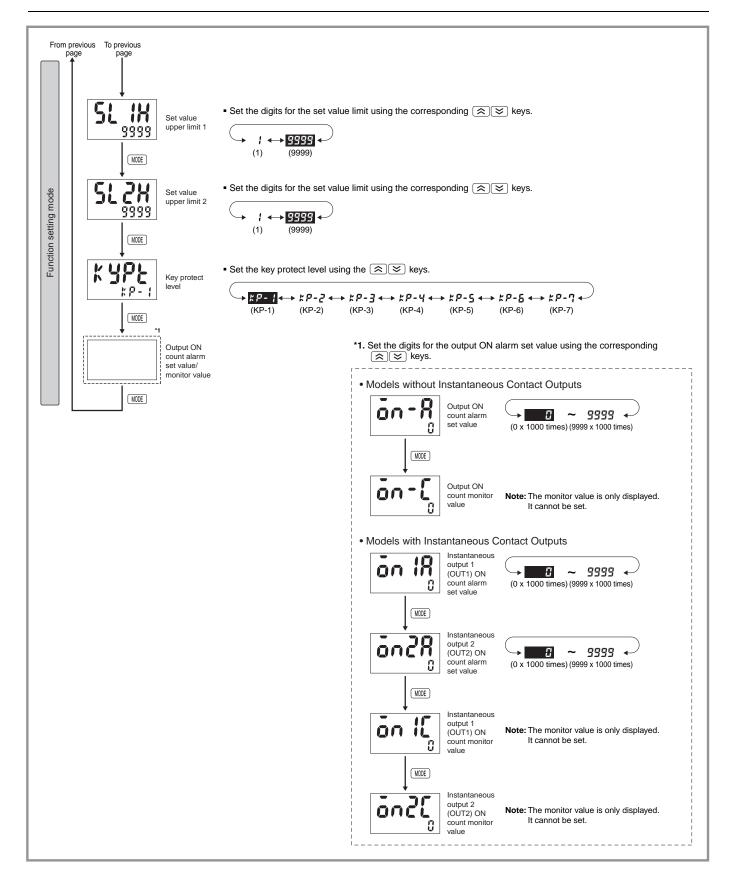

Explanation of Functions Operating Procedures for Twin Timer Function

Items marked with stars (\star) can be set using the DIP switch.

OFF Time Range (ふらとっ)★

Set the time range for the OFF time in the range 0.000 s to 9,999 h. Only settings of type --.-- s (99.99 s), ----- s (999.9 s), ---- s (9,999 s), and -- min -- s (99 min 59 s) can be made with the DIP switch. Use the operation keys if another type of setting is required.

ON Time Range (antr)★

Set the time range for the ON time in the range 0.001 s to 9,999 h. Only settings of type --.-- s (99.99 s), ---- s (999.9 s), ---- s (9,999 s), and -- min -- s (99 min 59 s) can be made with the DIP switch. Use the operation keys if another type of setting is required.

Timer Mode (とこのの)★

Set either the elapsed time (UP) or remaining time (DOWN) mode. In UP mode, the elapsed time is displayed, and in DOWN mode, the remaining time is displayed.

ON/OFF Start Mode (と≦と∞)★

Set the output mode.

Set either flicker OFF start or flicker ON start. (For details on output mode operation, refer to "Timing Charts" on page 29.)

Input Signal Width (こFLと)★

Operation in Run Mode

Set the minimum signal input width (20 ms or 1 ms) for signal, reset, and gate inputs.

The same setting is used for all external inputs (signal, reset, and gate inputs).

If contacts are used for the input signal, set the input signal width to 20 ms.

Processing to eliminate chattering is performed for this setting.

NPN/PNP Input Mode (แักเอี่ส่)

Select either NPN input (no-voltage input) or PNP input (voltage input) as the input format. Set an NPN input when using a 2-wire sensor. The same setting is used for all external inputs. For details on input connections, refer to "Input Connections" on

page 9.


Display Color (Lalr) (Terminal black model: H5CX-A only)

Set the color used for the present value.

| | Output OFF | Output ON | | | | |
|------------|----------------|-----------|--|--|--|--|
| rEd | Red (| fixed) | | | | |
| <u>Gen</u> | Green | (fixed) | | | | |
| õr ü | Orange (fixed) | | | | | |
| r-5 | Red | Green | | | | |
| 5-c | Green | Red | | | | |
| r-ă | Red | Orange | | | | |
| ă-r | Orange | Red | | | | |
| ũ-ă | Green | Orange | | | | |
| ā-G | Orange | Green | | | | |

Key Protect Level (* 3Pt)

Set the key protect level. Refer to "Key Protect Level" on page 32.

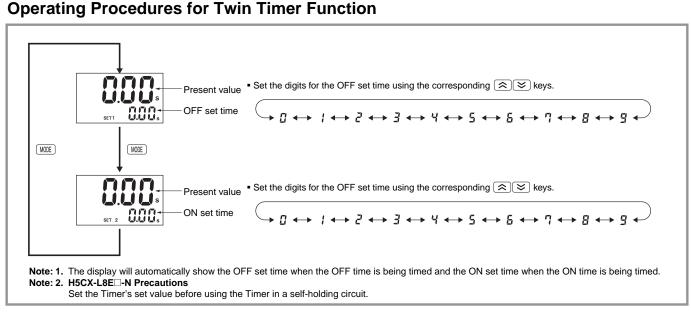


Present Value and OFF Set Time

The present value is displayed in the main display and the OFF set time is displayed in the sub-display. Set the OFF time.


Present Value and ON Set Time

The present value is displayed in the main display and the ON set time is displayed in the sub-display. Set the ON time.

Timing Charts Operating Procedures for Timer Function Models without Instantaneous Contact Outputs

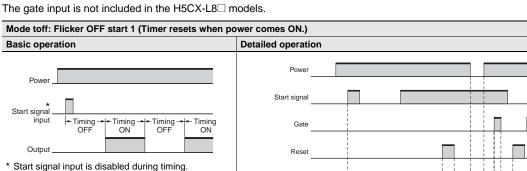

Timing starts when the start signal goes ON. The status of the control output is reversed when time is up (OFF at start). While the start signal is ON, the timer starts when the



the set time is too short. Set the value to at least 100 ms (contact output type).

iming diagram OFF time DOWN ON time 0 Mode ton: Flicker OFF start 1 (Timer resets when power comes ON.)


Detailed operation

Control output

UF

OFF tin

ON tim

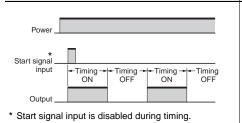

While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF. Note: Normal output operation will not be possible if

Set the value to at least 100 ms (contact output

Timing starts when the start signal goes ON. The status of the control output is reversed when time is

the set time is too short.

Basic operation


up (ON at start).


type).

Power Start signal Gate Reset Control output OFF time UF **Fiming diagram** ON tir OFF DOWN ON tim


0


Mode toff-1: Flicker OFF start 2 (Timer does not reset when power comes ON.) **Basic operation**

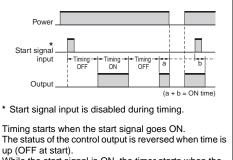



power comes ON or when the reset input goes OFF. Note: Normal output operation will not be possible if the set time is too short. Set the value to at least 100 ms (contact output




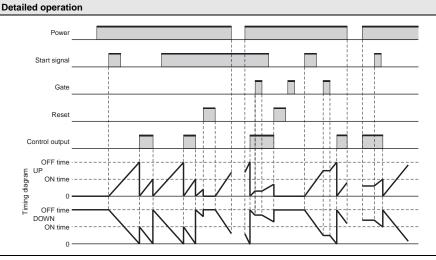

H5CX-A□-N/-L□-N Twin Timer

Mode ton-1: Flicker ON start 2 (Timer does not reset when power comes ON.) **Basic operation** Detailed operation Powe Power Start signal Start signal input Timing ON Timing -Timing OFF b Gate Output (a + b = OFF time) * Start signal input is disabled during timing. Control outpu Timing starts when the start signal goes ON. The status of the control output is reversed when time is OFF time up (ON at start). UP Timing diagram While the start signal is ON, the timer starts when the ON 1 power comes ON or when the reset input goes OFF. C Note: Normal output operation will not be possible if OFF time the set time is too short. Set the value to at least 100 ms (contact output DOWN ON ti type). 0

Models with Instantaneous Contact Outputs

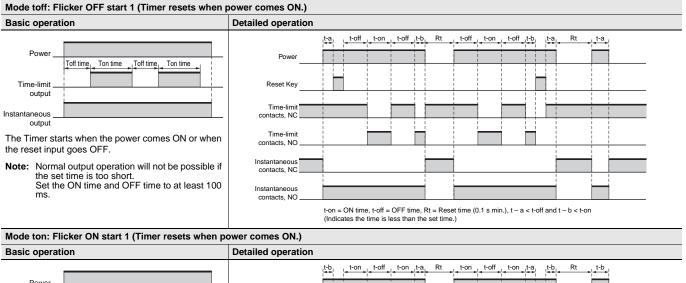

| Power | Power | |
|--|-------------------------------|--|
| Time-limit | Reset Key | |
| Instantaneous | Time-limit | |
| The Timer starts when the power comes ON or when the reset input goes OFF. | Time-limit contacts, NO | |
| Note: Normal output operation will not be possible if the set time is too short. Set the ON time and OFF time to at least 100 ms. | Instantaneous contacts, NC | |
| | | t-on = ON time, t-off = OFF time, Rt = Reset time (0.1 s min.), t – a < t-off and t – b < t-on (Indicates the time is less than the set time.) |


Note: H5CX-L8E -N Precautions

Set the Timer's set value before using the Timer in a self-holding circuit.

H5CX-A -N/-L -N

Timer/Twin Timer Selection Mode (Function Selection)

Select whether the H5CX is used as a timer or a twin timer in timer/twin timer selection mode. The H5CX is also equipped with a DIP switch monitor function, a convenient function that enables the settings of the DIP switch pins to be confirmed using the front display.

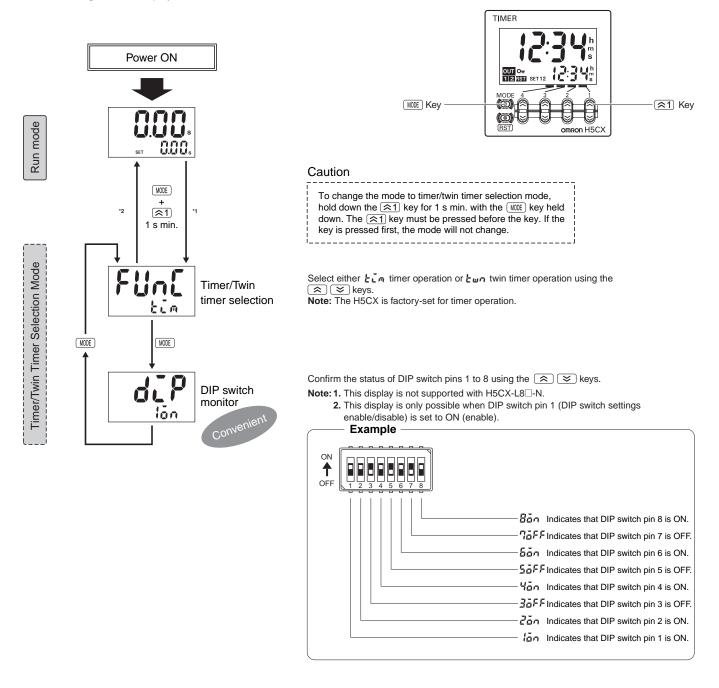


*1. When the mode is changed to timer/twin timer selection mode, the present value is reset and output turns OFF. Timing operation is not performed in timer/twin timer selection mode.

*2. Setting changes made in timer/twin timer selection mode are enabled when the mode is changed to run mode. If settings are changed, the HC5X is automatically reset (present value initialized, output turned OFF).

Key Protect Level

When the key-protect switch is set to ON, it is possible to prevent setting errors by prohibiting the use of certain operation keys by specifying the key protect level (KP-1 to KP-7).

The key protect indicator is lit while the key-protect switch is set to ON.

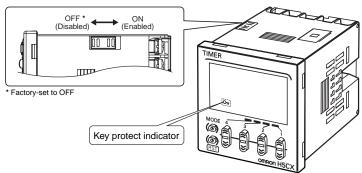

| | | | Det | ails | |
|---------------------------|--|----------------|---------------------------------------|-----------|-------------|
| Level | Meaning | Changing mode* | Switching display during operation | Reset Key | Up/down key |
| KP-1 (default setting) | MODE d 2 1 COMPANY CONTROL H5CX | Invalid | Valid | Valid | Valid |
| KP-2 | MODE TOTAL TOT | Invalid | Valid | Invalid | Valid |
| KP-3 | MODE 4 Common H5CX | Invalid | Valid | Valid | Invalid |
| КР-4 | MODE 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | Invalid | Valid | Invalid | Invalid |
| KP-5 | | Invalid | Invalid | Invalid | Invalid |
| KP-6 | MODE 4 2 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 | Invalid | Invalid | Valid | Valid |
| KP-7 | KP-7 | | Invalid | Invalid | Valid |

* Changing mode to Timer/Twin Timer Selection Mode or Function Setting Mode.

Self-diagnostic Function

The following displays will appear if an error occurs.

| Main display | Sub-display | Error | Output status | Correction method | Set value after reset |
|--------------|-------------|--|---------------|--|-----------------------|
| Ε Ι | Not lit | CPU | OFF | Either press the reset key or reset the power supply. No cha | |
| 62 | Not lit | Memory error (RAM) | OFF | Reset the power supply. | No change |
| 62 | Sün | Memory error EEPROM *1 | OFF | Reset Key | Factory setting |
| E3 *2 | No change | Output ON count alarm set value exceeded | No change | Reset Key | No change |

*1. This includes times when the life of the EEPROM has expired.

*2. The normal display and £3 will appear alternately. When the Reset Key is pressed, £3 will no longer be displayed even if the alarm set value is exceeded. (Monitoring is possible, however, because the Timer will continue without clearing the output ON count.)

Digital Timer H5CX-B -N

- H5CX Digital Timers with 6-digit Display, 2-stage Setting, and Forecast Output (DIN 48 x 48-mm)
- Times the daily operating hours of machinery and tools, predicting and notifying when maintenance is required.
- Easy-to-read backlit negative LCD with 6 digits (displays to 99999.9 h).
- The 2-stage settings and forecast output are ideal for maintenance applications.

Specifications

Ratings

| lassificat | ion | Digital Timer with 6-digit display, 2-stage setting, and forecast output | | | |
|-------------|--|--|--|--|--|
| | Power supply voltage | 12 to 24 VDC | | | |
| atings | Operating voltage fluctuation range | 90% to 110% rated supply voltage | | | |
| | Power consumption | Approx. 2.3 W *1 | | | |
| lounting | method | Flush mounting | | | |
| xternal co | onnections | Screw terminals | | | |
| Degree of | protection | IEC IP66, UL508 Type 4X (indoors) for panel front surface only and only when Y92S-29 Waterproof Packing is used | | | |
| Digits | | 6 digits | | | |
| Time range | e | 0.01 s to 9999.99 s, 1 s to 99 h 59 min 59 s, 0.1 min to 99999.9 min, 0.1 h to 99999.9 h | | | |
| Timer mod | le | Elapsed time (Up) | | | |
| | Input signals | Signal, reset, gate | | | |
| Inputs | Input method | $ \begin{array}{ c c c c c c c c c c c c c c c c c c c$ | | | |
| | Signal, reset, gate | Minimum input signal width: 1 or 20 ms (selectable, same for all input) | | | |
| Reset syst | em | Power resets (only for A mode), external and manual reset | | | |
| Power rese | et | Minimum power-opening time: 0.5 s (except for F-1 mode) | | | |
| Reset volta | age | 10% max. of rated supply voltage | | | |
| Sensor wa | iting time | 250 ms max. (Control output is turned OFF and no input is accepted during sensor waiting time.) | | | |
| | Output modes | A, F-1 | | | |
| Dutputs | Output type | Transistor output: NPN open collector, 100 mA at 30 VDC max. residual voltage: 1.5 VDC max. (Approx. 1 V) Leakage current: 0.1 mA max. | | | |
| Display | | 7-segment, negative transmissive LCD; Present value: 10-mm-high characters, red Set value: 6-mm-high characters, green ^{*2} | | | |
| Memory ba | ackup | EEPROM (overwrites: 100,000 times min.) that can store data for 10 years min. | | | |
| Operating | temperature range | -10 to 55°C (-10 to 50°C if counters are mounted side by side) (with no icing or condensation) | | | |
| Storage te | mperature range | -25 to 70°C (with no icing or condensation) | | | |
| Operating | humidity range | 25 to 85% | | | |
| Case color | r | Black (N1.5) | | | |
| Attachments | | Waterproof packing, flush mounting adapter, unit label | | | |

| Voltage | Applied voltage | Inrush current (peak value) | Time |
|--------------|-----------------|-----------------------------|--------|
| 12 to 24 VDC | 26.4 VDC | 4.4 A | 1.7 ms |

*2. The display is lit only when the power is ON.



Characteristics

| Accuracy of op and setting err (including tem voltage influer | perature and | Power-ON start: ±0.01% ±50 ms max. (See note 1.) Signal start: ±0.005%±0.03 ms max. (See note 1.) Signal start for transistor output model: ±0.005%±3 ms max. (See note 1 and 2.) If the set value is within the sensor waiting time at startup the control output of the H5CX will not turn ON until the sensor waiting time passes. Note: 1. The values are based on the set value. 2. The value is applied for a minimum pulse width of 1 ms. | | | |
|--|--------------|--|--|--|--|
| Insulation resi | stance | 100 MΩmin. (at 500 VDC) between current-carrying terminal and exposed non-current-carrying metal parts | | | |
| Dielectric strength | | 2,000 VAC, 50/60 Hz for 1 min between current-carrying metal parts and non-current-carrying metal parts 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuit | | | |
| Impulse withst | tand voltage | 1.0 kV (between power terminals) 1.5 kV (between current-carrying terminal and exposed non-current-carrying metal parts) | | | |
| Noise immunit | ty | \pm 480 V (between power terminals) and \pm 600 V (between input terminals), square-wave noise by noise simulator (pulse width: 100 ns/1 µs, 1-ns rise) | | | |
| Static immunit | ty | Destruction: 15 kV Malfunction: 8 kV | | | |
| Vibration | Destruction | 10 to 55 Hz with 0.75-mm single amplitude in three directions for 2 h each | | | |
| resistance Malfunction | | 10 to 55 Hz with 0.35-mm single amplitude in three directions for 10 min each | | | |
| Shock | Destruction | 300 m/s ² in three directions, three cycles | | | |
| resistance | Malfunction | 100m/s ² in three directions, three cycles | | | |
| Weight | | Approx. 105 g (Timer only) | | | |

Applicable Standards

| Approved safety standards | UL508/Listing, CSA C22.2 No. 14, conforms to EN 61812-1 (pollution degree 2/overvoltage category III) Conforms to VDE0106/P100 (finger protection). | | | | | | |
|---------------------------|--|---|--|--|--|--|--|
| EMC | (EMI) Emission Enclosure: (EMS) Immunity ESD: Immunity RF-interference: Immunity Conducted Disturbance: Immunity Burst: Immunity Surge: | EN61812-1 EN55011 Group 1 class A EN61812-1 EN61812-1 EN61000-4-2: 6 kV contact discharge (level 2) 8 kV air discharge (level 3) EN61000-4-3: 10 V/m (Amplitude-modulated, 80 MHz to 1 GHz) (level 3); 10 V/m (Pulse-modulated, 900 MHz 5 MHz) (level 3); 10 V/m (Pulse-modulated, 900 MHz 5 MHz) (level 3) EN61000-4-6: 10 V (0.15 to 80 MHz) (level 3) EN61000-4-6: 2 kV power-line (level 3); 1 kV I/O signal-line (level 4) EN61000-4-5: 1 kV line to lines (power and output lines) (level 3); 2 kV line to ground (power and output lines) (level 3) | | | | | |

I/O Functions

| | Start signal | | Starts timing. | |
|---------|--------------------------------------|-------------------------|--|--|
| Inputs | Reset | | Resets present value. (The present value returns to 0.) Timing stops and control output turns OFF while reset input is ON. Reset indicator is lit while reset input is ON. | |
| | Gate | | Inhibits timer operation. | |
| | Forecast value Control output (OUT2) | | Turns ON when the present value reaches the set value. | |
| Outputo | setting | Forecast output (OUT1) | Turns ON when the present value reaches the forecast value. | |
| Outputs | Absolute value | Control output 2 (OUT2) | Turns ON when the present value reaches set value 2. | |
| | setting Control output 1 (OUT1) | | Turns ON when the present value reaches set value 1. | |


Response Delay Time When Resetting (Transistor Output)

The following table shows the delay from when the reset signal is input until the output is turned OFF. (Reference value)


| Minimum reset signal width | Output delay time |
|----------------------------|-------------------|
| 1 ms | 0.8 to 1.2 ms |
| 20 ms | 15 to 25 ms |

Connections

Block Diagram



Terminal Arrangement

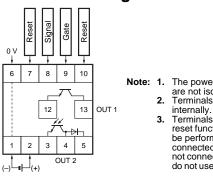


Note: 1. The power supply and input circuit are not isolated. Terminals 1 and 6 are connected

Terminals 7 and 10 have the same reset function. The same function will be performed whichever terminal is connected. Terminals 7 and 10 are not connected internally, however, so do not use them for cross-over wiring.

Input Circuits

Signal, Reset, and Gate Input


No-voltage Inputs (NPN Inputs) Voltage Inputs (PNP Inputs)



Approx. 4.7 kΩ Internal INC circuit

Transistor Output

- · The transistor output of the H5CX is insulated from the internal circuitry by a photocoupler, so the transistor output can be used as both NPN and PNP output.
- The diode connected to the collector of the output transistor is used to absorb inverted voltage that is generated when an inductive load is connected to the H5CX.

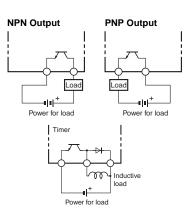

Input Connections

The inputs of the H5CX-B are no-voltage (short-circuit or open) inputs or voltage inputs.

(The leakage current is approx. 12 mA when the impedance is 0 Ω .)


No-voltage Inputs (NPN Inputs)

Open Collector

No-contact

input

Note: 1. 2.

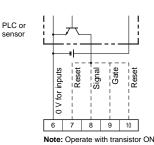


No-voltage Input Signal Levels


Short-circuit level (Transistor ON)

Residual voltage: 3 V max.
Impedance when ON: 1 kΩ max.


Open level (Transistor OFF) Impedance when OFF: 100 kΩ min

Voltage Output

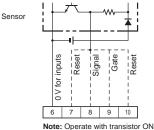



DC Two-wire Sensor

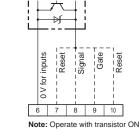

Applicable Two-wire Sensor Leakage current: 1.5 mA max.

Switching capacity: 5 mA min.


 Residual voltage: 3.0 VDC max.

Operating voltage: 10 VDC

Contact input Use contacts which can adequately switch 5 mA at 10 V Voltage Inputs (PNP Inputs)


No-contact Input (NPN Transistor)

Voltage Input Signal Levels High level (Input ON): 4.5 to 30 VDC Low level (Input OFF): 0 to 2 VDC

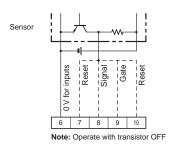


The DC voltage must be 30 VDC max. Input resistance: Approx. 4.7 $k\Omega$


No-contact Input (PNP Transistor)

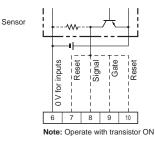

Contact Input



Contact Input



Note: Operate with relay ON

H5CX-B -N


Nomenclature


Display Section

1. Key Protection Indicator (orange) Lit when the reset input or Reset Key is ON.

2. Control Output Indicator (orange) Forecast value setting Forecast output ON: OUT 1 is lit. Control output ON: OUT 2 is lit. Absolute value setting Control output 1 ON: OUT 1 is lit. Control output 2 ON: OUT 2 is lit.

- 3. Reset Indicator (orange) Lit when the reset input or Reset Key is ON.
- 4. Present Value Display (red) Character height: 10 mm If the time range is 0.0 min or 0.0 h, the decimal point flashes to indicate timing operation.
- 5. Time Unit Indicators (green)
- 6. Set Value (green)
- Character height: 6 mm 7. Set Value 1, 2 Indicator (green)



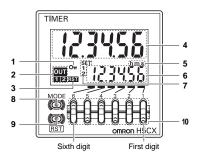




Operation Key

- 8. Mode Key
 - (Changes modes and setting items)
- 9. Reset Key
- Resets present value and output.

10. Up Keys 1 to 6

Switches



12. DIP Switch



Key Protect Level

When the Key-protect Switch is ON, key operations are prohibited according to the settings for DIP switch pins 6 to 8, thus preventing setting errors.

The Key-protect Switch can be turned ON and OFF while the power is ON.

The Key Protection Indicator is lit orange when the Key-protect Switch is ON.

Panel Cutouts

to DIN43700)


If the key protect switch is ON, you will not be able to switch to Function Setting Mode.

Dimensions

Digital Timers

Digital Timers H5CX-BWSD-N (Flush Mounting Models)






Note: M3.5 terminal screw (effective length: 6 mm)

Dimensions with Flush Mounting Adapter H5CX-BWSD-N (Provided with Adapter and Waterproof Packing)




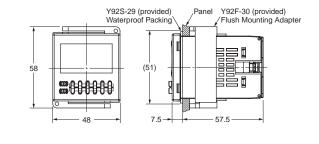

Accessories (Order Separately)

Refer to page 12 for details.

.



Note: 1. The mounting panel thickness should be 1 to 5 mm.
2. To allow easier operation, it is


Panel cutouts areas shown below. (according

|- 60 min. •45^{+0.6} -+|

 To allow easier operation, it is recommended that Adapters be mounted so that the gap between sides with hooks is at least 15 mm (i.e., with the panel cutouts separated by at least 60 mm).
 It is possible to mount Timers side by

(unit: mm)

 It is possible to mount Timers side by side, but only in the direction without the hooks. However, if Timers are mounted side by side, water resistance will be lost.



Operating Procedures


DIP Switch Settings

All functions are set using the DIP switch.


| | Item | OFF | ON | | Pin 1 | Pin 2 | Time range | |
|----|---|---------------------|------------------|-------------------|-------|-------|--|--|
| 1 | Ŧ | Refer to the | table on the | | OFF | OFF | 0.1 h to 99999.9 h | - |
| 2 | Time range | rig | ht. | \rightarrow | ON | OFF | 0.01 s to 9999.99 s | - |
| 3 | Output modes | F-1 mode | A mode | | OFF | ON | 0 h 00 min 01 s to 99 h 59 min 59 s | _ |
| 4 | Input signal width | 20 ms | 1 ms | | | | | _ |
| 5 | NPN/PNP input mode | NPN (no-voltage) | PNP (voltage) | | ON | ON | 0.1 min to 99999.9 min | - |
| 6 | Reset Key protection | Disabled | Enabled | | | | | |
| 7 | Up Key protection | Disabled | Enabled | | | TIMER | | |
| 8 | Mode Key protection | Disabled | Enabled | | | | | |
| No | te: 1. All the pins are fa 2. DIP switch setting turned ON again. and power-up.) | s are effective | when the powe | r is tallation | | | | $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$ |

Operation in Run Mode

Set the digits for the set values using the corresponding 😒 Key.

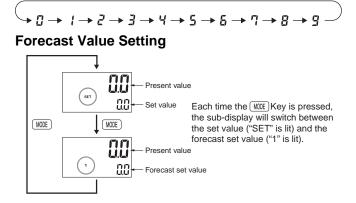


Absolute Value Setting

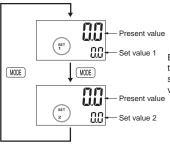

Each time the $\fbox{(MOE)}$ Key is pressed, the sub-display will switch between set value 1 ("SET 1" is lit) and set value 2 ("SET 2" is lit).

H5CX-B -N

Operation in Function Setting Mode

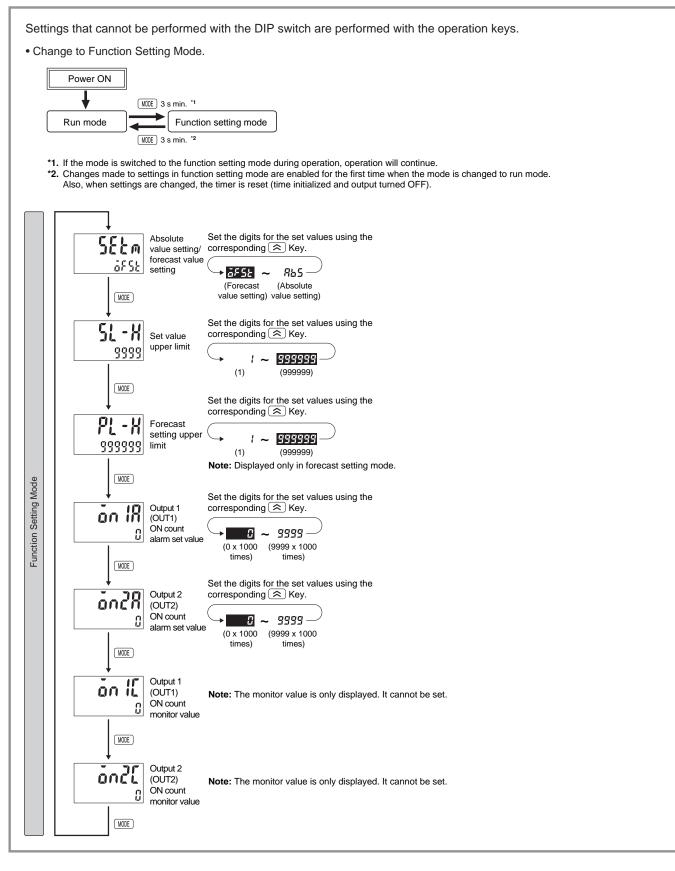


8 OMRON

Explanation of Functions Absolute value setting/forecast value setting

(582m)

Set value 1 can be set as the forecast value setting $(\delta F 5 E)$ or the absolute value setting (865).

Forecast Value Setting

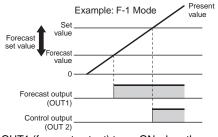


- · OUT1 (forecast output) turns ON when the present value reaches the forecast value. Forecast value = Set value - Forecast set value
- Note: The forecast set value is used to set the deviation for the set value. · OUT2 (control output) turns ON when the present value reaches
- the set value. If the forecast set value ≥ set value, OUT1 (forecast output) will turn
- ON as soon as timing starts.

Self-diagnostic Function

The following displays will appear if an error occurs.

Absolute Value Setting

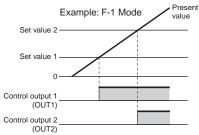

- OUT1 (control output 1) turns ON when the present value reaches set value 1.
- OUT2 (control output 2) turns ON when the present value reaches set value 2.


Refer to pages 18 and 28 for information on other functions.

| Main display | Sub-display | Error | Output status | Correction method | Set value after reset |
|--------------|--|------------------------|---------------|---|-----------------------|
| E I | Not lit | CPU | OFF | Either press the Reset Key or reset the power supply. | No change |
| 53 | Not lit | Memory error (RAM) | OFF | Reset the power supply. | No change |
| 53 | SUm | Memory error EEPROM *1 | OFF | Reset Key. | Factory setting |
| E3 *2 | No change Output ON count alarm set value exceeded | | No change | Reset Key | No change |

*1. This includes times when the life of the EEPROM has expired.

*2. The normal display and £3 will appear alternately.
 When the Reset Key is pressed, £3 will no longer be displayed even if the alarm set value is exceeded. (Monitoring is possible, however, because the Timer will continue without clearing the output ON count.)

Timing Charts

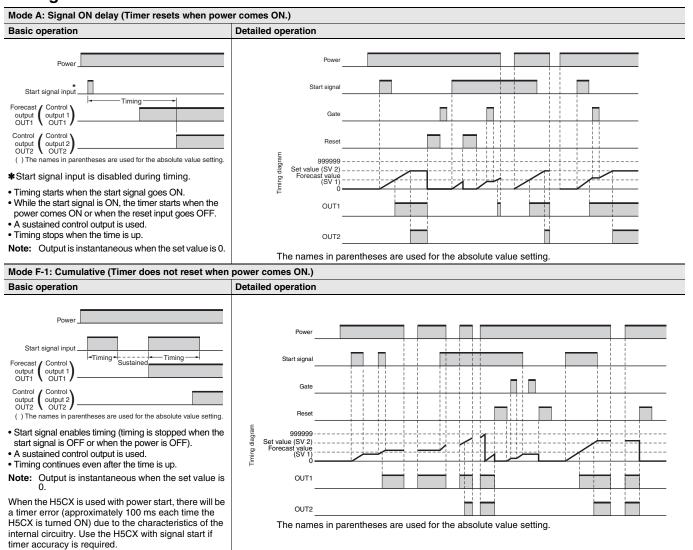

Note:

The forecast value = set value - torecast set value
 The forecast set value is used to set the deviation for the set value.

Safety Precautions for All H5CX Series (Common)

Do not allow pieces of metal, wire clippings, or fine metallic shavings or fillings from installation to enter the product. Doing so may occasionally result in electric shock, fire, or malfunction.



Minor injury due to explosion may occasionally occur. Do not use the Timer where subject to flammable or explosive gas.



Fire may occasionally occur. Tighten the terminal screws to the rated torque. H5CX terminals: 6.55 to 7.97 lb-in (0.74 to 0.90 N·m) P2CF Socket terminals: 4.4 lb-in (0.5 N·m)



Minor injury due to electric shock may occasionally occur. Do not touch any of the terminals while power is being supplied. Be sure to mount the terminal cover after wiring.



The life expectancy of the output relay varies considerably according to its usage. Use the output relay within its rated load and electrical life expectancy. If the output relay is used beyond its life


expectancy, its contacts may become fused or there may be a risk of fire. Also, be sure that the load current does not exceed the rated load current and when using a heater, be sure to use a thermal switch in the load circuit.

Minor electric shock, fire, or malfunction may occasionally occur. Do not disassemble, modify, or repair the Timer or touch internal components.




Precautions for Safe Use

· The panel surface of the H5CX is water-resistant (conforming to NEMA4, IP66, UL Type 4X (Indoor Use Only). To protect the internal circuits from water penetration through the space between the H5CX and operating panel, waterproof packing is included. Attach the Y92F-30 Adapter with sufficient pressure with the reinforcing screws so that water does not penetrate the panel.



- When mounting the Timer to a panel, tighten the two mounting screws alternately, a little at a time, so as to keep them at an equal tightness. If the panel screws are tightened unequally, water may enter the panel.
- Store the Timer at the specified temperature. If the Time has been stored at a temperature of less than -10°C, allow the Time to stand at room temperature for at least 3 hours before use.
- Mounting the Timer side-by-side may reduce the life expectancies of internal components.
- Use the Timer within the specified ranges for the ambient operating temperature and humidity.
- · Do not use in the following locations:
 - · Locations subject to sudden or extreme changes in temperature.
- · Locations where high humidity may result in condensation.
- · Do not use the Timer outside of the rated ranges for vibration, shock, water exposure, and oil exposure.
- · Do not use this Timer in dusty environments, in locations where corrosive gasses are present, or in locations subject to direct sunlight.
- · Install the Timer well away from any sources of static electricity, such as pipes transporting molding materials, powders, or liquids.

- Internal elements may be destroyed if a voltage outside the rated voltage range is applied.
- · Be sure that polarity is correct when wiring the terminals.
- Separate the Timer from sources of noise, such as devices with input signals from power lines carrying noise, and wiring for I/O signals.
- · Do not connect more than two crimp terminals to the same terminal.
- Up to two wires of the same size and type can be inserted into a single terminals.
- Use the specified wires for wiring. Applicable Wires: AWG 18 to AWG 22, solid or twisted, copper.
- · Install a switch or circuit breaker that allows the operator to immediately turn OFF the power, and label it to clearly indicate its function.
- When the Timer is operated with no-voltage input (NPN input), approximately 14 V is output from the input terminals. Use a sensor that contains a diode.



- · Use a switch, relay, or other contact so that the rated power supply voltage will be reached within 0.1 seconds. If the power supply voltage is not reached quickly enough, the Timer may malfunction or outputs may be unstable.
- Use a switch, relay, or other contact to turn the power supply OFF instantaneously. Outputs may malfunction and memory errors may occur if the power supply voltage is decreased gradually.
- H5CX-A□-N/-L□-N: When changing the set value during a timing operation, the output will turn ON if the set value is changed as follows because of the use of a constant read-in system:

Elapsed time (UP) mode: Present value \geq Set value Remaining time (DOWN) mode: Elapsed time ≥ Set value (The

present value is set to 0.)

When in the remaining time mode, the amount the set value is changed is added to or subtracted from the present value. Operation with a set value of 0 will vary with the output mode. Refer to the timing charts on page 20.

H5CX-B□-N:

When changing the set value during a timing operation, the output will turn ON if the set value is changed as follows because of the use of a constant read-in system:

1. Forecast Value Setting

When the present value \geq the set value, OUT2 (control output) turns ON.

When the present value \geq the forecast value (forecast value = set value - forecast set value), OUT1 (forecast output) turns ON. 2. Absolute Value Setting

When the present value \geq set value 2, OUT2 (control output 2) turns ON.

When the present value \geq the forecast value (forecast value = set value - forecast set value), OUT1 (control output 1) turns ON.

When the set value is 0, the output turns ON the moment the signal is input. The reset operation turns OFF the output.


- Do not use organic solvents (such as paint thinners or benzine), strong alkali, or strong acids. They will damage the external finish.
- Confirm that indications are working normally, including the backlight LED, and LCD. The indicator LEDs, LCD, and resin parts may deteriorate more quickly depending on the application environment, preventing normal indications. Periodic inspection and replacement are required.
- The waterproof packing may deteriorate, shrink, or harden depending on the application environment. Periodic inspection and replacement are required.

Precautions for Correct Use

- H5CX models with a 24-VDC/12 to 24-VDC power supply use a transformer-free power supply method in which the power supply terminals are not isolated from the signal input terminals. If a nonisolating DC power supply is used, unwanted current paths may occasionally burn or destroy internal components depending on the wiring. Always check the wiring sufficiently before use.
- An inrush current of approx. 10 A will flow for a short time when the power supply is turned ON. If the capacity of the power supply is not sufficient, the Timer may not start. Be sure to use a power supply with sufficient capacity.
- Maintain voltage fluctuations in the power supply within the specified operating voltage range.
- When turning the power ON and OFF, input signal reception is possible, unstable, or impossible as shown in the diagram below.



- To allow for the startup time of peripheral devices (sensors, etc.), the Timer starts timing operation between 200 to 250 ms after power is turned ON. For this reason, in operations where timing starts from power ON, the time display will actually start from 249 ms. If the set value is 249 ms or less, the time until output turns ON will be a fixed value between 200 and 250. The present value display will start from 250 ms. (Normal operation is possible for set values of 250 ms or more.) In applications where a set value of 249 ms or less is required, use start timing with signal input.
- Inrush current generated by turning ON or OFF the power supply may deteriorate contacts on the power supply circuit. Turn ON or OFF to a device with the rated current of more than 10 A.
- Make sure that all settings are appropriate for the application. Unexpected operation resulting in property damage or accidents may occur if the settings are not appropriate.
- Do not leave the Timer for long periods at a high temperature with output current in the ON state. Doing so may result in the premature deterioration of internal components (e.g., electrolytic capacitors).
- EEPROM is used as backup memory when the power is interrupted. The write life of the EEPROM is 100,000 writes. The EEPROM is written at the following times:
 - When the power supply is turned OFF
 - When switching from Timer/Twin Timer Selection Mode or Function Setting Mode to Run Mode
- Dispose of the product according to local ordinances as they apply.
- Attach the front panel when using the Timer. The tabs in the middle of each of four sides secure the front panel to the main body. To remove the panel, widen the four tabs and pull the panel toward you. To mount the panel, fit all four tabs correctly into the grooves on the main body.

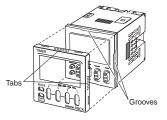

⚠ Conformance to EN/IEC Standards

- When conforming to EMC standards, refer to the information provided in this datasheet for cable selection and other conditions.
- This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.
- H5CX-A□-N/-L□-N:

Basic insulation is provided between the power supply and input terminals. (No insulation is provided between the power supply and input terminals for the H5CX- \Box D-N.)

Basic insulation is provided between power supply and output terminals, and between input and output terminals.

 H5CX-B□-N: No insulation is provided between the power supply and input terminals.

Basic insulation is provided between the power supply and output terminals.

- When double insulation or reinforced insulation is required, apply double insulation or reinforced insulation as defined in IEC 60664 that is suitable for the maximum operating voltage with clearances or solid insulation.
- Connect the input and output terminals to devices that do not have any exposed charged parts.

Warranty and Application Considerations

Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted. IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Disclaimers

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON *Warranty and Limitations of Liability.*

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your OMRON representative at any time to confirm actual specifications of purchased product.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

OMRON Corporation

Industrial Automation Company Control Devices Division H.Q. Industrial Component Division 2-2-1 Nishikusatsu, Kusatsu-shi, Shiga, 525-0035 Japan Tel: (81) 77-565-5160/Fax: (81) 77-565-5569

Regional Headquarters OMRON EUROPE B.V. Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388 OMRON Industrial Automation Global: www.ia.omron.com

OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2009 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice. CSM_3_1_0809 Printed in Japan Cat. No. L111-E1-01 0709