5003 | SERIES 1/2" BIMETAL DISC THERMOSTAT

Introduction

The 5003 series is a RoHS compliant, positive snap action, single pole / single throw, bimetallic thermostat which provides accurate and reliable sensing and switching in a single device. It is ideal for applications when space is at a premium with overall depth, without projecting terminals, being only 0.250 in.

The basic switch assembly is operated by a bimetal disc with positive, reinforced snap-action, which is known for its reliable repeatability. With several terminal and mounting options, the 5003 series offers excellent shock and vibration resistance due to the robust construction of its switch assembly. For high humidity and contaminating atmosphere applications, the device is sealed with a non-volatile resin. Narrow differential devices are ideal for control, while standard differentials can be used for high or low temperature limit switches.



Features

- Ideal for surface and air sensing
- RoHS compliant per EU directive 2002 / 95 / EC

Sensata

Technologies

- 1/2" disc button style
- Low profile design

Applications

- Automation
- Control
- PCB
- AC/DC Control
- Small Appliance
- Water Heater



SPECIFICATIONS

| Contact Ratings | Cycles 100,000 100,000 100,000 | Voltage 120 VAC 240 VAC, 24VDC 48 VDC | Amps (resistive) 5 3 1.5 | | | | | | |
|---------------------------|--|---|--|--|--|--|--|--|--|
| Contact Operations | Either close on rise (m | ither close on rise (make) or open on rise (break), SPST (Single Pole, Single Throw) | | | | | | | |
| Operating Temperature | +35°F to 325°F (+1.67°C to 162.78°C) | | | | | | | | |
| Temperature Tolerance | Standard of ±5°F with | Standard of $\pm 5^{\circ}$ F with nominal operating temperature settings in 5°F increments | | | | | | | |
| Long Term Exposure Limit | -40°F to 350°F (-40°C t | -40°F to 350°F (-40°C to 176.67°C) | | | | | | | |
| Dielectric Strength | 1500 Vrms 60Hz, 1 minute, terminals to case | | | | | | | | |
| Weight | 2.3 grams (0.08 oz) | | | | | | | | |




CONTACT OPERATION

| CODE | DESCRIPTION |
|------|----------------------------|
| 0 | Letter "O" = Open on Rise |
| C | Letter "C" = Close on Rise |




TERMINAL SELECTION

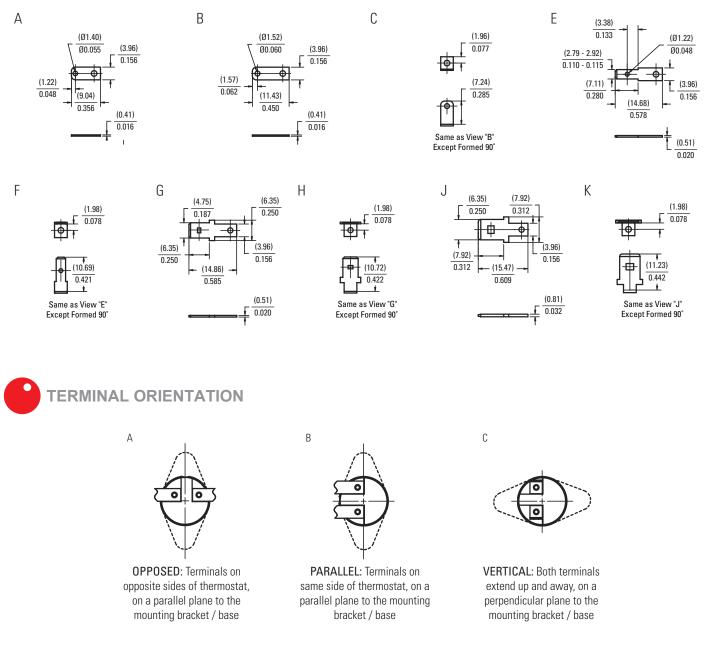

| Terminal orientation restrictions | | | | | | | | | | | | |
|-----------------------------------|---|---|---|---|---|----------------|---|---|----------------|---|---|--|
| 'A' (Opposed) | | | | | | 'B' (Parallel) | | | 'C' (Vertical) | | | |
| А | В | Е | G | J | А | В | E | С | F | Н | Κ | |

MOUNTING AND ENCLOSURE SELECTION

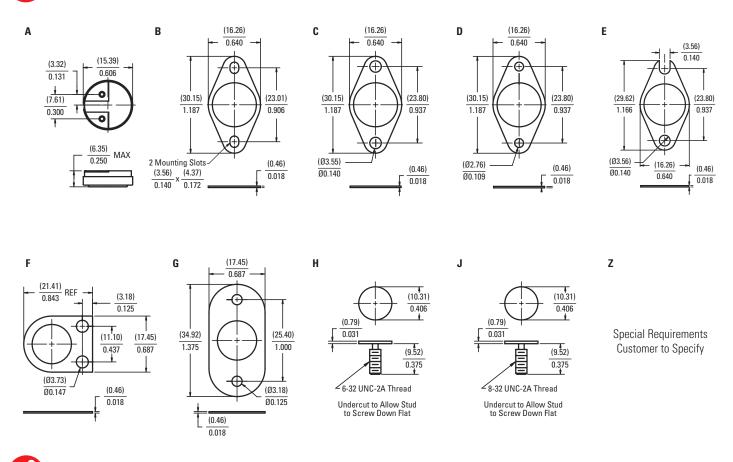

TEMPERATURE CODES AND TOLERANCE

| Temperature Scale Fahrenheit | | Celsius | Fahrenheit | Celsius | Fahrenheit | Celsius | |
|--|---------------|---------------|----------------|---------------|----------------|----------------|--|
| Top Temperature Settings | 35°F to 200°F | 1.7°C to 93°C | 201°F to 300°F | 94°C to 149°C | 301°F to 325°F | 150°C to 163°C | |
| Standard Top Temperature Tolerance (code) | ±5°F (A) | ±2.8°C (A) | ±8°F (B) | ±4.4°C (B) | ±10°F (C) | ±5.6°C (C) | |
| Nominal Temperature Differential | 15°F | 8.3°C | 25°F | 13.8°C | 30°F | 16.7°C | |

Note

• Select any temperature in the range of 35°F to 325°F. Standard choices fall on the 5°F increments, for example 140°F, 145°F, 150°F, 155° F... up to 320°F or 325°F

• Specify the °F temperature in the part numbering scheme as a three digit code without the '°F' in the part number. For example, for 200°F, put in code '200'

• Bottom Temperature in °F" equals the "Top Temperature in °F" minus "Nominal Differential in °F". For example 310°F - 30°F = 280°F

| Tolerance Code | А | В | C | Y (Bottom Temp Only) | | |
|----------------|--------|--------|--------|-----------------------|--|--|
| ±°F | ±5°F | ±8°F | ±10°F | Minimum | | |
| ±°C | ±2.8°C | ±4.4°C | ±5.6°C | Minimum | | |

Note

• The standard tolerance for the top temperature is based on the temperature range the top temperature falls in, please refer to the temperature setting chart, and select the appropriate code for a standard top temperature tolerance

• For bottom temperature tolerance a "Y" = minimum trip, which indicates the "reset" trip occurs at or above the lower temperature set point.



Close contacts on temperature rise, 5003 series, 0.187" horizontal quick-connects with opposed orientation, mounting bracket with two 0.140" x 0.172" mounting slots, 105°F top temperature with a ±5°F standard top tolerance and a standard 15°F differential between top and bottom temperature for temperature range of 35°F to 200°F, differential helps calculate a bottom temperature of 90°F with a standard minimum reset for contacts to open at or above the bottom temperature setpoint.

| | C | 53 | G | A | B | A | - 0 9 | 0 | Y |
|---|--------------------|--------------|---|---|---|---|-------|---|---|
| Contact Operation | | | | | | | | | |
| O, C See Contact Operation Table | | | | | | | | | |
| Family | | | | | | | | | |
| 5003 Series | | | | | | | | | |
| Terminal Selection | | | | | | | | | |
| A, B, C, E, F, G, H, J, K See Terminal Selection Table | | | | | | | | | |
| Terminal Orientation | | | | | | | | | |
| A, B, C See Terminal Orientation Table | | | | | | | | | |
| Mounting & Enclosure | | | | | | | | | |
| A, B, C, D, E, F, G, H, J, Z See Mounting and Enclosure Selection Table | | | | | | | | | |
| Top Temperature (in °F) | | | | | | | | | |
| See Temperature Codes and Tolerance Table (Av | vailable in Increm | ents of 5°F) | | | | | | | |
| Top Temperature Tolerance Code | | | | | | | | | |
| A, B, C See Temperature Code and Tolerance Table Bottom Temperature (in °F) | | | | | | | | | |
| See Temperature Codes and Tolerance Table | | | | | | | | | |
| Bottom Temperature Tolerance Code | | | | | | | | | |
| A, B, C, Y See Temperature Code and Tolerance Table | | | | | | | | | |

IMPORTANT NOTICE

These devices are not intended for use as service or repair components, strictly for use by Original Equipment Manufacturer. This product is not rated as explosion proof and should not be applied in any application where flammable vapors or dust is present. End of life failure of this device may result in either open or closed circuit condition, and as such, OEMs must apply end of life protection in series, per agency requirements.

Users are solely responsible for proper design, application and function of this product in the end product or system. Users must evaluate the suitability of these devices in their application with respect to Temperature Settings, Mechanical and Electrical Life Cycles, Electrical loads and Environmental conditions.

These products are not environmentally sealed and have exposed electrical components. They are not intended to be used in applications where exposure to condensing or dripping liquids, Immersion in liquids, or exposure to other environment contaminants may occur.

Excessive mechanical cycling, high electrical loading or exposure to liquids or other environmental contaminants, as noted above, may compromise the electrical insulating properties of these devices. Such conditions may result in electric insulation breakdown accompanied by localized heating. The device may remain permanently closed or open as a result of these conditions as well as at normal end of life.



DANGER

RISK OF MATERIAL DAMAGE AND HOT ENCLOSURE

- The product's side panels may be hot, allow the product to cool before touching
- Follow proper mounting instructions including torque values
 Do not allow liquids or foreign objects to enter this product
- Failure to follow these instructions can result in serious injury, or equipment damage.



- HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARCH FLASH • Disconnect all power before installing or working with this
- equipment
 Verify all connections and replace all covers before turning on

power Failure to follow these instructions will result in death or serious iniury

CONTACT US

+1 (888) 438 2214

+359 (2) 804 7165

Asia Pacific

ext 2808

sensors@sensata.com

Europe, Middle East & Africa

temperature-info.eu@sensata.com

sales.isasia@list.sensata.com

Rest of Asia +886 (2) 27602006

China +86 (21) 2306 1500

Japan +81 (45) 277 7117

Korea +82-10-9218-1179

India +91 (80) 67920890

Americas

Sensata Technologies, Inc. ("Sensata") data sheets are solely intended to assist designers ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, evaluation and judgment in designing Buyer's systems and products. Sensata data sheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular data sheet. Sensata may make corrections, enhancements, improvements and other changes to its data sheets or components without notice.

All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA.

www.sensata.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Sensata:

 053GAB120A-105Y
 053GAB180A-165Y
 053GAB230B-205Y
 C53GAB110A-095Y
 053GAB190A-175Y

 C53GAB190A-175Y
 C53GAB260A-230A
 053GAB175A-160Y
 053GAB155A-140Y
 C53GAB230B-205Y

 053GAB140A-125Y
 C53GAB140A-125Y
 C53GAB105A-090Y
 C53GAB120A-105Y
 C53GAB120A-105Y