



Factory Installed Panel Mount

TRIMPOT® POTENTIOMETER PANEL MOUNTING OPTIONS AND HARDWARE

Many Trimpot[®] Potentiometers are available for panel mount application.

This product option provides for maximum design flexibility.

To order Trimpot® Potentiometers with panel mount hardware attached by the factory, simply add an "M" or "Z" suffix to the Bourns part number per Table I.

Example: 3006P-1-100Z

To order military Trimpot® Potentiometers with panel mount hardware attached by the factory, order the military part number and add "with panel mount attached."

Example:


RT12C2PRC, with panel mount attached.

To order panel mounting accessories for customer installation, simply use the part number per Table II.


Example: H83P


NOTE: For complete product specifications, see data sheet for the trimmer model.


Torque - Apply maximum 8 in. lbs. on mounting nut when mounted on panel.




HEX NUT AND 10.31 (.406) MAX. \odot \odot 7.95 <u>33.35</u> (.313) (1.31) $\frac{6.35}{(.25)}$







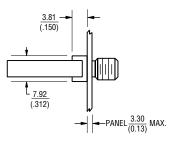


4

NOTES:


- 1. PROVIDED WITH LOCKWASHER AND MOUNTING NUT.
- .194 2. RECOMMEND PANEL HOLES. #10 DRILL (008)

NOTES: 1. PROVIDED WITH LOCKWASHER AND MOUNTING

- NUT.
- 2. RECOMMEND PANEL HOLE SIZE #7 DRILL $\frac{.200}{(.008)}$



BUSHING

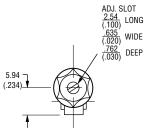









Factory Installed Panel Mount


Models 3292

Models RT22/RTR22/RJ22 3250/3252

X, L and W Styles

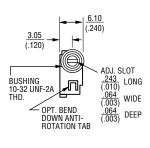


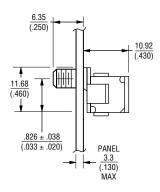


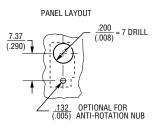


NOTES:

1. PROVIDED WITH LOCKWASHER AND MOUNTING NUT.

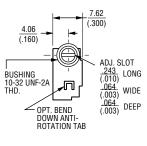

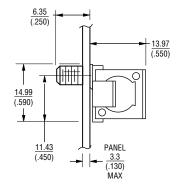

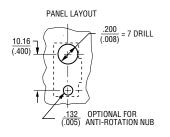



NOTES:


1. PROVIDED WITH LOCKWASHER AND MOUNTING NUT.

Models RT24/RTR24/3290

H and W Styles - 3290 X & W Styles-RT24/RTR24

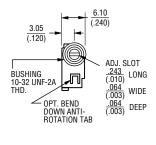


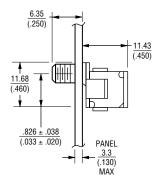




NOTES:

1. PROVIDED WITH LOCKWASHER AND MOUNTING NUT.

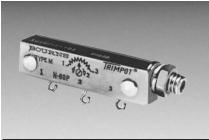

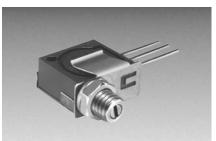

Customer Installed Panel Mount - Unsealed

HEX NUT AND LOCKWASHER

SEE TABLE II FOR PANEL MOUNT PART NUMBER

H-58P Panel Mount

Multiturn Modules

10.31

(.406) MAX.

ł

H-65P Panel Mount

1/2 Inch Square Multiturn Models



•


H-83P Panel Mount


22.10

(.870)

Adapter for Models 3005 AND 3006

The H-83P Adapter is used with Models 3005 and 3006. Order separately and simply snap fit the trimmer in the plastic case. The H-83P with lock-washer and mounting nut is available in 50-piece lots.

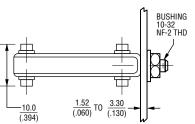


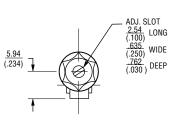



NOTES:

- 1. PROVIDED WITH LOCKWASHER AND MOUNTING NUT.
- 2. RECOMMEND PANEL HOLES. #10 DRILL $\frac{.194}{(.008)}$

*SPECIFY H82 IF PANEL SEAL IS REQUIRED.

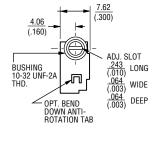


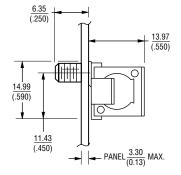

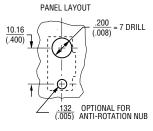

NOTES:

- 1. PROVIDED WITH LOCKWASHER AND MOUNTING NUT.
- 2. DRAWINGS SHOWN WITH TRIMMER. ORDER PART SEPARATELY




7.62

5/16-32 UNEF THREAD

> <u>5.54</u> (.218)

NOTES:

1. DRAWINGS SHOWN WITH TRIMMER. ORDER PART SEPARATELY

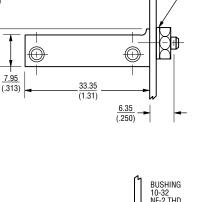






Customer Installed Panel Mount

H-114P/115P/116P Panel Mount

3/8 Inch Square Multiturn Models

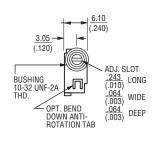

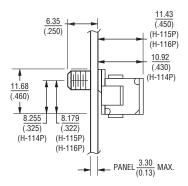




Notes:


- 1. Provided with lockwasher and mounting nut.
- 2. Drawings shown with trimmer. Order part separately.

H-117P Panel Mount

3/8 Inch Square Multiturn Models

4.06 (.160) BUSHING 10-32 UNF-2A HD. (.025) HD. (.025) (.0

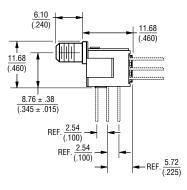



Notes:

- 1. Provided with lockwasher and mounting nut.
- 2. Drawings shown with trimmer. Order part separately.

BOURNS


TABLE I FACTORY INSTALLED PANEL MOUNTS

	P/N WITH	
STANDARD P/N	PANEL MOUNT	
3005P-1-(RC)	3005P-1-(RC) Z	
3006P,Y, or W-1-(RC)	3006P,Y, or W-1-(RC) Z	
3009P or Y-1-(RC)	3009P or Y-1-(RC) Z	
3057L,J,P, or Y-1-(RC)	3057L,J,P, or Y-1-(RC) M	
3059L,J,P, or Y-1-(RC)	3059L,J,P, or Y-1-(RC) M	
3250L or W-1-(RC)	3250L or W-1-(RC) M	
3252L or W-1-(RC)	3252L or W-1-(RC) M	
3290 H or W-1-(RC)	3290H or W-1-(RC) M	
3292L,W, or X-1-(RC)	3292L,W, or X-1-(RC) M	
3296W or X-1-(RC)	3296W or X-1-(RC) M	

TABLE IIRETRO-FIT PANEL MOUNTS FORINSTALLATION BY CUSTOMER

	ORDER PANEL MOUNT		
STANDARD P/N	P/N		
3005P-1-(RC)	H-83P		
3006P,Y, or W-1-(RC)	H-83P		
3057L,J,P, or Y-1-(RC)	H-58P* SCREW ASSY.		
3059L,J,P, or Y-1-(RC)	H-58P* SCREW ASSY.		
3250L, W, X-(RC)	H-65P-1*		
3252L or W-1-(RC)	H-65P-3*		
3252X-1-(RC)	H-65P-5*		
3290 H or W-1-(RC)	H-114P*		
3292L-1-(RC)	H-115P*		
3292W OR X-1-(RC)	H-116P*		
RT12P,Y,L	H-58P* SCREW ASSY.		
RJ12P,Y	H-58P* SCREW ASSY.		
RT22L,W, X,			
RTR22L,W, X	H-65P-1*		
RJ22L,W	H-65P-3*		
RJ22X	H-65P-5*		
RT24W /			
RTR24W OR X	H-114P*		
RJR24W OR X	H-117P*		

*Specify H-82 if panel seal is required.

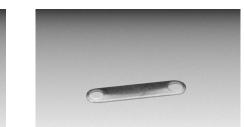

Hardware For Special Mounting Applications


BOURNS

H-82 Panel Seal

bushings.


H-25/H-28 Stacking Straps

Models 3250, 3252 (H-25) and 3292 (H-28).

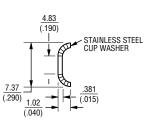

For all panel mounts with size 10-32





DIMENSIONS	H-25	H-28
А	<u>.236</u> (.093)	<u>.178</u> (.070)
В	<u>.363</u> (.143)	<u>.318</u> (.125)
С	<u>1.321</u> (.520)	<u>1.064</u> (.419)
THICKNESS	<u>.51</u> (.02)	

To be used with the following to provide panel seal:

H-58P H-65P-1 H-65P-3 H-65P-5 H-114P H-115P H-116P

H-117P