



Contents





1	Key Features	2
2	Technical Specification.....	2
3	Introduction.....	2
4	Installation	2
5	Wiring	2
6	Commissioning.....	3
7	Mounting Template	3
8	Wiring Diagram.....	4
9	Troubleshooting.....	5
10	Recommendation & Safety Requirements	5
11	Electrostatic Discharge (ESD).....	5



UNITED AUTOMATION LTD

Southport Business Park
Wight Moss Way
Southport, PR8 4HQ
ENGLAND

Tel: 0044 (0) 1704 – 516500
enquiries@united-automation.com
www.united-automation.com

   unitedautomationltd  UA_Limited



1 Key Features

- Energy saving.
- provides heat for a pre-determined time period.
- Extends lamp Life.
- Energy saving.
- Control up to 4 x 1500W lamps.
- Low-cost.
- Soft-start/zero-voltage switch-off.
- Easy to install.

2 Technical Specification

Supply Voltage	230V AC ±10% @ 50/60Hz
Supply Voltage	6kW Max.
Lamp On-Time	1 to 60 minutes
Current Consumption (control circuit)	20mA
Terminals	6.0mm ² Rising Clamp
Operating Temperature	-20 to 40°C
Protection Rating	IP65
Gland Diameter	Max. Cable Entry 2.5mm ²
Enclosure Dimensions (W x L x H)	130x130x75 (mm)

3 Introduction

The Infresco-T 6kW is part of a family of controllers designed to provide energy saving when used with quartz infrared halogen lamps or other heating and lighting products. The 'T' model switches the lamps on for a predetermined time period of between 1 and 30 minutes. The microcontroller-based unit incorporates zero-voltage switching and a soft-start function to eliminate the lamps' initial high inrush current – potentially increasing lamp life by as much as 30%. Installation of the unit is simple and once installed is relatively maintenance-free.

4 Installation

SAFETY FIRST!

Please read these instructions before installing and operating this product.

The Infresco- unit should be positioned with the three fixed cable glands facing down and securely fixed via the four mounting holes accessible from the front of the unit. Round cable is recommended to avoid water ingress.

5 Wiring

It is recommended that installation and maintenance of this equipment should be done with reference to the current edition of the I.E.E. wiring regulations (BS7671) by suitably qualified/trained personnel. These regulations contain important requirements regarding safety of electrical equipment (for International Standards refer to I.E.C/ directive IEC950).

Warning! Isolate the mains supply before commencing any work on the unit. Failure to do so could result in serious injury or fatality.

The unit is fitted with three cable glands. Only one cable should be fitted per gland to prevent degrading the unit's IP rating. To connect 4 lamps, refer to the 'Wiring Diagram' on the next page for an alternative configuration using two junction boxes.

The mains supply connects to the terminal block marked 'LINE'. Connect the supply **LIVE** to the 'L' terminal, **NEUTRAL** to the 'N' terminal and **EARTH** to the 'E' terminal.

The lamps connect to the terminal block marked 'LOAD'. Connect the load **LIVE** to the 'L' terminal, **NEUTRAL** to the 'N' terminal and **EARTH** to the 'E' terminal.

Important! Ensure all earth wires are connected to maintain earth continuity to the lamp fittings.

Check all wiring and make sure the cable glands are tightened.

UNITED AUTOMATION LTD

Southport Business Park
Wight Moss Way
Southport, PR8 4HQ
ENGLAND

Tel: 0044 (0) 1704 – 516500
enquiries@united-automation.com
www.united-automation.com
unitedautomationltd UA_Limited



**united
automation**




6 Commissioning

Set the on-time preset (VR2) to a time period of between 1 and 60 minutes (see 'Mounting Template' to locate VR2). Replace the lid and switch on the mains supply to the unit. Press the push-button on the front of the unit to switch the lamps on.

7 Mounting Template

IMPORTANT! When wall mounting, the unit must be orientated with the cable glands facing down.

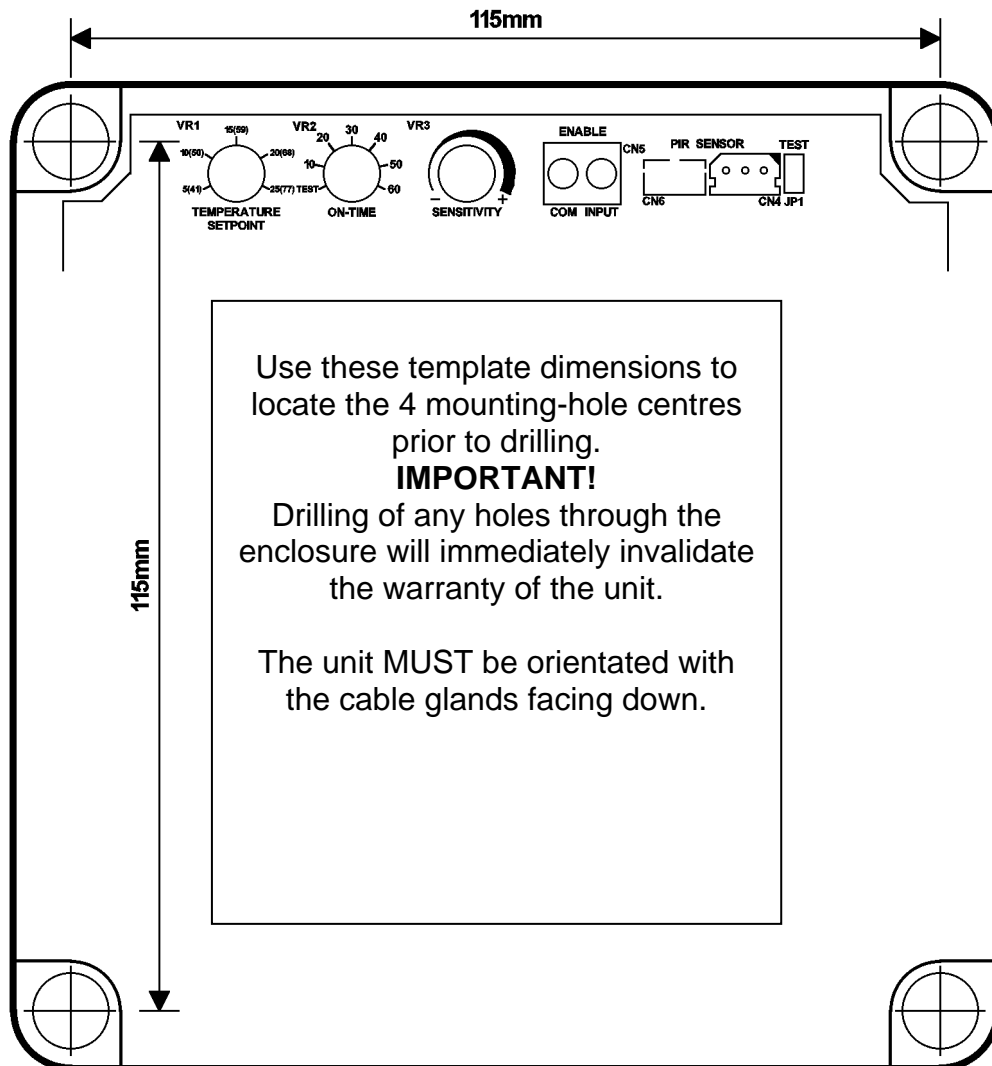

UNITED AUTOMATION LTD


Southport Business Park
Wight Moss Way
Southport, PR8 4HQ
ENGLAND

Tel: 0044 (0) 1704 – 516500
enquiries@united-automation.com
www.united-automation.com

unitedautomationltd UA_Limited



8 Wiring Diagram

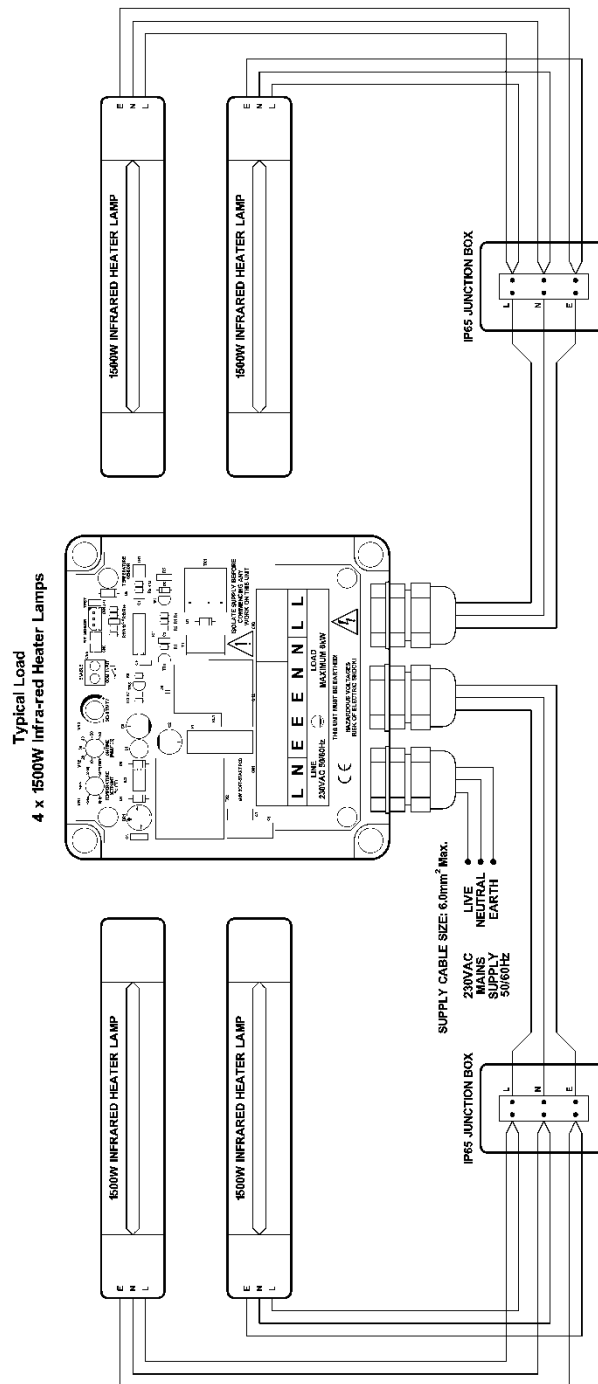

UNITED AUTOMATION LTD

Southport Business Park
 Wight Moss Way
 Southport, PR8 4HQ
 ENGLAND

Tel: 0044 (0) 1704 – 516500
 enquiries@united-automation.com
 www.united-automation.com

unitedautomationltd UA_Limited



Warning! Isolate the mains supply before commencing any work on the unit. Failure to do so could result in serious injury or fatality.

Problem: Lamps do not switch on.

Solution:

- Check the mains supply to the unit is switched on.
- Check the LINE and LOAD wiring connections to the unit and lamps. Fit a lamp that you know is in working order.
- Contact your supplier.

Problem: Lamps do not switch off.

Solution:

- Check the on-time preset (VR2) is set correctly.
- Contact your supplier.

10 Recommendation & Safety Requirements

Other documents, which may be appropriate for your applications, are available on request.

Code	Identity	Description
X10255	SRA	Safety requirements: Addressing the Low Voltage Directive (LVD) including, Thermal Data/Cooling, Live Parts Warning, Earthing Requirements, and Fusing recommendations
P01.1	COS	UAL Conditions of Sale

Note: it is recommended that installation and maintenance of this equipment should be carried out by suitably qualified personnel, with reference to the current edition of the I.E.T. Wiring Regulations BS7671. The regulations contain important requirements regarding the safety of electrical equipment.

11 Electrostatic Discharge (ESD)

This product range has been identified as requiring protection from electrostatic discharge (ESD). They include integrated circuits (IC's) that may be damaged or degraded if mishandled. They are much less vulnerable when built in-circuit and suitable and sufficient precautions are taken when being handled.

To address this matter, when the products are sold separately they are protected in an ANTI-STATIC polyethylene bag.

Appropriate care should be taken when handling the units for installation.

Further supporting data is available on request or on our website:- SWP05-06 – A guide to ESD







Not for general waste

UNITED AUTOMATION LTD

Southport Business Park
Wight Moss Way
Southport, PR8 4HQ
ENGLAND

Tel: 0044 (0) 1704 – 516500
enquiries@united-automation.com
www.united-automation.com




 unitedautomationltd
 
 UA_Limited

