

FXS Series  
INSTRUCTION MANUAL

TCD220027AB

Autonics

Thank you for choosing our Autonics product.  
**Read and understand the instruction manual and manual thoroughly before using the product.**  
**For your safety, read and follow the below safety considerations before using.**  
**For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.**  
Keep this instruction manual in a place where you can find easily.  
The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.  
Follow Autonics website for the latest information.

Safety Considerations

- Observe all ‘Safety Considerations’ for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

**⚠ Warning** Failure to follow instructions may result in serious injury or death.

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime / disaster prevention devices, etc.)**  
Failure to follow this instruction may result in personal injury, economic loss or fire.
- Do not use the unit in the place where flammable / explosive / corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**  
Failure to follow this instruction may result in explosion or fire.
- Install on a device panel to use.**  
Failure to follow this instruction may result in fire or electric shock.
- Do not connect, repair, or inspect the unit while connected to a power source.**  
Failure to follow this instruction may result in fire or electric shock.
- Check ‘Connections’ before wiring.**  
Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.**  
Failure to follow this instruction may result in fire or electric shock.

**⚠ Caution** Failure to follow instructions may result in injury or product damage.

- When connecting the power / sensor input and relay output, use AWG 20 (0.50 mm<sup>2</sup>) cable or over, and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N m.**  
Failure to follow this instruction may result in fire or malfunction due to contact failure.
- Use the unit within the rated specifications.**  
Failure to follow this instruction may result in fire or product damage.
- Use a dry cloth to clean the unit, and do not use water or organic solvent.**  
Failure to follow this instruction may result in fire or electric shock.
- Keep the product away from metal chip, dust, and wire residue which flow into the unit.**  
Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in ‘Cautions during Use’.  
Otherwise, it may cause unexpected accidents.
- Power supply should be insulated and limited voltage / current or Class 2, SELV power supply device.
- Use the product, 0.1 sec after supplying power.
- When supplying or turning off the power, use a switch or etc. to avoid chattering.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- When the counter is operating, in case of contact input, set count speed to low speed mode (1 cps or 30 cps) to operate. If set to high speed mode (2 k, 5 kcps) counting error occurs due to chattering.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.  
Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in ‘Specifications’)
  - Altitude max. 2,000 m
  - Pollution degree 2
  - Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations.  
For selecting the specified model, follow the Autonics website.

FX	①	②	-	③	④
----	---	---	---	---	---

- ① Display digits**  
4: 4-digit  
5: 5-digit

**② Size**  
S: DIN W 48 × H 48 mm
- ③ Output**  
1P: 1-stage setting (4-digit)  
I: indicator (5-digit)


**④ Power supply**  
2: 24 VAC~ ± 10 % 50 / 60 Hz,  
24 - 48 VDC≐ ± 10 %  
4: 100 - 240 VAC~ ± 10 % 50 / 60 Hz

Product Components


- Product (+ bracket)
- Instruction manual

Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.

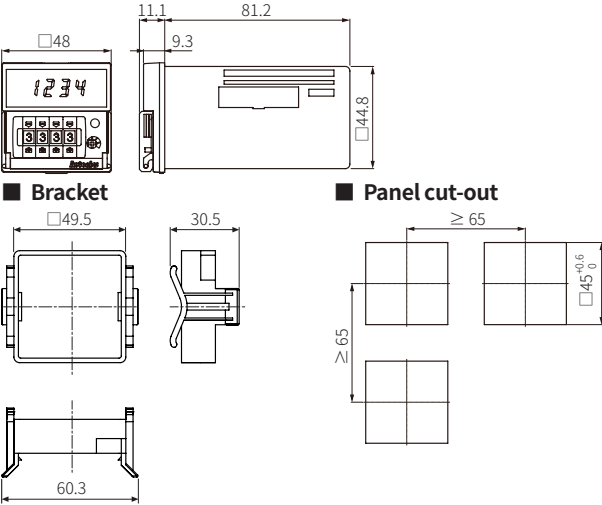

Connections

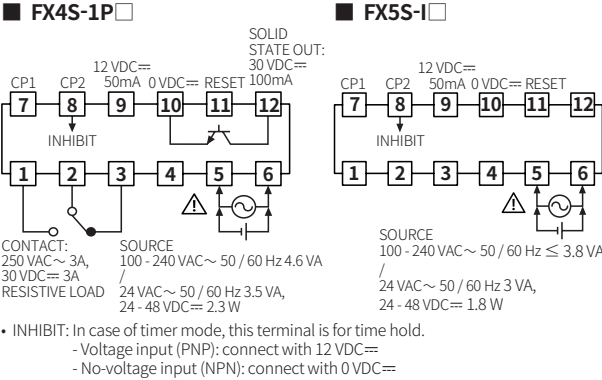

Error

- When error occurs, the output turns OFF.
- Indicator model does not have error display function.


Display	Description	Troubleshooting
Error	Setting value = 0	Change the setting value anything but 0.

Specifications

Model	FX4S-1P□	FX5S-I□
Display digits	4-digit	5-digit
Character size	W 3.8 × H 7.6 mm	W 4 × H 8 mm
Max. counting speed	1 / 30 / 2 k / 5 kcps	
Return time	≤ 500 ms	
Min. signal width	INHIBIT, RESET: ≈ 20 ms	
Input logic	Voltage input (PNP) - input impedance: ≤ 10.8 kΩ, [H]: 5 - 30 VDC≐, [L]: 0 - 2 VDC≐ No-voltage input (NPN) - short-circuit impedance: ≤ 470 Ω, short-circuit residual voltage: ≤ 1 VDC≐ open-circuit impedance: ≥ 100 kΩ	
One-shot output time	0.05 to 5 sec	
Error	Repeat / SET / voltage / Temp.: ≤ ± 0.01 % ± 0.05 s	
Contact control output	Relay	-
Type	Instantaneous SPDT (1c) × 1	-
Capacity	250 VAC~ 3 A, 30 VDC≐ 3 A resistive load	-
Solid-state control output	NPN open collector × 1	-
Capacity	≤ 30 VDC≐, 100 mA	-
Unit weight (packaged)	≈ 110 g (≈ 171 g)	≈ 95 g (≈ 156 g)
Certification	CE, RoHS, ENEC, EMC	

Voltage type	AC voltage	AC / DC voltage
Power supply	100 - 240 VAC~ 50 / 60 Hz	24 VAC~ 50 / 60 Hz, 24 - 48 VDC≐
Permissible voltage range	90 to 110 % of rated voltage	
Power consumption (FX4S-1P□)	≤ 4.6 VA	AC: ≤ 3.5 VA DC: ≤ 2.3 W
Power consumption (FX5S-I□)	≤ 3.8 VA	AC: ≤ 3 VA DC: ≤ 1.8 W
External supply power	≤ 12 VDC≐ ± 10 % 50 mA	
Memory retention	≈ 10 years (non-volatile semiconductor memory type)	
Insulation resistance	≥ 100 MΩ (500 VDC≐ megger)	
Dielectric strength	Between the charging part and the case: 3,000 VAC~ 50 / 60 Hz for 1 minute	Between the charging part and the case: 2,000 VAC~ 50 / 60 Hz for 1 minute
Noise immunity	± 2 kV square wave noise (pulse width: 1 μs) by the noise simulator	± 500 V square wave noise (pulse width: 1 μs) by the noise simulator
Vibration	0.75 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 1 hour	
Vibration (malfunction)	0.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 10 min	
Shock	300 m/s <sup>2</sup> (≈ 30 G) in each X, Y, Z direction for 3 times	
Shock (malfunction)	100 m/s <sup>2</sup> (≈ 10 G) in each X, Y, Z direction for 3 times	
Relay life cycle	Mechanical: ≥ 5,000,000 operations Electrical: ≥ 100,000 operations (250 VAC~ 3 A resistive load)	
Ambient temperature	-10 to 55 °C, storage: -25 to 65 °C (no freezing or condensation)	
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)	
Protection rating	IP20 (front part, IEC standard)	

Mode Setting



Dot for Decimal Point & Hour / Min / Second

- If there is no RESET key or DIP switch input for 60 sec, it returns to RUN mode.
- [RESET] key: Setting mode ↔ RUN mode  
Move the digit when changing the setting value.

Decimal point of counter

Parameter	Display	Setting range
C1-1 Setting mode	d P	-
C1-2 Decimal point setting	- - - -	[FX4S-1P]
	- - - - -	[FX5S-I]


Dot for Hour / Min / Second of timer

Parameter	Display	Setting range	Setting example
T1-1 Setting mode	d P	-	-
T1-2 Setting of dot for Hour / Min / Sec	CL R	CLR: Not divided with dot SET: Divided with dot	5959: 59 m 59 s 0.59.59: 59 m 59 s

Output Operation Mode

For the detailed timing chart for operation output mode, refer to the manual.

Detach DIP Switch Cover

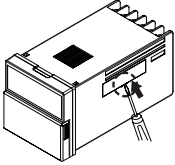

- Push and pull the groove of DIP switch cover with a flat head (-) driver to the front, detaching the cover from the case.
- ⚠ Caution: Turn OFF the power before detaching the cover.
- ⚠ Caution: When using the tools, be careful not to be wounded.

DIP Switch Setting



- Detach the cover of DIP switch and proceed the settings. See the 'Detach DIP Switch Cover.'
- How to change the settings: power OFF → change settings → power ON → press [RESET] key or input the RESET signal (≥ 20 ms) to the external terminal.

DIP SW1

SW1	Function		Defaults
	Counter	Timer	
1	CP1, CP2, INHIBIT, RESET input logic		ON
2	-	Time range	OFF
3	Input operation mode		OFF
4			OFF
5	Count up / count down	-	OFF

Input logic

SW1-1	Input logic
ON	NPN (no-voltage input)
OFF	PNP (voltage input)

[Counter] Input operation mode

SW1			Count up / count down & input operation mode	
5	4	3		
OFF	OFF	OFF	Count up	Up / Down - A (command)
OFF	OFF	ON		Up / Down - B (individual)
OFF	ON	OFF		Up / Down - C (phase difference)
OFF	ON	ON		Up
ON	OFF	OFF	Count down	Up / Down - D (command)
ON	OFF	ON		Up / Down - E (individual)
ON	ON	OFF		Up / Down - F (phase difference)
ON	ON	ON		Down

DIP SW2

SW2	Function		Defaults
	Counter	Timer	
1	Counter / Timer		ON
2, 3	Max. counting speed	-	OFF
4	Memory retention		OFF
5, 6, 7	Output operation mode <sup>01)</sup>		OFF

01) Except the indicator model.

Counter / Timer

SW2-1	Counter / Timer
ON	Counter
OFF	Timer

Memory retention

SW2-4	Memory retention
ON	×
OFF	○

[Counter] Max. counting speed

SW2		Max. counting speed
3	2	
OFF	ON	1 cps
OFF	OFF	30 cps
ON	OFF	2 kcps
ON	ON	5 kcps

Output operation mode

SW2			Output operation mode
7	6	5	
OFF	OFF	OFF	F
OFF	OFF	ON	N
OFF	ON	OFF	C
OFF	ON	ON	R
ON	OFF	OFF	K
ON	OFF	ON	P
ON	ON	OFF	Q
ON	ON	ON	S