# X20020 – Infresco P 4kW User Manual Issue 6





## Contents

1	Key Features
2	Technical Specifications
3	Introduction2
4	Installation
5	Wiring Diagram
6	PIR Detection Area
7	Positioning4
8	Mounting Template
9	Wiring6
10	Commissioning6
11	Troubleshooting6
12	Recommendations & Safety Requirements
13	Electrostatic Discharge (ESD)
14	Product Applications8

# **UNITED AUTOMATION LTD**



Southport Business Park Wight Moss Way Southport, PR8 4HQ ENGLAND

Tel: 0044 (0) 1704 – 516500 enquiries@united-automation.com www.united-automation.com











Page 1 of 8 Issue: 6 Date: 14, June 2023

## X20020 - Infresco P 4kW

## **User Manual**

## Issue 6

### 1 Key Features

- Energy Saving Only provides heat when people are present
- Extends lamp life
- Temperature sensor lamps inhibited when ambient temperature exceeds set point
- Soft-start/zero-voltage switch-off
- Low-cost
- Easy to install

2 Technical Specifications

z rechnical Specifications			
Supply Voltage	230V AC ±10% @ 50/60Hz		
Switching Capacity	4kW Max.		
Detection Range	5 metres		
Detection Angle	100°		
Temperature Set Point	1 to 60°C		
Lamp On-time	5 Minutes (Fixed)		
Current Consumption (control circuit)	50mA		
Terminals	2.5mm <sup>2</sup> Rising Clamp		
Operating Temperature	-20°C to +40°C		
Protection Rating	IP65		
Gland Diameter	Max. Cable Entry 2.5mm <sup>2</sup>		
Enclosure Dimensions (W x L x H) (mm)	100 x 100 x 60		

### 3 Introduction

The infresco-P 4kW is part of a family of controllers designed to provide energy saving when used with Quartz Infrared Halogen Lamps. The 'P' model has a built in PIR sensor allowing the lamps to automatically switch on only when people are present. In addition to the PIR, a temperature sensor monitors the outside temperature and inhibits the lamps when the temperature exceeds a pre-determined set point of between 1°C and 60°C.

The microcontroller-based system incorporates zero-voltage switching and a soft-start function to eliminate the lamps' initial high inrush current – potentially increasing lamp life by as much as 30%. The lamps are switched on for a fixed time period of 5 minutes. This period is reset each time the PIR detects any further movement. Installation of the unit is simple and once installed is relatively maintenance-free.

#### 4 Installation

Important: Carefully read the following information before installing the unit.

The passive infrared sensor (PIR) fitted in this unit detects changes of infrared energy through the Fresnel lens on the front face of the unit. The detection area and range depend significantly on its mounting position.

The PIR not only detects movement of the human body, but also other heat sources similar to the human body. To prevent false activation, the unit must not be located directly facing or in close proximity to the heater lamps. Avoid locating the unit near to heating flues/exhausts, air conditioning units, moving trees/bushes and reflective surfaces.


Note: The PIR cannot detect the presence of a human body that is not moving.

To prevent malfunction of the PIR sensor, avoid subjecting it to rapidly-changing temperatures, strong shock or vibration or high humidity and temperature.

## UNITED AUTOMATION LTD



Southport Business Park Wight Moss Way Southport, PR8 4HQ ENGLAND Tel: 0044 (0) 1704 – 516500 enquiries@united-automation.com www.united-automation.com

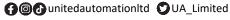












Page 2 of 8 Issue: 6 Date: 14, June 2023

# X20020 - Infresco P 4kW **User Manual** Issue 6

**Wiring Diagram** 5



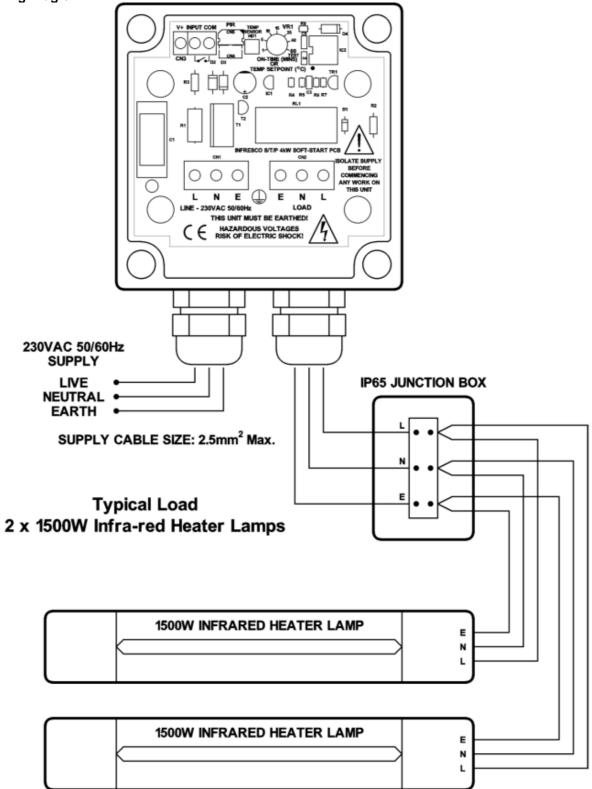


## **UNITED AUTOMATION LTD**

automation

Southport Business Park Wight Moss Way Southport, PR8 4HQ **ENGLAND** 

Tel: 0044 (0) 1704 - 516500 enquiries@united-automation.com www.united-automation.com

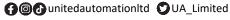







Issue: 6 Date: 14, June 2023








# X20020 - Infresco P 4kW **User Manual**


## Issue 6

#### **PIR Detection Area**



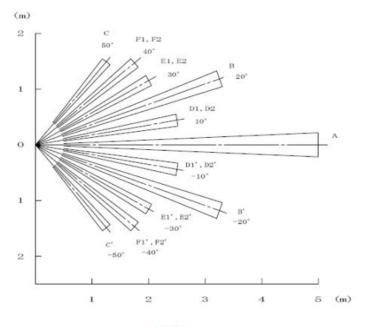

Horizontal

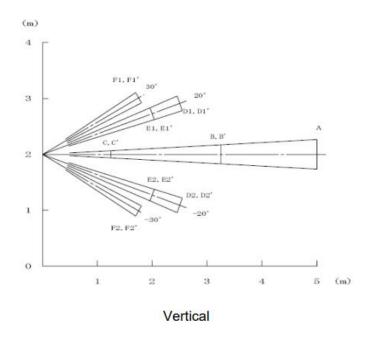

#### 7 **Positioning**

The Infresco-P 4kW can be wall or ceiling-mounted. For wall mounting, the unit should be positioned 1-3 metres high. The diagram above shows the PIR's detection area.

The unit should be fixed securely using the four mounting holes accessible from the front of the unit. Remove the lid to access the mounting holes. To ease installation, a mounting template is provided on the next page to locate the 4 mounting hole centres.


IMPORTANT! When wall mounting, the unit must be orientated with the cable glands facing down.

## UNITED AUTOMATION LTD



Southport Business Park Wight Moss Way Southport, PR8 4HQ **ENGLAND** 

Tel: 0044 (0) 1704 - 516500 enquiries@united-automation.com www.united-automation.com

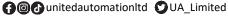












Page 4 of 8 Issue: 6 Date: 14, June 2023



8 Mounting Template

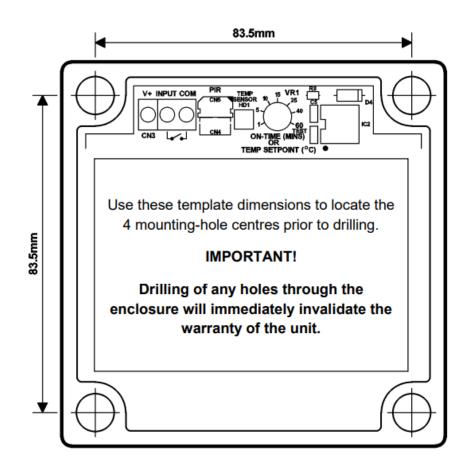

## **UNITED AUTOMATION LTD**

united automation

Southport Business Park Wight Moss Way Southport, PR8 4HQ ENGLAND

Tel: 0044 (0) 1704 – 516500 enquiries@united-automation.com www.united-automation.com











Page 5 of 8 Issue: 6 Date: 14, June 2023

# X20020 – Infresco P 4kW

## **User Manual**

### Issue 6

### 9 Wiring



It is recommended that installation and maintenance of this equipment should be done with reference to the current edition of the I.E.E. wiring regulations (BS7671) by suitably qualified/trained personnel. These regulations contain important requirements regarding safety of electrical equipment (for International Standards refer to I.E.C/ directive IEC950).

Warning! Isolate the mains supply before commencing any work on the unit. Failure to do so could result in serious injury or fatality.

The unit is fitted with two cable glands. Only one cable should be fitted per gland to prevent degrading the unit's IP rating. See 'Wiring Diagram' on the next page for an alternative wiring configuration using a junction box.

The mains supply connects to the terminal block marked 'LINE'. Connect the supply LIVE to the 'L' terminal, NEUTRAL to the 'N' terminal and EARTH to the 'E' terminal.

The lamps connect to the terminal block marked 'LOAD'. Connect the load LIVE to the 'L' terminal, NEUTRAL to the 'N' terminal and EARTH to the 'E' terminal.

If two lamps are to be fitted, they must be wired in parallel.

Warning! Ensure all earth wires are connected to maintain earth continuity to the lamp fittings.

Check all wiring and make sure the cable glands are tightened.

#### 10 Commissioning

Turn the set point temperature preset (VR1) fully clockwise to select 'walk test' mode.

VR1 is located at the top of the printed circuit board as shown opposite.

Replace the lid and switch on the mains supply to the unit. The controller will remain idle for 60 seconds to allow the PIR sensor to stabilise.

After 60 seconds, the detection area can be walk tested to verify the PIR's coverage. Each time the PIR detects sufficient movement, the lamps switch on for 5 seconds.

Note: Each time the lamps switch off, the PIR is inhibited for 5 seconds to prevent changes in infrared energy, given off by the lamps, from causing a false activation.

Once the detection area has been verified, adjust the set point temperature as required. This will automatically disable 'walk test' mode. The lamp on-time is fixed at 5 minutes.

Note: If the ambient temperature exceeds the set point temperature, the lamps are inhibited.


11 Troubleshooting

Problem	Solution
Lamps do not switch on	Check the LINE and LOAD wiring connections to the unit and ensure
	that the mains supply is switched on
	The ambient temperature may have exceeded the set point
	temperature. If necessary, increase the set point temperature (VR1)
	Check the lamps/lamp fittings
	Contact your supplier
Lamps do not switch off	Ensure nobody enters the detection area for 5 minutes. This will
	allow the 5 minute on-time to expire
	The PIR might be continually being re-triggered due to false
	activations. Mask the PIR lens and wait 5 minutes. If the lamps switch
	off after 5 minutes, the PIR is receiving false activations. See section
	'installation'
	Contact your supplier

## UNITED AUTOMATION LTD



Southport Business Park Wight Moss Way Southport, PR8 4HQ ENGLAND Tel: 0044 (0) 1704 – 516500 enquiries@united-automation.com www.united-automation.com

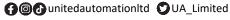











Page 6 of 8 Issue: 6 Date: 14, June 2023

# X20020 – Infresco P 4kW

## **User Manual**

### Issue 6



### 12 Recommendations & Safety Requirements

Other documents, which may be appropriate to your application, are available on request.

Code	Identity	Description	
X10255	SRA	Safety requirements: Addressing the Low Voltage Directive (LVD) including, Thermal Data/Cooling, Live Parts Warning,	
		Earthing requirements and Fusing recommendations	
P01.1	COS	UAL Conditions of Sale	

**Note**: It is recommended that installation and maintenance of this equipment should be carried out by suitably qualified personnel, with reference to the current edition of the I.E.T. Wiring Regulations BS7671. The regulations contain important requirements regarding the safety of electrical equipment.

### 13 Electrostatic Discharge (ESD)

This product range has been identified has requiring protection from electrostatic discharge (ESD). They include integrated circuits (IC's) that may be damaged or degraded if mishandled. They are much less vulnerable when built in-circuit and suitable and sufficient precautions are taken when being handled.

To address this matter, when the products are sold separately, they are protected in an ANTI-STATIC polyethylene bag. Appropriate care should be taken when handling the units for installation.

Further supporting data is available on request or on our website. SWP05-06 – A guide to ESD.




Not for general waste

## UNITED AUTOMATION LTD

united

Southport Business Park Wight Moss Way Southport, PR8 4HQ ENGLAND

Tel: 0044 (0) 1704 – 516500 enquiries@united-automation.com
www.united-automation.com

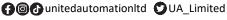







Page 7 of 8 Issue: 6 Date: 14, June 2023

# X20020 - Infresco P 4kW **User Manual**

## Issue 6

### 14 Product Applications

- Patio areas
- Smoking shelters
- Restaurants
- Warehouses
- Workshops
- Garden Lighting
- **Livery Stables**





## UNITED AUTOMATION LTD

Southport Business Park Wight Moss Way Southport, PR8 4HQ **ENGLAND** 

Tel: 0044 (0) 1704 - 516500 enquiries@united-automation.com www.united-automation.com **f @ d** unitedautomationItd **♥** UA\_Limited









Page 8 of 8 Issue: 6 Date: 14, June 2023