



Flexible NFC Antenna

TAOGLAS

Part No: FXR.05.A

Description:

Circular Flexible Near-Field Communications Antenna

Features:

13.56 MHz Antenna Flexible Low Profile Embedded Antenna Diameter: 26.4 mm Thickness: 0.24 mm Peel and stick 3M adhesive on back BoHS & Beach Compliant

www.taoglas.com



1.	Introduction	3
2.	Specifications	4
3.	Antenna Applications	5
4.	Mechanical Drawing	9
5.	Packaging	10
	Changelog	11

Taoglas makes no warranties based on the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and product descriptions at any time without notice. Taoglas reserves all rights to this document and the information contained herein. Reproduction, use or disclosure to third parties without express permission is strictly prohibited.





1. Introduction



The FXR.05.A is a rectangular, flexible, NFC (Near Field Communications) antenna for use in mobile devices and other applications. The antenna can be directly adhered to the plastic enclosure of the device for ease of installation.

With NFC antennas being commonly attached to the battery of mobile devices, they can be customized with a ferrite flux director to provide isolation from the battery or other components within the device. Using the antenna on a conductive surface without a ferrite layer will result in extremely short range or complete failure to communicate.

Customized antennas for specific applications for shape and for impedance match can also be provided for an NRE and subject to MOQ. Contact your regional Taoglas sales office for more information and support on our NFC antenna range.



Specifications

2.


	Electrical
Frequency	13.56MHz
Return Loss	>10 dB
Polarization	Linear
Impedance	50 Ω
Self-Resistance Frequency	36.25
Q Factor	48
Ls	13.5uH
Rs	11.6

* All Testing was done using a Agilent 4285A LCR Meter calibrated at 13.56MHz.

** Testing was completed using series mode, but were was conducted using parallel method as well.

	Mechanical
Antenna Dimensions	Ø26.4mm x 0.24mm
Adhesive	3M 467
RoHS Compliant	Yes
REACH Compliant	Yes
	Environmental
Temperature Range	-40°C to 85°C



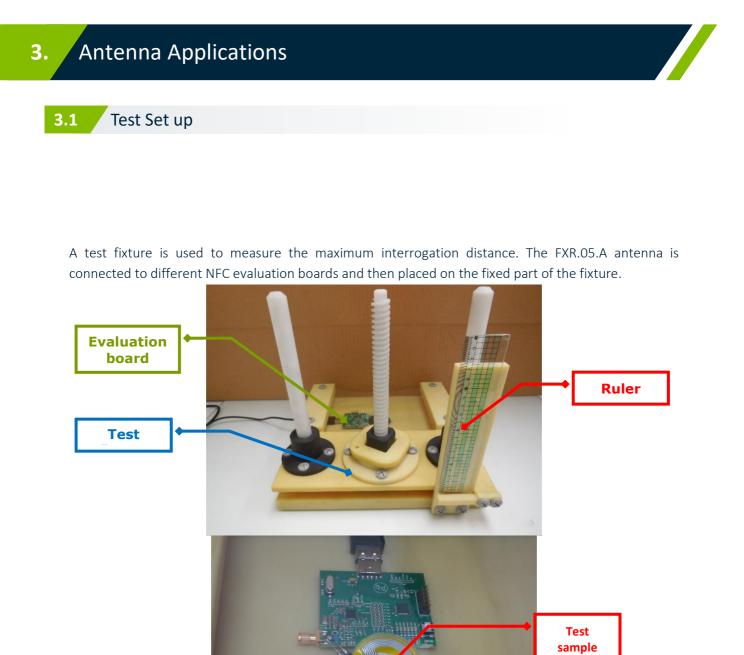

The test sample is placed on a thin sheet of plastic connected to the movable part of the fixture. Then the distance is carefully adjusted until the reader can no longer read the sample, thus the maximum interrogation distance is displayed in the ruler.

Antenna



3.2 RFID tags used for test

A total of 10 RFID tags were used to measure the interrogation distances. The next picture shows type 1, type 2 and type 4 tags, respectively.




Type 1 tag is based on ISO/IEC 14443A standard and has 512 bytes of memory.

Type 2 tag is based on ISO/IEC 14443A standard and has 192 bytes of memory.

Type 4 is based on ISO / IEC 14443A 1-4 compliant and has 2K of memory.

The next picture shows the Tag-it HF-I RFID tags from Texas Instruments: RI-102-112, RI-I11-112, RI-I03-112, RI-I16-112, Button and RI-I17-112.

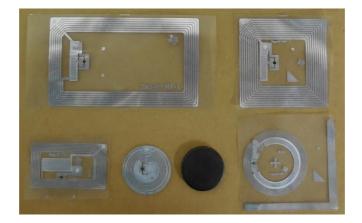

The Tag-it HF-I Plus Transponder Inlay family of Texas Instruments RFID is based on the ISO/IEC 15693 standard for contactless integrated circuit cards (vicinity cards) and ISO/IEC 18000-3 standard for item management.



3.3 Matching

The interrogation distances presented here were taken with the antenna connected directly to the evaluation boards with the default matching circuit. This is not necessarily the optimal matching circuit that could be designed for a particular antenna. We kept the default matching of each evaluation board to minimize the number of variables in testing and keep integration as simple as possible.

As with any matching network the exact circuit and values for an optimal network depend on the combination of antenna, NFC circuit, any intervening transmission line, and the environment presented to the antenna. These factors are specific to the particular end product.

As a starting point, to achieve the read range results presented here, use the matching network detailed in the schematic of the evaluation board for your particular NFC chip and keep the antenna free of any obstruction. Once you can demonstrate successful reads you can then optimize performance as desired.



3.4 Test Results

A total of 11 sample devices were used to measure the interrogation distances. The results are in the next tables:

• Using Texas Instruments TRF7970AEVM:

RFID Tag	Dimensions (mm)	Interrogation Distance (mm)
Mifare Ultralight C	80 x 50	10
Topaz512 (Type 1)	43 x 43	16
NTAG203 (Type 2)	Ø42	21
Mifare DESFire (Type 4)	80 x 50	15
Tag-it HFI Plus RI-I11-112	45 x 45	27
Tag-it HFI Plus RI-I02-112	76 x 48	35
Tag-it HFI Plus RI-I03-112	38 x 22.5	26
Tag-it HFI Plus RI-I16-112	Ø 24.2	24
Button type	Ø 22	23
Tag-it HFI Plus RI-I17-112	Ø 32.5	25
LG G2 cell phone		22


Using NXP MFEV700:

RFID Tag	Dimensions (mm)	Interrogation Distance (mm)
Mifare Ultralight C	80 x 50	
Mifare DESFire (Type 4)	80 x 50	
LG G2 cell phone		7



Mechanical Drawing (Units: mm)


4.

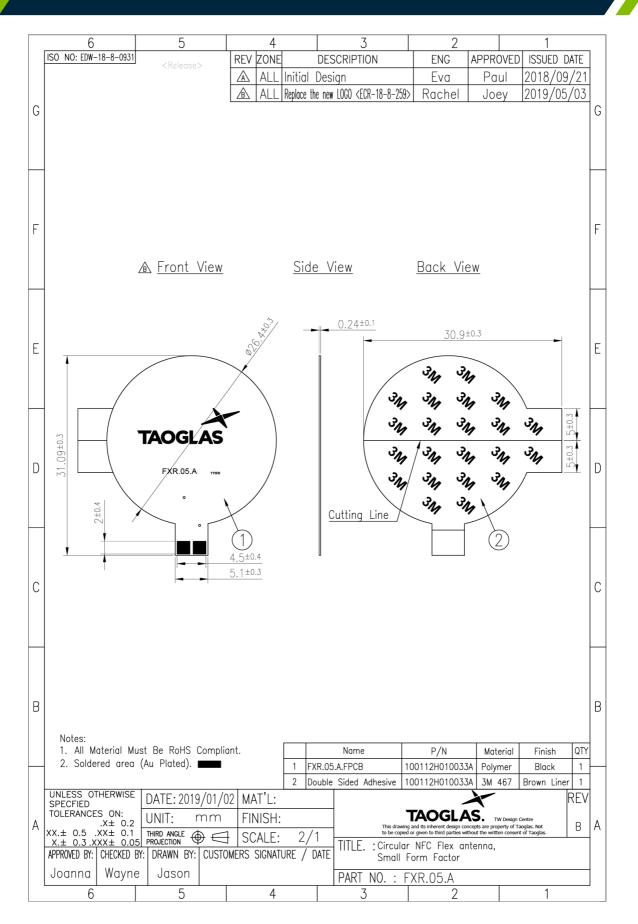



5. Packaging

100pcs FXR.05.A per PE Bag Bag Dimensions: 190*140mm Weight: 70g

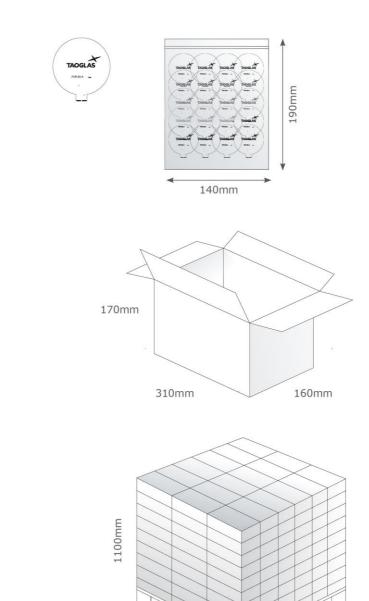

1200mm

Pallet Dimensions: 1200*1100*1100mm 162 Cartons per Pallet 18 Cartons per layer, 9 Layers

3,000pcs FXR.05.A per carton Carton: 310*160*170mm

Weight: 2.4Kg

1100mm



Changelog for the datasheet

SPE-14-8-073 – FXR	.07.52.0075X.A
Revision: H (Current	t Version)
Date:	2021-04-14
Changes:	New Values Added
Changes Made by:	Jack Conroy

Previous Revisions

Revision: G	ision: G Revision: B			
Date:	2019-11-15		Date:	2014-10-24
Changes:	ECR-18-8-259 Images Updated		Changes:	Specifications updated
Changes Made by:	Russell Meyler		Changes Made by:	Aine Doyle

Revision: F	evision: F Revision: A (Original First Release)			
Date:	2018-07-17		Date:	2014-07-22
Changes:	EDW Updated		Notes:	
Changes Made by:	Andy Mahoney		Author:	Jack Conroy

Revision: E	
Date:	2015-04-30
Changes:	Amended Specifications
Changes Made by:	Aine Doyle

Revision: D	
Date:	2015-05-02
Changes:	Weight Amended
Changes Made by:	Aine Doyle

Revision: C		
Date:	2015-01-13	
Changes:	Updated intro	
Changes Made by:	Aine Doyle	



www.taoglas.com