Autonics

COUNTER / TIMER FXS SERIES

INSTRUCTION MANUAL





Thank you for choosing our Autonics product Please read the following safety considerations before use.

Safety Considerations

lease observe all safety considerations for safe and proper product operation to avoid hazards. * symbol represents caution due to special circumstances in which hazards may occur.

▲ Warning Failure to follow these instructions may result in serious injury or death.

▲ Caution Failure to follow these instructions may result in personal injury or product damage

- 1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)

 Failure to follow this instruction may result in fire, personal injury, or economic loss.

 2. Install on a device panel to use.
 Failure to follow this instruction may result in electric shock or fire.

 3. Do not connect, repair, or inspect the unit while connected to a power source.
 Failure to follow this instruction may result in electric shock or fire.

 4. Check 'Connections' before wiring.
 Failure to follow this instruction may result in fire.

 5. Do not disassemble or modify the unit.
 Failure to follow this instruction may result in electric shock or fire.

- 1. When connecting the power/sensor input and relay output, use AWG 20(0.50mm²) cable or over, and tighten the terminal screw with a tightening torque of 0.74 to 0.90N·m.
 Failure to follow this instruction may result in fire or malfunction due to contact failure.

 2. Use the unit within the rated specifications.
 Failure to follow this instruction may result in fire or product damage.

 3. Use dry cloth to clean the unit, and do not use water or organic solvent.
 Failure to follow this instruction may result in electric shock or fire.

 4. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.
 Failure to follow this instruction may result in fire or explosion.

 5. Keep metal chip, dust, and wire residue from flowing into the unit.
 Failure to follow this instruction may result in fire or product damage.

Model


	Model	Display digit	Size	Output	Power supply		
	FX4S-1P2	9999		11-stage setting	24VAC 50/60Hz, 24-48VDC		
ľ	FX4S-1P4	(4-digit)	DIN W48×H48mm		100-240VAC 50/60Hz		
	FX5S-I2	99999		Indicator	24VAC 50/60Hz, 24-48VDC		
Γ	FX5S-I4	(5-digit)			100-240VAC 50/60Hz		


FX4S-1P4


Specifications

1-stage setting FX4S-1P2

Model		Indica	ator	_	_	FX5S-I2	FX5S-I4	
Display	Display digit			4-digit		5-digit		
Charact	haracter size (W×H)			3.8×7.6mm		4×8mm		
	Power supply			24VAC~ 50/60Hz, 24-48VDC==	100-240VAC~ 50/60Hz	24VAC~ 50/60Hz, 24-48VDC==	100-240VAC~ 50/60Hz	
Permiss	missible voltage range			90 to 110% of rated voltage				
Power o	Power consumption			AC: max. 3.5VA, DC: max. 2.3W	Max. 4.6VA	AC: max. 3VA, DC: max. 1.8W	Max. 3.8VA	
Min. signal width			eed of	Selectable 1cps/30cps/2kcps/5kcps (DIP switch)				
				Max. 500ms				
				INHIBIT, RESET input: approx. 20ms Selectable voltage input (PNP) method or no-voltage input (NPN) method Voltage input (PNP) method]-input impedance: max. 10.8kΩ, Hi 5-30VDC≔, [Li]: 0-2VDC No-voltage input (NPN) method]-short-circuit impedance: max. 470Ω, short-circuit residual voltage: max. 1VDC open-circuit impedance: min. 100kΩ				
One-sh	ot ou	tput t	ime	0.05 to 5 sec				
	000	tact	Type	Instantaneous SPI	OT (1c)	_		
Control	Con	tact	Capacity	250VAC~ 3A, 30VD	C= 3A resistive load	_		
output	Soli	Solid	Туре	NPN open collector: 1				
	state	Э	Capacity	Max. 30VDC== 10	0mA	_		
Relay		Mechanical		Min. 5,000,000 operations				
life cycle	е	Electrical		Min. 100,000 operations (250VAC 3A resistive load)				
Repeat/S	Repeat/Set/Voltage/Temp. error							
Insulation resistance External power supply Memory retention			nce	Over 100MΩ (at 500VDC megger)				
			ıpply	Max. 12VDC== ±10% 50mA				
				Approx. 10 years (non-volatile memory)				
			1	2,000VAC 50/60Hz for 1 min (between all terminals and case)				
Noise	ise		oltage	±2kV the square wave noise (pulse width 1μs) by noise simulator				
immunit	ty			±500V the square wave noise (pulse width 1μs) by noise simulator				
Vibratio	/ibration		nanical	0.75mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 1 hour				
Vibratio		Malfunction		0.5mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10 minutes				
Shock	Shook	Mechanical		300m/s² (approx. 30G) in each X, Y, Z direction for 3 times				
SHOCK		Malfunction		100m/s ² (approx. 10G) in each X, Y, Z direction for 3 times				
Environ	viron-		ent temp.	-10 to 55°C, storage: -25 to 65°C				
ment				35 to 85%RH, storage: 35 to 85%RH				
Protection st				IP20 (front part, IEC standard)				
Approva				(€ c 92 us				
Weight ³	eight ^{×1}			Approx. 171g (approx. 110g) Approx. 156g (approx. 95g)				
							,	

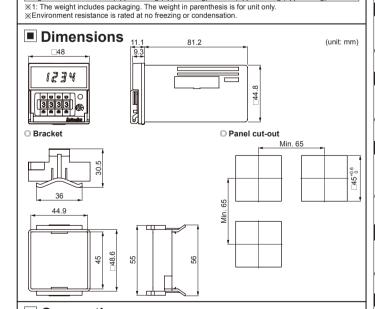

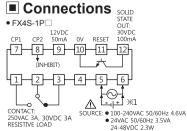

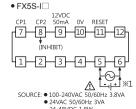

**24-48VDC 2.3W **1: AC voltage: 100-240VAC 50/60Hz 4.6VA/3.8VA


AC/DC voltage: 24VAC 50/60Hz 3.5VA/3VA, 24-48VDC 2.3W/1.8W XINHIBIT: In case of timer mode, this terminal is for time hold.

(voltage input (PNP); connect with 12VDC, non-voltage input (NPN); connect with 0VDC) «The above specifications are subject to change and some models may be discontinued without notice.


**Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

Detaching DIP Switch Cover

XTurn OFF the power before detaching the DIP switch cover.

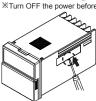

Push and pull the groove of DIP switch cover with a flat head driver to the front. The cover is detached from the case ⚠ Be sure not to be wounded when using a tool.

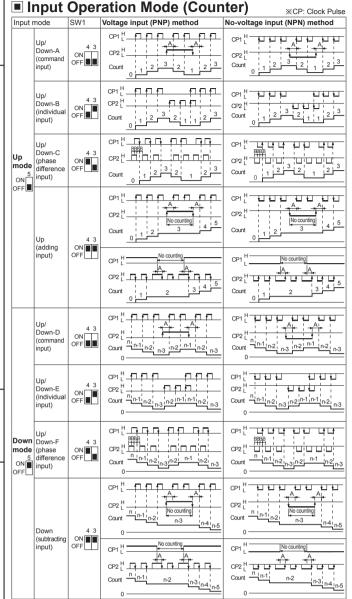


Output Operation Mode

Up mode

XSet one-shot output time by front TIME volume switch

■ One-shot output (0.05 to 5 sec)

Output

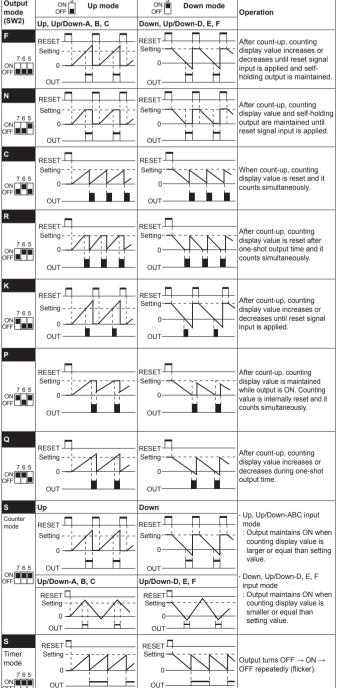

Self-holding output

DIP Switch Setting





★1: Indicator model (FS5-I□) does not have no. 5, 6, 7 of SW2. for output operation mode setting

Max. counting speed







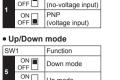

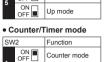



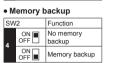

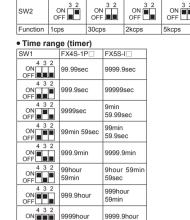


Power OFF \rightarrow change settings \rightarrow power ON \rightarrow press RESET key or input signal (min. 20ms)


Input Connection


O No-voltage input (NPN)

XCP1, CP2 (INHIBIT), RESET input part

(NPN output)

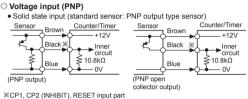

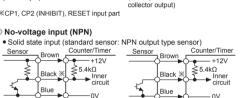

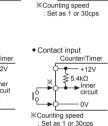


Contact input

Counter/Timer +12V

10.8kΩ 0V


■ Counting & Time Operation for Indicator (FX5S-I□)

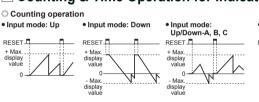


(NPN open


collector output)



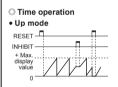

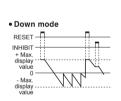

Dot for Decimal Point / Hour. Min. Second

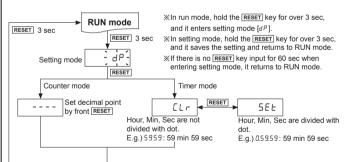

Error Display and Output Operation

ı	Error Display	Error description	Troubleshooting
ı	ErrO	Setting value is 0.	Change the setting value anything but 0.
	*When error occurs, the ou	tput turns OFF.	

※Indicator model does not have error display function.

Cautions during Use

- 1. Follow instructions in 'Cautions during Use', Otherwise, It may cause unexpected accidents. 24-48VDC, 24VAC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- 3. Use the product, 0.1 sec after supplying power
- 4. When supplying or turning off the power, use a switch or etc. to avoid chattering. 5. Install a power switch or circuit breaker in the easily accessible place for supplying or
- 6. In case of contact input, set count speed to low speed mode (1cps or 30cps) to operate.
- If set to high speed mode (2kcps or 5kcps), counting error occurs due to chattering.

 7. Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
- Do not use near the equipment which generates strong magnetic force or high frequency
- 8. This product may be used in the following environments. (1) Indoors (in the environment condition rated in 'Specifications') ②Altitude max. 2,000m ③Pollution degree 2 ④Installation category II

Major Products



Pulse (Rate) Meters

Autonics Corporation http://www.auton HEAD QUARTERS

HEAD QUARTIENS, 18, Bansong-ro 513 beon-gil, Haeundae-gu, Busan, South Korea, 48002
TEL: 82-51-519-3232
[E-mail: sales@autonics.com

DRW161280AC