Groove-Depth 9 mm Photomicro Sensors

BS5 Series

INSTRUCTION MANUAL

TCD210205AD

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using. For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ↑ symbol indicates caution due to special circumstances in which hazards may occur.

▲ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
- Failure to follow this instruction may result in personal injury, fire or economic loss. 02. Do not use the unit in the place where flammable/explosive/corrosive gas,

high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.

Failure to follow this instruction may result in explosion or fire.

03. Do not disassemble or modify the unit.

Failure to follow this instruction may result in fire.

- 04. Do not connect, repair, or inspect the unit while connected to a power source. Failure to follow this instruction may result in fire.
- 05. Check 'Connections' before wiring.

Failure to follow this instruction may result in fire.

↑ Caution Failure to follow instructions may result in injury or product damage.

01. Use the unit within the rated specifications.

Failure to follow this instruction may result in fire or shortening the life cycle of the

02. Use dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire or electric shock.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- Use the product, 0.5 sec after supplying power. When using separate power supply for the sensor and load, supply power to sensor first.
- The power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent inductive noise.
- When using sensor with the equipment which generates noise (switching regulator, inverter, servo motor, etc.), ground F.G. terminal of the equipment.
- This unit may be used in the following environments.
- Indoors (in the environment condition rated in 'Specifications')
- Altitude max. 2,000m
- Pollution degree 2
- Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specific model, follow the Autonics website.

BS 5 - **0 2** - **3**

Appearance+Connection

	Cable type		Connector type
K1		K2	
T1	Distance from the center of sensing to mounting surface: 7.3 mm	 T2	Distance from the center of sensing to mounting surface: 7.3 mm
L1		L2	
Y1		Y2	
V1		V2	
TA1	Distance from the center of sensing to mounting surface: 10 mm	TA2	Distance from the center of sensing to mounting surface: 10 mm
F1		F2	
R1		 R2	
0 1	Ľ4		

2 Indicator

M: Turns ON under the light received condition R: Turns ON under the light interrupted condition

❸ Control output

No mark: NPN open collector output P: PNP open collector output

Sold Separately

• Connector: CT-01 (connector type), CT-02 (cable type, length: 1 m)


Cautions for Installation

- Tighten the screw with tightening torque under 0.49 N m.
- In case of F and R type, as shown below, make sure that the bottom of the product and the mounting surface are in direct contact with each other.

Correct	Wrong

Connections

■ Cable type

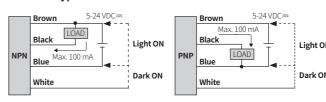

■ Connector type

- For LOAD connection, follow the cable type connection.
- Be sure to connect the unit using the dedicated connector (CT-01 or CT-02, sold
- If it is soldered on the unit terminal pin directly not using the connector (CT-01), it may cause product damage.



Pin Color		Function		
1	Brown	+V		
2	White	Control		
3	Black	Output		
(4)	Blue	OV		

■ Selectable operation mode


 Δ Be sure to connect the control wire when selecting the operation mode. Failure to this instruction may result in product damage


Operation mode	Connection
Light ON	(White) Control wire connects with (Brown) +V
Dark ON	(White) Control wire connects with (Blue) 0V

Circuit

■ NPN open collector output

■ PNP open collector output

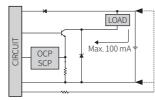

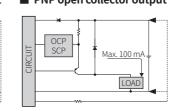


- OCP (over current protection), SCP (short circuit protection)
- If short-circuit the control output terminal or supply current over the rated specification, normal control signal is not output due to the protection circuit.

Operation Timing Chart and Indicators

Model		Indicator turns ON under light received condition			Indicator turns ON under light interrupted condition		
Received light		Received			Received		
		Interrupted —			Interrupted		
Light ON	Operation indicator	ON			ON		
		OFF —			OFF		
	Transistor output	ON			ON		
		OFF —			OFF .		
Dark ON	Operation indicator	ON			ON		
		OFF _			OFF		
	Transistor ON			ON			
	output	OFF			OFF		

Specifications

Series	BS5				
Sensing type	Through-beam				
Sensing distance	5 mm				
Sensing target	Opaque materials				
Min. sensing target	≥ 0.8 mm × 2 mm				
Hysteresis	≤ 0.05 mm				
Response time	Received light: ≤ 20 µs , Interrupted light: ≤ 100 µs				
Frequency response	2 kHz ⁰¹⁾				
Light source	Infrared LED				
Peak emission wavelength	940 nm				
Operation mode	Light ON-Dark ON selectable (control wire)				
Indicator	Operation indicator (red)				
Approval	C€₩EHI				
Unit weight	Cable type: \approx 50 g, Connector type: \approx 30 g				
01) Personne frequency is the value getting from revolving the circle panel below					

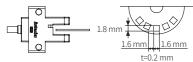

	t=0.2 mm			
Power supply	5-24 VDC== ±10 % (ripple P-P: ≤ 10 %)			
Current consumption	≤ 30 mA			
Control output	NPN open collector / PNP open collector output model			
Load voltage	≤ 30 VDC==			
Load current	≤ 100 mA			
Residual voltage	NPN: ≤ 1.2 VDC==, PNP: ≤ 1.2 VDC==			
Protection circuit	Reverse power polarity protection circuit, output short overcurrent protection circuit			
Insulation resistance	≥ 20 MΩ (250 VDC== megger)			
Noise immunity	The square wave noise (pulse width: 1 μ s) by the noise simulator \pm 240 VDC==			
Dielectric strength Between the charging part and the case : 1,000 VAC ∼ 50/60 Hz for 1 min				
fibration 1.5 mm double amplitude (max. acceleration 196 m/s^2) at frof 10 to 2,000 Hz in each X, Y, Z direction for 2 hours				
Shock	15,000 m/s ² (approx. 1,500 G) in each X, Y, Z direction for 3 times			
Ambient illumination (receiver)	Fluorescent lamp: ≤ 1,000			
Ambient temperature	-20 to 55 °C, storage: -25 to 85 °C (no freezing or condensation)			
Ambient humidity	35 to 85%RH, storage: 35 to 85%RH (no freezing or condensation)			
Protection rating IP50 (IEC standard)				
Connection method	Cable / Connector type model			
Cable spec.	Ø 3 mm, 4-wire, 1 m			
Wire spec.	AWG28 (0.08 mm, 19-core), insulator outer diameter: Ø 0.88 mm			
Material	Case: PBT, Sensing part: PC			

18, Bansong-ro 513Beon-gil, Haeundae-gu, Busan, Republic of Korea, 48002 www.autonics.com | +82-2-2048-1577 | sales@autonics.com

Autonics