


# Remote Type Pressure Sensors Pressure Sensor Controllers



## Remote Type Pressure Sensors/

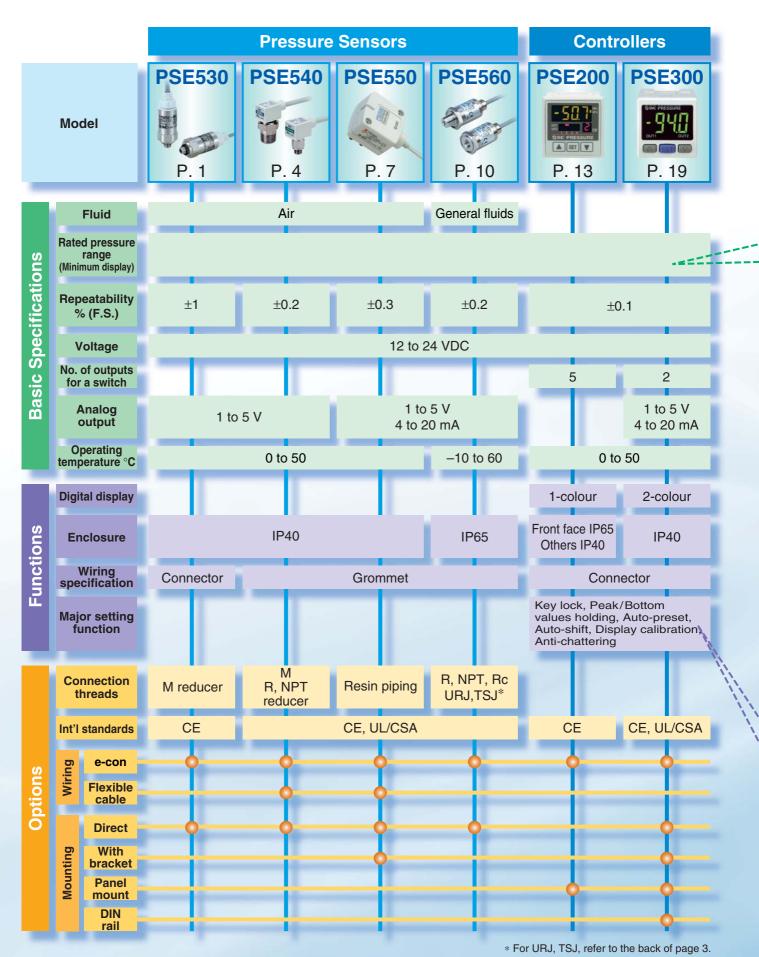

## Pressure Sensor Controllers

#### Pressure Sensors/Series PSE5□□

			PSE53□	PSE54□	PSE55	PSE56□
			Inter-		(EM)	Sie
	Rated pressure ra		U and		Shippy of	(1) in
	-100 kPa 0 100 kPa 500 l	∢Pa 1 MPa				
Vacuum	-101 kPa 0		PSE531	PSE541		PSE561
Compound pressure	-100 kPa 100 kPa		PSE533	PSE543	<del></del>	PSE563
	0 100 kPa		PSE532	_	_	_
Positive pressure	0	500 kPa	_	_	_	PSE564
	0	1 MPa	PSE530	PSE540	_	PSE560
Low differential pressure	O 2 kPa		_	_	PSE550	_

#### Pressure Sensor Controllers/Series PSE200/300

#### **PSE200 PSE300** Input/Output specifications



specifications • NPN 5 outputs + auto-shift input

Input/Output

- PNP 5 outputs + auto-shift input
- NPN 2 outputs + 1–5 V outputs NPN 2 outputs + 4–20 mA outputs
  - NPN 2 outputs + 4-20 mA outputs

    NPN 2 outputs + auto-shift input

    PNP 2 outputs + 1-5 V outputs

    PNP 2 outputs + 4-20 mA outputs

  - PNP 5 outputs + auto-shift input
- Applicable pressure sensor model Setting/Display resolution **PSE531 PSE561 PSE541** 0.1 kPa 0.1 kPa **PSE533 PSE543 PSE563** 0.1 kPa 0.2 kPa **PSE532** 0.1 kPa 0.1 kPa **PSE564** 1 kPa **PSE530 PSE540 PSE560** 0.001 MPa 0.001 MPa **PSE550** 0.01 kPa

#### Main Functions (For details, see page 26.)


Key lock	Locks the keys from functioning.					
Peak/Bottom values holding	Displays the maximum and minimum values being set and can keep those values on the display.					
Auto-preset  Able to set the pressure automatically. In the case of adsorption confirmation, it memorizes the prewhen adsorbed and released. By repeating several times, the optimum values are calculated autor						
Auto-shift	Stable switch output is available even though the supply pressure may fluctuate. Automatically corrects the set value in accordance with the fluctuations in the supply pressure.					
Display calibration	Able to adjust the displayed value ( $\pm 5\%$ ) and justify distribution of the values displayed on respective pressure switch.					
Anti-chattering	Prevents malfunction due to sharp pressure fluctuations. The detection of momentary pressure fluctuation as abnormal pressure can be prevented by changing the setting of the response time.					




# **Compact Pressure Sensor For Pneumatics**

## Series PSE530

Series		Rated pressure range				
	-100 kPa	0	100 kPa	500 kPa	1 MPa	
PSE530		0			1 MPa	
PSE531	-101 kPa	0				
PSE532		0	101 kPa		  -  -	
PSE533	-101 kPa		101 kPa		 	

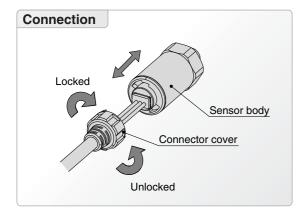


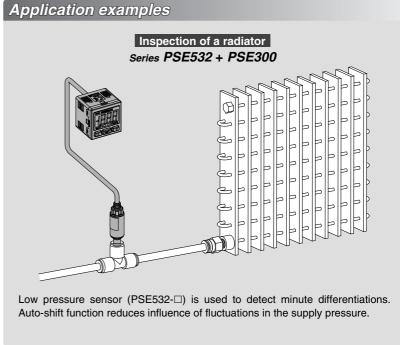

## **Pressure Sensor**

# Series PSE530



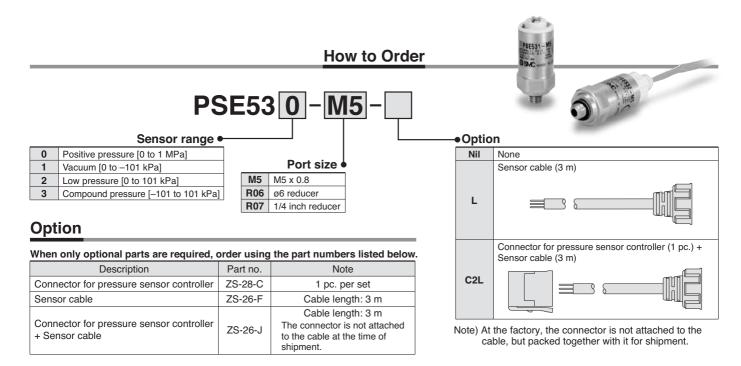

#### **Specifications**

	Model	PSE530 (Positive pressure)	PSE531 (Vacuum)	PSE532 (Low pressure)	PSE533 (Compound pressure)		
Rated p	pressure range	0 to 1 MPa	0 to -101 kPa	0 to 101 kPa	-101 to 101 kPa		
Extension analog output range		-0.1 to 0 MPa	10.1 to 0 kPa	-10.1 to 0 kPa	_		
Proof p	ressure	1.5 MPa		500 kPa			
Applica	able fluid		Air/Non-corrosive ga	s/Non-flammable gas			
Power	supply voltage	12 to 24	VDC, Ripple (p-p) 10% or less	(with power supply polarity pr	rotection)		
Curren	t consumption		15 mA or less	(with no load)			
Output	specification	Analogue output 1 to 5 V (with rat	ed pressure range), 0.6 to 1 V (with	n extension analogue output range)	), Output impedance: Approx. 1 k $\Omega$		
Accuracy	(Ambient temperature at 25°C)	±2% F.S. or less (wit	±2% F.S. or less (with rated pressure range), ±5% F.S. or less (with extension analogue output range)				
Lineari	ty	±1% F.S. or less					
Repeat	ability	±1% F.S. or less					
Power	supply voltage effect	±1% F.S. or less based on the analog output at 18 V ranging from 12 to 24 VDC					
=	Enclosure	IP40					
Environmental resistance	Temperature range	Operating: 0 to 50°C; Stored: -10 to 70°C (No freezing or condensation)					
lane tan	Withstand voltage	1000 VAC, 50/60Hz for 1 minute between live parts and case					
iror	Insulation resistance	5 MΩ or more between live parts and case (at 500 VDC measured via Megohmmeter)					
Vibration resistance		10 to 500 Hz 1.5 mm amplitude or 98 m/s <sup>2</sup> acceleration, X, Y, Z directions for 2 hours each (De-energized)					
Ш	Impact resistance	980 m/s <sup>2</sup> in X, Y, Z directions, 3 times each (De-energized)					
Temperature characteristics		±2% F.S. or less (Based on 25°C)					
Sensor	cable/Option	Halogen-free heavy-duty cable, 3 cores, ø2.7, 3 m, Conductor area: 0.15 mm², Insulator O.D.: 0.8 mm					
Standa	rds		Conforming to CE marking				

**Piping Specifications** 

Model		M5 R06		R07	
Port size		M5 x 0.8 male thread	ø6 reducer type	1/4 inch reducer type	
Wetted parts material		Pressure sensor: Silicon, O-ring: NBR			
		Body: Stainless steel 304 Body: PBT		: PBT	
Weight With sensor cable (3 m)		41 g	38 g		
Weight Without sensor cable		7 g	3.8 g		




## Series PSE530


#### **Internal Circuit**

#### PSE53□

Voltage output type 1 to 5 V Output impedance Approx. 1  $k\Omega$ 

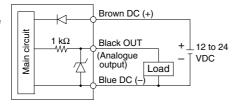


#### **Analogue Output**

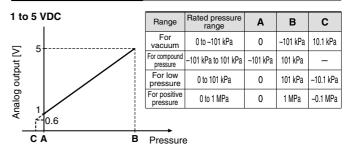


#### **Dimensions**

#### PSE53□-M5

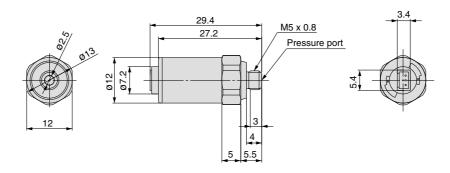


### PSE53□-R06

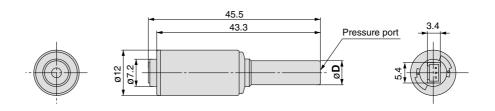

	(mm <sub>)</sub>
Model	Applicable fitting size ( <b>D</b> )
PSE53□-R06	6
PSE53□-R07	1/4"

#### With sensor cable

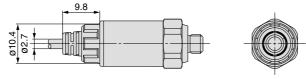







# **Compact Pressure Sensor For Pneumatics**


## Series PSE540


Series		Rated pressure range					
	-100 kPa	-100 kPa 0 100 kPa 500 kPa					
PSE540		0		)	1 MPa		
PSE541	-101 kPa	0			 		
PSE543	-100 kPa		100 kPa				

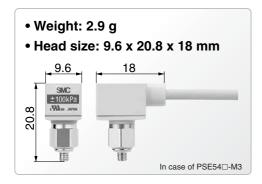

#### Application examples

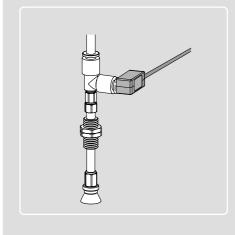

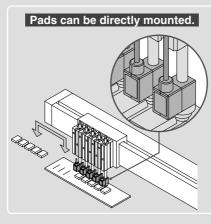

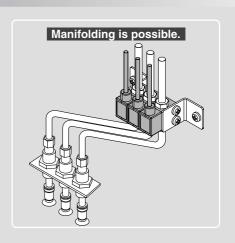



## **Compact Pressure Sensor** For Pneumatics

## Series PSE540



#### **How to Order**

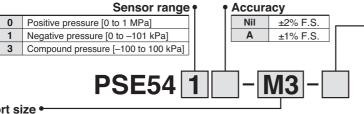

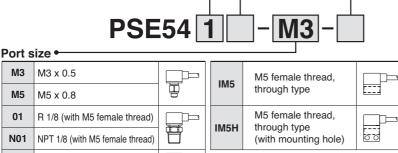

Option (Connector)				
Nil	None			
	Connector for pressure sensor controller (1 pc.)			
C2	00000			

Note) At the factory, the connector is not attached to the cable, but packed together with it for shipment.

#### Option

Description	Part no.	Note
Connector for pressure sensor controller	ZS-28-C	1 pc.

#### **Specifications**

ø4 reducer

ø6 reducer

R04

R06

Model P:		PSE540	PSE541	PSE543		
Rate	d pressure range	0 to 1 MPa	0 to −101 kPa	-100 to 100 kPa		
Exte	nsion analog output range	-0.1 to 0 MPa	10.1 to 0 kPa	_		
Proc	f pressure	1.5 MPa	500	kPa		
Appl	icable fluid	A	ir/Non-corrosive gas/Non-flammable ga	s		
Pow	er supply voltage	12 to 24 VDC, Ripp	le (p-p) 10% or less (with power supply	polarity protection)		
Curr	ent consumption		15 mA or less			
Outp	out specification	Analogue output 1 to 5 V (with rated pressure	range), 0.6 to 1 V (with extension analogue or	utput range), Output impedance: Approx. 1 kΩ		
Accı	racy (Ambient temperature	PSE54□: ±2% F.S. or less (with rate	ed pressure range), ±5% F.S. or less (wi	ith extension analogue output range)		
at 25	°C)	PSE54□A: ±1% F.S. or less (with rated pressure range), ±3% F.S. or less (with extension analogue output range)				
Line	arity	±0.7% F.S. or less	±0.4% F.S. or less			
Repe	eatability	±0.2% F.S. or less				
Pow	er supply voltage effect	±0.8% F.S. or less				
	Enclosure		IP40			
_	Operating temperature range	Operating: 0 to 5	50°C, Stored: –20 to 70°C (No freezing	or condensation)		
sut se	Operating humidity range	Opera	ting/Stored: 35 to 85% RH (No condens	sation)		
tan	Withstand voltage	1000 VAC,	50/60 Hz for 1 minute between live par	ts and case		
Environmental resistance	Insulation resistance	50 MΩ or more between live parts and case (at 500 VDC measured via Megohmmeter)				
F 5	Vibration resistance	10 to 500 Hz at whichever is smaller of 1.5 mm amplitude or 98 m/s <sup>2</sup> acceleration,				
	VIDIALIOII TESISLATICE	in X, Y, Z directions, for 2 hours each (De-energized)				
	Impact resistance	980 m/s <sup>2</sup> in X, Y, Z directions, 3 times each (De-energized)				
Tem	perature characteristics	±2% F.S. or less (Based on 25°C)				
Stan	dards		Conforming to CE marking, UL (CSA)			

#### **Piping Specifications**

Thing of community									
	Model	M3	M5	01	N01	R04	R06	IM5	IM5H
Port size		M3 x 0.5	M5 x 0.8	R1/8	NPT1/8	ø4 reducer	ø6 reducer	M5 female thread,	M5 female thread, through type
				M5 x 0.8	M5 x 0.8			through type	through type (with mounting hole)
	Material Case Resin case: PBT Fitting: Stainless steel 30:		Resin case: PBT Resin case: PBT		DDT		Resin ca	ase: PBT	
Material			ess steel 303	Fitting: C	3604BD	PBT		Fitting: A6063S-T5	
	Pressure sensing section	Pressure sensor: S				or: Silicon, O-ring: NBR			
Sensor cable Oil proof heavy-duty vinyl cable (ellipse), 3 cores, 2.7 x 3.2, 3 m, Conductor area: 0.15 mm², Insula			nm², Insulator	O.D.: 0.9 mm					
Weight	With sensor cable	42.4 g	42.7 g	49.	3 g	41.4 g	41.6 g	43.3 g	44.1 g
weigni	Without sensor cable	2.9 g	3.2 g	9.	8 g	1.9 g	2.1 g	3.8 g	4.6 g




## Compact Pressure Sensor for Pneumatics Series PSE540


#### **Internal Circuit**

#### PSE54□

Voltage output type 1 to 5 V Output impedance Approx. 1  $k\Omega$ 

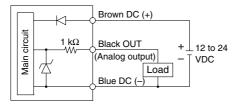

#### **Analogue Output**

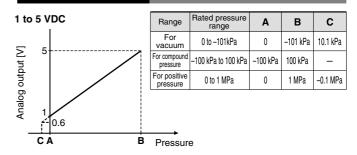


#### **Dimensions**












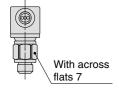

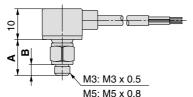


		(mm)
	PSE54□-M3	PSE54□-M5
Α	10.8	11.5
В	3	3.5

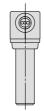

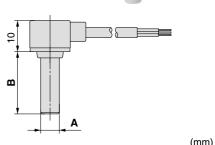


	PSE54□-R04	PSE54□-R06
Α	ø4	ø6
В	18	20


#### **Common Dimensions**

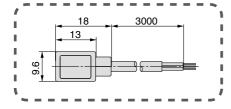





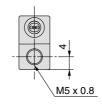

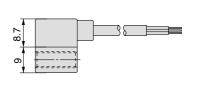



#### PSE54□-01 N01









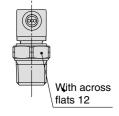

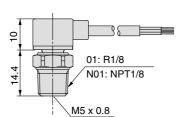

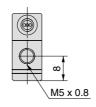

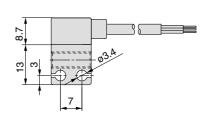




## **Low Differential Pressure Sensor**

## Series PSE550






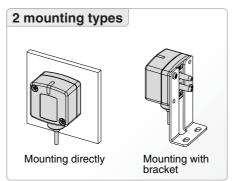







#### Application examples

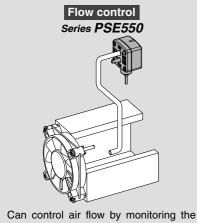

flow rate inside the duct.

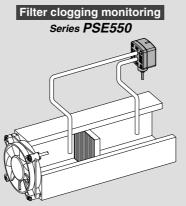

Can control filtration and replacement periods by monitoring the clogging of the filter.

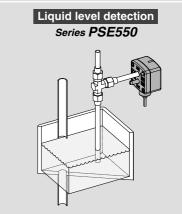

Can detect the liquid level through changes in the purge pressure.

# Low Differential Pressure Sensor Series PSE550

#### **How to Order**



#### Output specifications

Nil	Voltage output type 1 to 5 V
28	Current output type 4 to 20 mA

#### Option 2 (Connector)

*Option /	2 (Connector)				
Nil None					
	Connector for pressure sensor controller (1 pc.)				
C2	10000				

Note 1) Current output type cannot be connected to the PSE200 series.

Note 2) At the factory, the connector is not attached to the cable, but packed together with it for shipment.

#### **Option**

Description	Part no.	Note
Bracket	ZS-30-A	With M3 x 5L (2 pcs.)
Connector for pressure sensor controller	ZS-28-C	1 pc.

#### Option 1 (Bracket)

*Option	Option i (Bracket)				
Nil	None				
Α	Bracket				

Note) The bracket is not attached in the factory, but packed together for shipment.

#### **Specifications**

	Model	PSE550	PSE550-28		
Rated differential pressure range		0 to 2	2 kPa		
Operating pressure range		-50 to 50	kPa <sup>Note)</sup>		
Exter	nsion analogue output range	-0.2 to 0 kPa	_		
Proo	f pressure	65	kPa		
Appli	cable fluid	Air/Non-corrosive gas/Non-flammable gas			
Powe	er supply voltage	12 to 24 VDC, Ripple (p-p) 10% or less	s (with power supply polarity protection)		
Curre	ent consumption	15 mA or less	_		
Outp	out specification	Analog output: 1 to 5 VDC (within rated differential pressure range) 0.6 to 1 VDC (with extension analog output range) Output impedance: Approx. 1 $\rm k\Omega$	Analog output: 4 to 20 mADC (within rated differential pressure range) Allowable load impedance: 500 $\Omega$ or less (at 24 VDC) 100 $\Omega$ or less (at 12 VDC)		
Accur	acy (Operating temperature at 25°C)	±1% F.S. or less (with rated pressure range), ±3%	F.S. or less (with extension analogue output range)		
Line	arity	±0.5% F.	S. or less		
	eatability	±0.3% F.S. or less			
Indic	ation light	Orange light is turned on. (When energized)			
	Enclosure	IP.			
l <u>a</u>	Operating temperature range				
E e	Operating humidity range	Operating/Stored: 35 to 85% RH (No condensation)			
tar	Withstand voltage		ite between live parts and case		
Si Zi	Insulation resistance	50 M $\Omega$ or more between live parts and case (at 500 VDC measured via Megohmmeter)			
Environmental resistance	Vibration resistance	10 to 150 Hz at whichever is smaller of 1.5 mm amplitude or 100 m/s² acceleration, in X, Y, Z directions, for 2 hours each (De-energized)			
	Impact resistance	300 m/s <sup>2</sup> in X, Y, Z directions, 3 times each (De-energized)			
Tem	perature characteristics	±3% F.S. or less (Based on 25°C)			
Port	size	ø4.8 (ø4.4 in the end) resin piping (Applicable to I.D. ø4 air tubing)			
Wetted parts material		Resin pipe: Nylon, Pisto	n area of sensor: Silicon		
	sor cable		Oil proof heavy-duty vinyl cable (ellipse), 2 cores, 2.7 x 3.2, 3 m Conductor area: 0.15 mm², Insulator O.D.: 0.9 mm		
Weis	With sensor cable	75	g g		
Weig	Without sensor cable	35 g			
Standards		Conforming to CE marking, UL (CSA)			

Note) Can detect differential pressure from 0 to 2 kPa within the range of -50 to 50 kPa.




## Series PSE550

#### **Internal Circuit**


#### **PSE550**

Voltage output type 1 to 5 V Output impedance Approx. 1 kΩ

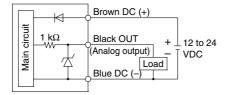


#### PSE550-28


Current output type 4 to 20 mA Allowable load impedance 500  $\Omega$  or less (at 24 VDC) 100  $\Omega$  or less (at 12 VDC)

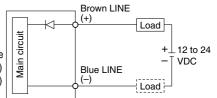


 $\ast$  Install the load either on the LINE (+) or LINE (–) side.


#### **Analogue Output**

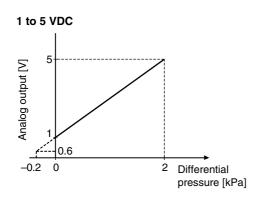

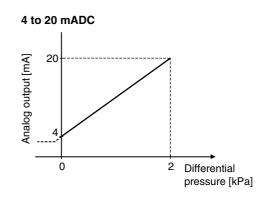



#### **Dimensions**

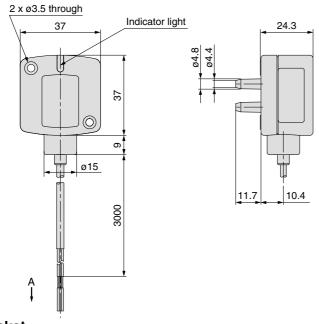


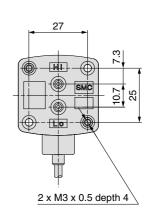

#### With bracket

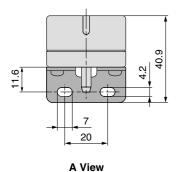

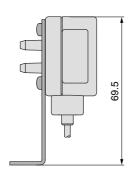


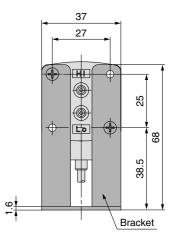



## **Pressure Sensor For General Fluids**

## Series PSE560

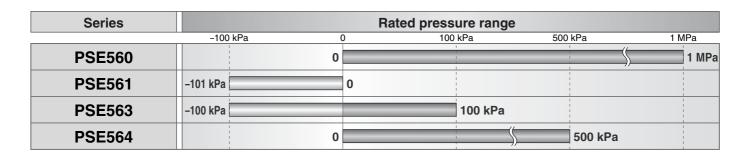

#### Applicable fluids example

- Argon
- Nitrogen
- Carbon dioxide
- Air-containing drainage
- Hydraulic oil Lubricant

Fluorocarbon

• Ammonia

Water

- Air
- Silicon oil

Wetted parts material **Stainless** steel 316L



Copper-free Fluorine-free








Port type	Thread type	Special fitting type for semiconductors		
Port size	R1/8, R1/4, Rc1/8, NPT1/8, NPT1/4	URJ 1/4, TSJ 1/4*		
Leakage	1 x 10 <sup>-5</sup> Pa⋅m³/s	1 x 10 <sup>-10</sup> Pa⋅m³/s		
Analogue outnut	1 to 5 V voltage output			
Analogue output	4 to 20 mA current output			

<sup>\*</sup> For URJ1/4, TSJ1/4, refer to the back of page 3.

#### Application examples

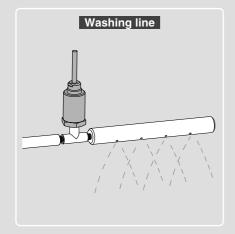

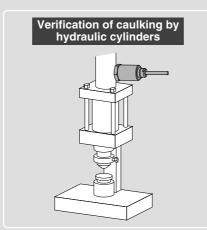

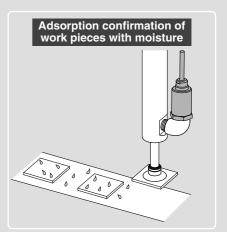


Note: Please be careful of the inertial force of sudden water irruption at the time of vacuum release. Parts such as the adapter with throttle (ZS-31-X175 etc.) are available as a measure to avoid sudden irruption. Please refer to the back of page 3 (About intrusion of water or drainage) for details.

## **Pressure Sensor** For General Fluids

# Series PSE560



#### **How to Order**

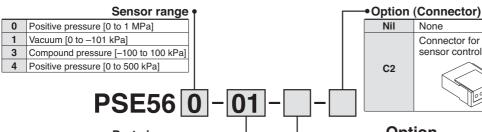

Note 1) Current output type cannot be connected to the PSE200 series.

Note 2) At the factory, the connector is not attached to the cable, but packed together with it for shipment.

Port size

R 1/8 (with M5 female thread) 02 R 1/4 (with M5 female thread) **C01** Rc 1/8 N01 NPT 1/8 (with M5 female thread) N02 NPT 1/4 (with M5 female thread) **A2** URJ 1/4

#### Output specifications

Nil	Voltage output type 1 to 5 V
28	Current output type 4 to 20 mA

#### **Option**

None

Connector for pressure

sensor controller (1 pc.)

Nil

C2

Description	Part no.	Note
Connector for pressure sensor controller	ZS-28-C	1 pc.
Adapter with throttle Rc1/4	ZS-31-X175	1 pc.
Adapter with throttle NPT1/4	ZS-31-X185	1 pc.
Adapter with throttle Rc1/8	ZS-31-X188	1 pc.
Adapter with throttle NPT1/8	ZS-31-X189	1 pc.

#### **Specifications**

**B2** TSJ 1/4

Model	PSE560 (Positive pressure)	PSE561 (Vacuum)	PSE563 (Compound pressure)	PSE564 (Positive pressure)
Rated pressure range	0 to 1 MPa	0 to -101 kPa	-100 to 100 kPa	0 to 500 kPa
Extension analog output range	-0.1 to 0 MPa	10.1 to 0 kPa	_	-50 to 0 kPa
Proof pressure	1.5 MPa	500 kPa	500 kPa	750 kPa

	procedio	1.0 1011 0	000 Ki u	000 III u	700 Ki u	
	Model	PSE56□-□ PSE56□-□-28			□-□-28	
Applicable fluid		Liquid or gas that will not corrode stainless steel 316L				
Powe	r supply voltage	12 to 24 VDC ±10%, Ripple (p-p) 10% or less (with power supply polarity protection)				
Curre	ent consumption	10 mA o	10 mA or less —		-	
Output specification Ω		, ,	ated differential pressure range) extension analog output range) I $k\Omega$	ted differential pressure range) Analog output: 4 to 20 mADC (within rated differential pressur tension analog output range) Allowable load impedance: 500 Ω or less (at 24 VE)		
Accura	acy (Ambient temperature at 25°C)	±1% F.S. or less (with rated pressure range), ±3% F.S. or less (with extension analogue output range)				
Linearity		±0.5% F.S. or less				
Repeatability		±0.2% F.S. or less				
Powe	r supply voltage effect		±0.3% F.	S. or less		
	Enclosure	IP65				
_	Operating temperature range	Operating: -10 to 60°C, Stored: -20 to 70°C (No freezing or condensation)				
Se St	Operating humidity range	Operating/Stored: 35 to 85% RH (No condensation)				
tan	Withstand voltage	250 VAC for 1 minute between live parts and case				
iror	Insulation resistance	50 MΩ or more between live parts and case (at 500 VDC measured via Megohmmeter)				
Operating humidity range Withstand voltage Insulation resistance Vibration resistance		10 to 150 Hz at whichever is smaller of 1.5 mm amplitude or 20 m/s² acceleration, in X, Y, Z directions, for 2 hours each (De-energized)				
	Impact resistance	500 m/s <sup>2</sup> in X, Y, Z directions, 3 times each (De-energized)				
Temp	erature characteristics	±2% F.S. or less (0 to 50°C: Based on 25°C), ±3% F.S. or less (-10 to 60°C: Based on 25°C)				
Standards		Conforming to CE marking, UL (CSA)				


#### **Piping Specifications**

ı ıpıııg v	opcomounomo							
	Model	01	02	N01	N02	C01	A2	B2
Port size		R1/8	R1/4	NPT1/8	NPT1/4	Rc1/8	URJ1/4	TSJ1/4
		M5 x 0.8	M5 x 0.8	M5 x 0.8	M5 x 0.8	RC1/8 URJ1/4	1331/4	
Material			Case: C3604	+ nickel plated, F	iping port/pressu	re sensor: Stainle	ess steel 316L	
Sensor cable		PSE56□-□: Oil	proof heavy-duty vi	nyl cable with air tu	be, 3 cores, ø5.1, 3	m, Conductor are	a: 0.2 mm², Insulato	or O.D.: 1.12 mm
		PSE56□-□-28: Oi	l proof heavy-duty	vinyl cable with air	tube, 2 cores, ø5.1,	3 m, Conductor ar	rea: 0.2 mm², Insula	ator O.D.: 1.12 mm
Weight	With sensor cable	193 g	200 g	194 g	201 g	187 g	203 g	193 g
	Without sensor cable	101 g	108 g	102 g	109 g	95 g	111 g	101 g




#### **Internal Circuit**



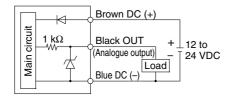


#### **PSE56**□-□-28 Current output type 4 to 20 mA Allowable load impedance 500 $\Omega$ or less (at 24 VDC)


Pressure

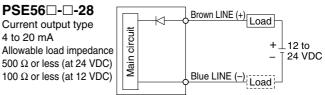

\* Install the load either on the LINE (+)

1 to 5 VDC

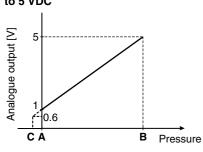


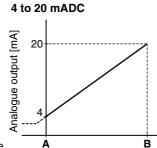


Range	Rated pressure range	Α	В	С
For vacuum	0 to -101 kPa	0	-101 kPa	10.1 kPa
For compound pressure	-100 kPa to 100 kPa	–100 kPa	100 kPa	_
For positive	0 to 1 MPa	0	1 MPa	-0.1 MPa
pressure	0 to 500 kPa	0	500 kPa	-50 kPa

or LINE (-) side.


#### **Dimensions**

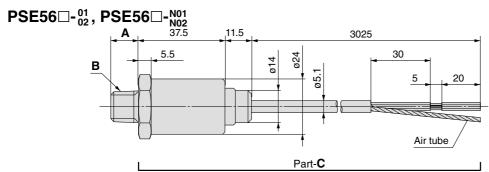


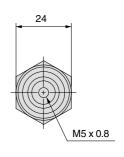


\* The dimensions of part  ${\bf C}$  are common to all PSE56 $\square$  models.


#### **PSE56**□-C01

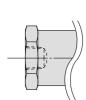

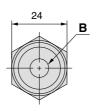



#### PSE56□-A2

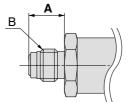

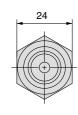



#### **PSE56** □ - **B2**

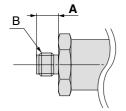

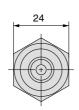

		(mm)
Model	Α	В
PSE56□-01	8.2	R1/8
PSE56□-02	12	R1/4
PSE56□-N01	9.2	NPT1/8
PSE56□-N02	12.2	NPT1/4
PSE56□-C01	_	Rc1/8
PSE56□-A2	15.5	URJ1/4
PSF56□-B2	9.5	TS.I1/4

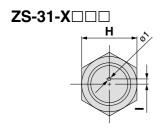

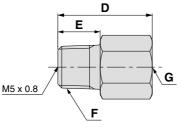

						(mm)
Model	D	E	F	G	Н	I
ZS-31-X188	20	9	R1/8	Rc1/8	14	1.5
ZS-31-X189	20	9	NPT1/8	NPT1/8	14	1.5
ZS-31-X175	29	13	R1/4	Rc1/4	17	1.6
ZS-31-X186	29	13	NPT1/4	NPT1/4	17	1.6




## Multi-channel Digital Pressure Sensor Controller

## Series PSE200


	Applicabl	e sensors		Rated pressure range		Setting/Display resolution		
PSE53□	PSE54□	PSE55□	PSE56□	-100 kPa	0	100 kPa	1 MPa	
PSE531	PSE541	_	PSE561	-101 kPa	0			0.1 kPa
PSE533	PSE543	_	PSE563	-100 kPa		100 kPa		0.1 kPa
PSE530	PSE540	_	PSE560		0	\$	1 MPa	0.001 MPa
PSE532		_			0	100 kPa		0.1 kPa


- A single controller monitors up to 4 pressure sensors
- Sensor input: 4 inputs
- Switch output: 5 outputs (2 outputs for 1ch, 1 output for 2 to 4ch)

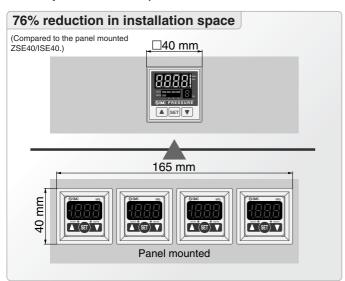

#### Functions

- Auto-shift function
- Auto-preset function
- Auto-identification function
- Copy function
- Channel scan function
- Reset function
- Key lock function
- Peak/Bottom values display function
- Unit display switching function
- Display calibration function
- Anti-chattering function

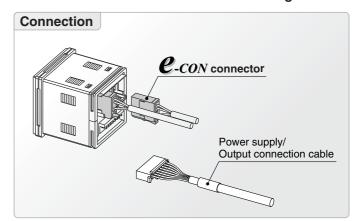


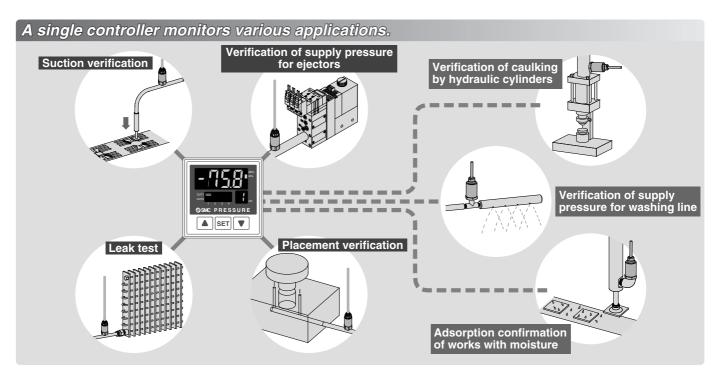

## Multi-channel Controller

## Series PSE200



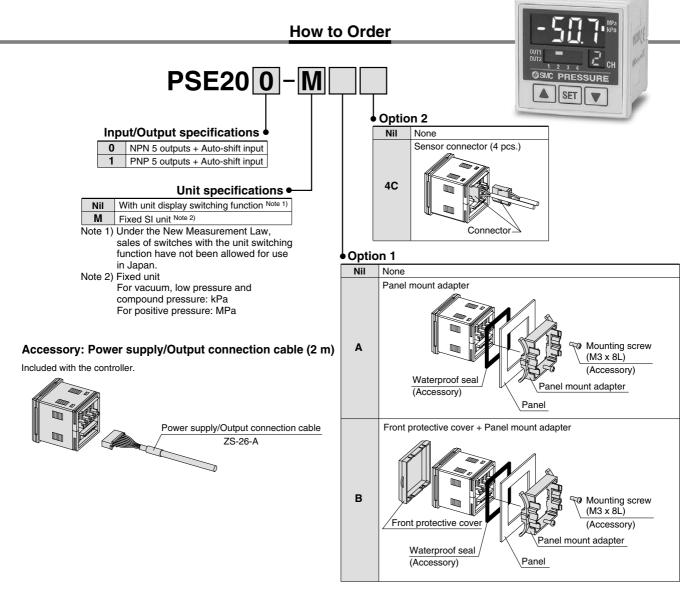

#### **Option**

#### When only optional parts are required, order with the part numbers listed below.

Description	Part no.	Note
Panel mount adapter	ZS-26-B	Waterproof seal, screws included
Front protective cover + Panel mount adapter	ZS-26-C	Waterproof seal, screws included
□48 conversion adapter  * This adapter is used to mount the PSE200 series on the panel fitting of the PSE100 series.	ZS-26-D	□48 conversion adapter
	Order panel	mount adapter separately.
Front protective cover	ZS-2	6-01
Sensor connector	ZS-2	8-C (1 pc. per set)



## Series PSE200

## **Specifications**

	Model	PSE200	PSE201	
Power supply v	oltage	12 to 24 VDC, Ripple (p-p) 10% or less (with power supply polarity protection)		
Current consun	nption	55 mA or less (Current consumption for sensor is not included.)		
Power supply v	oltage for sensor	[Power supply voltage] -1.5 V		
Power supply c	current for sensor Note 1)	40 mA maximum (100 mA maximum for the total	power supply current when 4 sensors are input.)	
Sensor input		1 to 5 VDC (Input imped	dance: Approx. 800 kΩ)	
	Number of inputs	4 in	outs	
	Input protection	With excess voltage pr	otection (Up to 26.4 V)	
Switch output		NPN open collector output: 5 outputs (Sensor input CH1: 2 outputs, CH2 to 4: 1 output)	PNP open collector output: 5 outputs (Sensor input CH1: 2 outputs, CH2 to 4: 1 output)	
	Maximum load current	80	mA	
	Maximum load voltage	30 V		
	Residual voltage	1 V or less (with loa	d current of 80 mA)	
	Response time	5 ms or less (Response time selections with ar	nti-chattering function: 20 ms, 160 ms, 640 ms)	
	Short circuit protection	With short circuit p	protection function	
Repeatability		±0.1% F.S. ±1 digit or less		
Hysteresis	Hysteresis mode	Adjustable (can be set from 0)		
nysteresis	Window comparator mode	Fixed (3 digits)		
Display		For measured value display: 4-digit, 7-segment indicator, Display color: Orange (Sampling frequency: 4 times/sec)		
Display		For channel display: 1-digit, 7-seg	ment indicator, Display color: Red	
Display accuracy	(Operating temerature at 25°C)	±0.5% F.S. ±1 digit or less		
Indication light		Red (Lights up when output is turned ON.)		
Auto-shift input	t	Non-voltage input (Reed or Solid state), Input 10 ms or more, Independently controllable auto-shift function ON/OFF		
Auto-identificat	ion function	With auto-identification function Note 2)		
	Enclosure	Front face: IP65 (when panel-mounted), Others: IP40		
Environmental	Ambient temperature range	Operating: 0 to 50°C, Stored: -10 to 60°C (No freezing or condensation)		
resistance	Ambient humidity range	Operating/Stored: 35 to 8	5% RH (No condensation)	
	Vibration resistance	10 to 500 Hz at whichever is smaller of 1.5 mm amplitude or 98 m/	s² acceleration, in X, Y, Z directions for 2 hrs. each (De-energized)	
	Impact resistance	980 m/s <sup>2</sup> in X, Y, Z directions,	3 times each (De-energized)	
Temperature ch	naracteristics	±0.5% F.S. or less	s (Based on 25°C)	
Connection		Power supply/Output connection: 8P conne	ector, Sensor connection: e-con connector	
Material		Housing: PBT; Display: Transparent nylon; Back rubber cover: CR		
Weight		Approx. 60 g (Excluding power supply/output cable)		
Power supply/C	Output connection cable	Oil proof heavy-duty vinyl cable, 8 cores, ø4.8, 2 m, Conductor area: 0.15 mm², Insulator O.D.: 0.9 mm		
Standards		Conforming to	o CE marking	

Pressure range	For compound pressure	For vacuum	For low pressure	For positive pressure
Applicable pressure sensor	PSE533 PSE543 PSE563	PSE531 PSE541 PSE561	PSE532	PSE530 PSE560
Set pressure range	-101 to 101 kPa	10 to -101 kPa	-10 to 101 kPa	-0.1 to 1 MPa
Setting/Display resolution	0.1 kPa	0.1 kPa	0.1 kPa	0.001 MPa


Note 1) If the Vcc and 0 V side of the sensor input connector are short circuited, the inside of the controller will be damaged.


Note 2) Auto-identification function comes with "the PSE53 series" pressure sensor only. Other SMC series (PSE540 and 560) are not equipped with this function.




#### **Dimensions**

#### PSE200/201

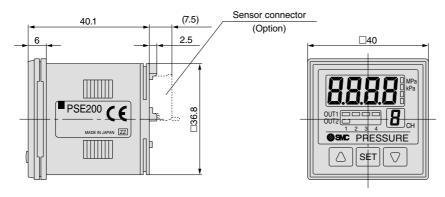


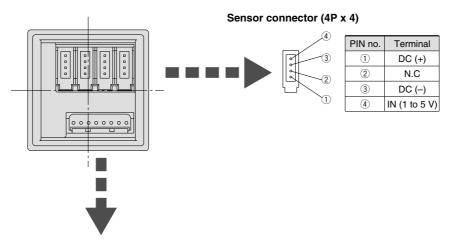

#### Connector (Option)

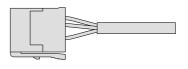


#### Power supply/Output connector (8P)

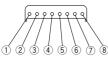

PIN no.	Terminal
1	DC (+)
2	DC (-)
3	CH1_OUT1
4	CH1_OUT2
(5)	CH2_OUT1
6	CH3_OUT1
7	CH4_OUT1
8	Auto-shift input


#### Power supply/Output connection cable (Accessory)

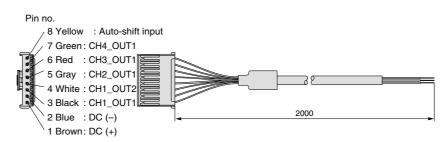

## Series PSE200


#### **Dimensions**


#### Front protective cover + Panel mount

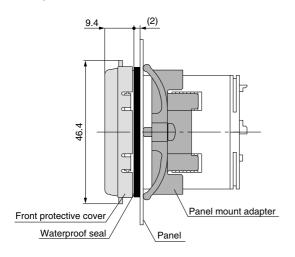




#### □48 conversion adapter + Panel mount

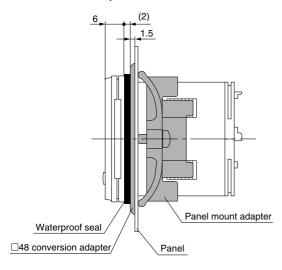

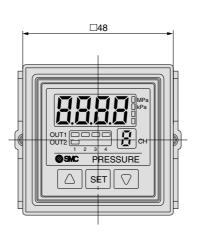

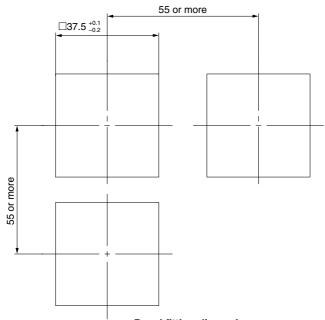

Panel fitting dimension
Applicable panel thickness: 0.5 to 8 mm



#### **Descriptions**

#### 4-digit display

Displays the measured pressure value, content for each setting, and error code.

#### Switch output display

Displays the output status of OUT1 (CH1 to CH4), OUT2 (CH1 only).

Lights up when it is turned ON.

#### **UP** button

Use this button to change the mode or set value.

#### **SET button**

Use this button to set the mode or set value.

#### **Unit display** The selected unit lights up. Use unit labels for units other than MPa and kPa. **Unit labels** kgf/cm<sup>2</sup> bar PSI inHg mmHg **Channel display** PRESSURE **SMC** Displays the selected channel. SET **DOWN** button

Use this button to change the mode or set value.


#### **Error Code & Solution**

Error	LED		
name			Solution
Overcurrent error	Er 1	Excess current is flowing into the switch output of OUT1.	Shut off the power supply. After eliminating the output factor that
Overcur	Er 2	Excess current is flowing into the switch output of OUT2.	caused the excess current, turn the power supply back on.
Residual pressure error	Er 3	Pressure is applied to a pressure sensor during the reset operation (a zero point adjustment) as follows: When compound pressure is used: ±2.5% F.S. or more. When pressure other than compound pressure is used: ±5% F.S. or more.  * After displaying for 2 seconds, it will return to the measuring mode.	Bring the pressure back to atmospheric pressure and use the reset function (zero point adjustment) again.
Applied pressure error		The DC (–) wire of the sensor may be disconnected, or pressure exceeding the upper limit of the setting pressure range may be applied.	Confirm the connection and wiring of the sensor and get the applied
Applied pr		The sensor may be disconnected or mis- wired, or pressure exceeding the lower limit of the setting pressure range may be applied.	pressure back to within the setting pressure range.
	Er 5	Internal data error.	
System error	Er 8	Internal data error.	Shut off the power supply and turn it
Syste	Er 7	Internal data error.	back on.
	Er 8	Internal data error.	

## **Internal Circuit and Connection**


#### **PSE200-(M)**□

• NPN open collector 5 outputs + Auto-shift 1 input specification

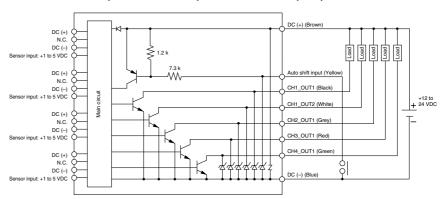

#### **PSE201-(M)**□

• PNP open collector 5 outputs + Auto-shift 1 input specification

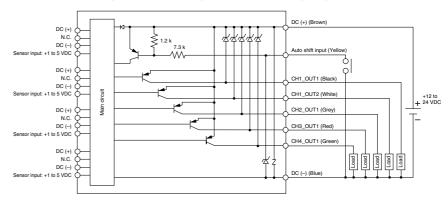

<sup>\*</sup> In the case where the product cannot be returned to the normal state, even though the described measures were taken, please contact us for investigation.



# 2-Color Display Digital Pressure Sensor Controller

## Series PSE300

	Applicabl	e sensors	•	Rated pressure range		Setting/Display resolution			
PSE53□	PSE54□	PSE55□	PSE56□	-100 kPa	0	100 kPa	500 kPa	1 MPa	
PSE531	PSE541	_	PSE561	-101 kPa	0				0.1 kPa
PSE533	PSE543	_	PSE563	-100 kPa		100 kPa		1	0.2 kPa
PSE530	PSE540	_	PSE560		0		\$	1 MPa	0.001 MPa
PSE532	_	_	_		0	100 kPa		1 1	0.1 kPa
_	_	_	PSE564		0	\$	500 kPa		1 kPa
_	_	PSE550	_		0	1			0.01 kPa

#### 2-color display (Red/Green)


Able to set the 4 patterns of the display colour.

Pattern	ON	OFF
1	Red	Green
2	Green	Red
3	Red	Red
4	Green	Green




□30 mm




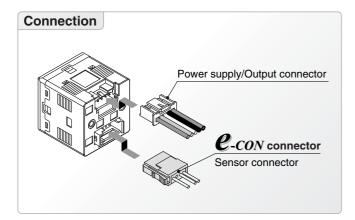

#### Functions

- Auto-shift function
- Auto-preset function
- Display calibration function
- Peak/Bottom values display function
- Key lock function
- Reset function
- Error indication function
- Unit display switching function
- Anti-chattering function

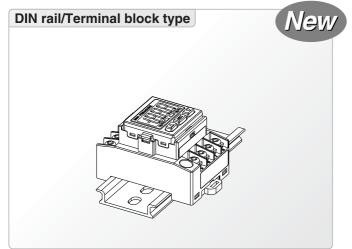


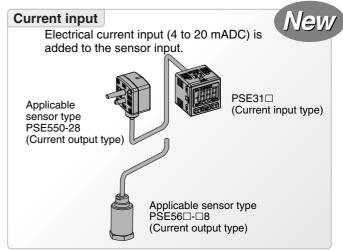

# Pressure Sensor Controller Series PSE300



#### **How to Order**

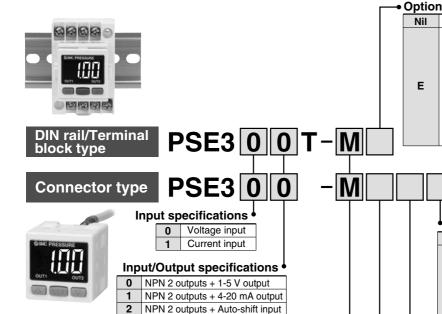

3	PNP 2 outputs + 1-5 V output
4	PNP 2 outputs + 4-20 mA output
5	PNP 2 outputs + Auto-shift input

	Unit specifications
Nil	With unit display switching function Note 1)
	N-+- 0\

M Fixed SI unit Note 2)


Note 1) Under the New Measurement Law, sales of switches with the unit switching function have not been allowed for use in Japan.

Note 2) Fixed unit

For vacuum, low pressure, low differential pressure and compound pressure: kPa

For positive pressure: MPa (For 1 MPa) kPa (For 500 kPa)

#### Option 1

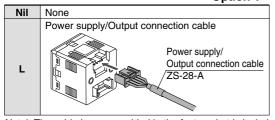

Note) The cable is unassembled in the factory, but is included with the shipment.

Order DIN rail separately. Refer to page 25.

#### **Option**


Description	Part no.	Note
Power supply/Output connection cable (2 m)	ZS-28-A	
Bracket	ZS-28-B	With M3 x 5L (2 pcs.)
Sensor connector	ZS-28-C	1 pc.
Panel mount adapter	ZS-27-C	With M3 x 8L (2 pcs.)
Panel mount adapter + Front protective cover	ZS-27-D	With M3 x 8L (2 pcs.)
Front protective cover	ZS-27-01	1 pc.

#### Option 3

None

Front protective cover

Front protective

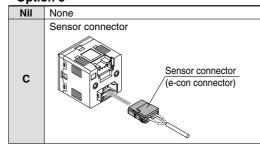

Note) At the factory, the connector is not attached to the cable, but packed together with it for shipment.

#### Option 2

• Option	on 2
Nil	None
Α	Bracket  M3 x 5L  Bracket
В	Panel mount adapter  Panel  Mounting screw (M3 x 8L)  Panel mount adapter
D	Panel mount adapter + Front protective cover  Panel  Front protective cover  Mounting screw (M3 x 8L)  Panel mount adapter

Note) These options are not attached in the factory, but packed together with it for shipment.



## Series PSE300

#### **Specifications**


	Model			PSE	3□□		
Appli	cable pressure sensor	PSE533 PSE543 PSE563	PSE531 PSE541 PSE561	PSE532	PSE530 PSE560	PSE564	PSE550
Set (c	lifferential) pressure range	-101 to 101 kPa	10 to -101 kPa	-10 to 100 kPa	-0.1 to 1 MPa	-50 to 500 kPa	-0.2 to 2 kPa
	g/Display resolution	0.2 kPa	0.1 kPa	0.1 kPa	0.001 MPa	1 kPa	0.01 kPa
Press	ure range Note 1)	For compound pressure	For vacuum	For low pressure	For positiv	e pressure	For low differential pressure
Rated	(differential) pressure range	-100 to 100 kPa	0 to -101 kPa	0 to 100 kPa	0 to 1 MPa	0 to 500 kPa	0 to 2 kPa
Exten	sion analog output range	_	10.1 to 0 kPa	-10 to 0 kPa	-0.1 to 0 MPa	-50 to 0 kPa	-0.2 to 0 kPa
	r supply voltage	12	to 24 VDC ±10%, F	Ripple (p-p) 10% or I	ess (with power sup	ply polarity protecti	on)
Curre	nt consumption		50 mA or le	ss (Current consum)	otion for sensor is n	ot included.)	
Sense	or input			Voltage input 1 to 5 urrent input 4 to 20 r	\ I	,	
	Number of inputs			1 ir	put		
	Input protection			th excess voltage pr			
Hyste	resis		Hysterisis r	mode: Variable, Wind	dow comparator mo	de: Variable	
Switc	h output		N	PN or PNP open coll	ector output: 2 outp	uts	
	Maximum load current				mA		
	Maximum load voltage				NPN output)		
	Residual voltage	1 V or less (with load current of 80 mA)					
	Output protection	With short circuit protection					
Resp	onse time	1 ms or less					
	Anti-chattering function						
Repe	atability	±0.1% F.S. or less					
	Voltage output Note 2)	Output voltage: 1 to 5 V (within rated pressure range (Differential pressure)), 0.6 to 1 V (within extension analogue out Output impedance: Approx. 1 kΩ, Linearity: ±0.2% F.S. (Not including sensor accuracy), Response speed: 150 to 1 V (within extension analogue out output impedance).					
Analo	Accuracy (To display value) (25°C)				±1.5% F.S. or less		
outpu		Output current: 4 to 20 mA (within rated pressure range (Differential pressure)), 2.4 to 4 mA (within extension analogue output range) Maximum load impedance: 300 Ω (at 12 VDC), 600 Ω (at 24 VDC), Minimum load impedance: 50 Ω Linearity: ±0.2% F.S. (Not including sensor accuracy), Response time: 150 ms or less					
	Accuracy (To display value) (25°C)	±1.0% F.S. or less ±2.0% F.S. or less			±2.0% F.S. or less		
	ny accuracy ent temperature at 25°C)	±0.5% F.S. ±2 digits or less		±0.	5% F.S. ±1 digit or I	ess	
Displa	ay	3 + 1/2 d	igit, 7 segment indi	cator, 2-colour displa	y (Red/Green), Sar	npling frequency: 5	times/sec
	ntor light	0	UT1: Lights up whe	n turned ON (Green	), OUT2: Lights up v	when turned ON (Re	ed)
Auto-	shift input Note 2)	Non-vol	tage input (Reed or	Solid state), Low le	vel input: 5 ms or m	ore, Low level: 0.4	V or less
	Enclosure			IP	40		
Environmental resistance	Operating temperature range			50°C, Stored: -10 to			
la de	Operating humidity range	Operating/Stored: 35 to 85% RH (No condensation)					
onr	Withstand voltage	1000 VAC for 1 minute between live parts and case					
virg	Insulation resistance	50 MΩ or more between live parts and case (at 500 VDC Megohmmeter)					
ا ـ قا	Vibration resistance	10 to 150 Hz at whichever is smaller of 1.5 mm amplitude or 98 m/s <sup>2</sup> acceleration, in X, Y, Z directions, for 2 hours each (De-energized			rs each (De-energized)		
	Impact resistance	100 m/s <sup>2</sup> in X, Y, Z directions, 3 times each (De-energized)					
Temp	erature characteristics						
Connection		PSE3□□: Power supply/Output connection: 5P connector, Sensor connection: 4P connector PSE3□□T: Terminal block					
Material			Front case: PBT, F	Rear case: PBT (PSI		d PPE (PSE3□□T)	
Weigl	With power supply/Output connection cable		PSE3□□: 85 g				
	Without power supply/Output connection cable	·					
	supply/Output connection cable	Oil proof he	avy-duty vinyl cable	e, 5 cores, ø4.1, 2 m	•	.2 mm <sup>2</sup> Insulator O.	D.: 1.12 mm
Stanc	ards			Conforming to CE	marking, UL (CSA)		
NI - 4 - 4 \	to 1) Proceure range can be calcated during initial catting.						

Note 1) Pressure range can be selected during initial setting.

Note 2) Auto-shift function is not available when analogue output option is selected. Also, analogue output option is not available when auto-shift function is selected.

Note 3) The following units can be selected with unit conversion function: For vacuum & compound pressure: kPa·kgf/cm²-bar-psi·mmHg·inHg For positive pressure & low pressure: MPa·kPa·kgf/cm²-bar-psi For low differential pressure: kPa·mmH<sub>2</sub>O

#### **Analogue Output**

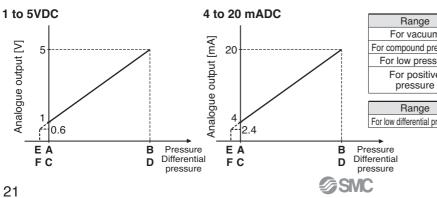

Range	Rated pressure range	Α	В	Ш
For vacuum	0 to -101 kPa	0	-101 kPa	10.1 kPa
For compound pressure	-100 kPa to 100 kPa	-100 kPa	100 kPa	_
For low pressure	0 to 100 kPa	0	100 kPa	-10 kPa
For positive	0 to 1 MPa	0	1 MPa	-0.1 MPa
pressure	0 to 500 kPa	0	500 kPa	-50 kPa
_	D	_	_	_


Range	Rated pressure range	С	D	F
For low differential pressure	0 to 2 kPa	0	2 kPa	-0.2 kPa

#### **Internal Circuit**

#### PSE3□0

NPN open collector output (2 outputs), Max. 30 V or 80 mA, residual voltage 1 V or less Analogue output: 1 to 5  $\rm V$ 

Output impedance: Approx. 1 k $\Omega$ 

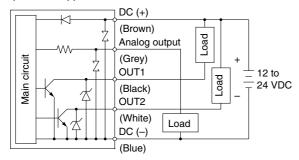


#### PSE3□1

NPN open collector output (2 outputs), Max. 30 V or 80 mA, residual voltage 1 V or less Analogue output: 4 to 20 mA


Maximum load impedance: 300  $\Omega$  (12 VDC), 600  $\Omega$  (24 VDC)

Minimum load impedance: 50  $\Omega$ 

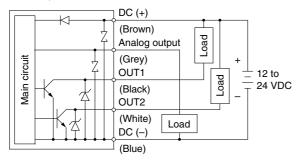

#### PSE3□2


NPN open collector output with auto-shift input (2 outputs), Max. 30 V, 80 mA, residual voltage 1 V or less

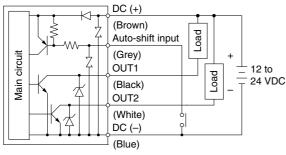

#### PSE3□3

PNP open collector output (2 outputs), Max. 80 mA, residual voltage 1 V or less Analogue output: 1 to 5 V  $\,$ 

Output impedance: Approx. 1 k $\Omega$ 

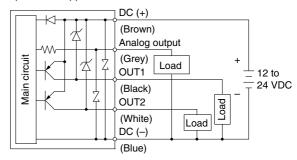


#### PSE3□4

PNP open collector output (2 outputs), Max. 80 mA, residual voltage 1 V or less Analogue output: 4 to 20 mA


Maximum load impedance: 300  $\Omega$  (12 VDC), 600  $\Omega$  (24 VDC)

Minimum load impedance: 50  $\Omega$ 

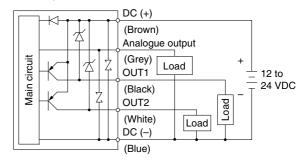

#### PSE3□5

PNP open collector output with auto-shift input (2 outputs), Max. 80 mA, residual voltage 1 V or less

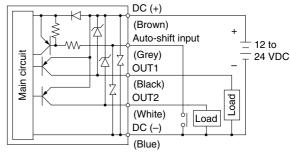

Note: The colours in parentheses indicate the color of the lead wire when it is connected to the power supply / output connection cable (ZS-28-A).

#### **Descriptions**

#### LCD

Displays the current pressure, set mode, selected display unit, and error code. Four different display settings are available. Always use red or green display; or switch between green and red according to the output.

#### Output (OUT1) display (Green)

Lights up when OUT1 is turned ON.

#### Up button

Use this button to select the mode or increase the ON/OFF set value.

It is also used for switching to the peak display mode.



#### Output (OUT2) display (Red)

Lights up when OUT2 is turned ON.

#### **SET button**

Use this button to change the mode or confirm the set value.

#### **Down button**


Use this button to select the mode or decrease the  $\ensuremath{\mathsf{ON/OFF}}$  set value.

It is also used for switching to the bottom display mode.




## Series PSE300

#### **Dimensions**

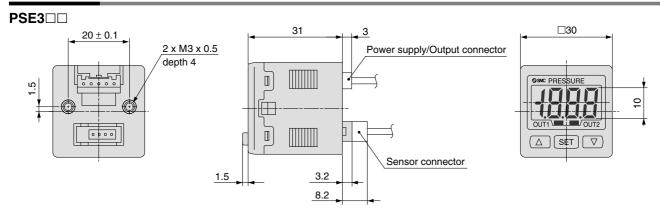


#### Power supply/Output connection cable (ZS-28-A)


## Sensor connector

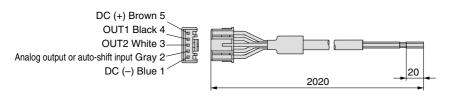

PIN	Terminal	
no.	PSE30□	PSE31□
1	DC (+)	LINE (+)
2	N.C.	N.C.
3	DC (-)	N.C.
4	IN (1 to 5 V)	LINE (-)

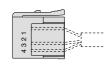




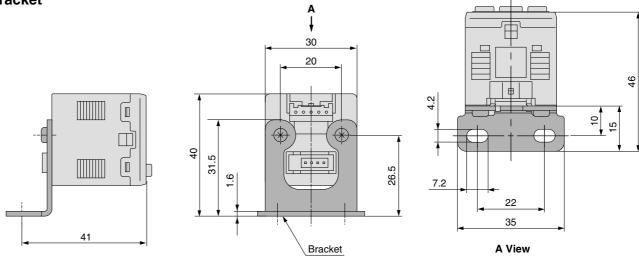

#### With panel mount adapter


#### With panel mount adapter + Front protective cover

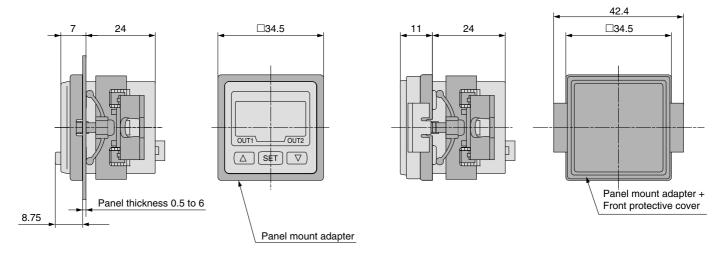


#### **Dimensions**


#### **Panel fitting dimensions**

#### Mount of single unit

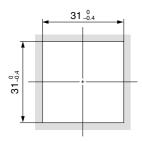


#### Horizontal stacking mount of multiple units (n pcs.)

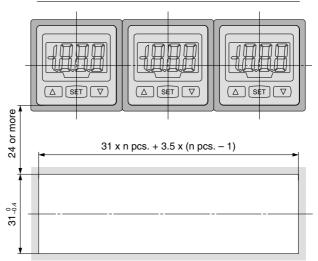

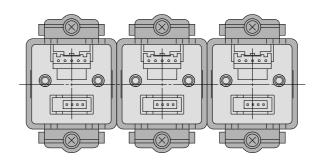


#### Vertical stacking mount of multiple units (n pcs.)

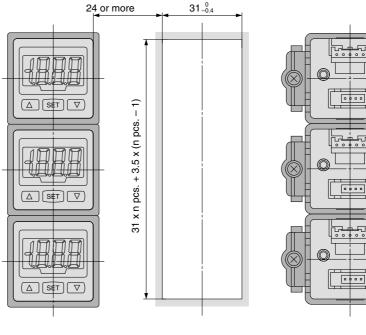


## Series PSE300

#### **Dimensions**

#### PSE3□□T

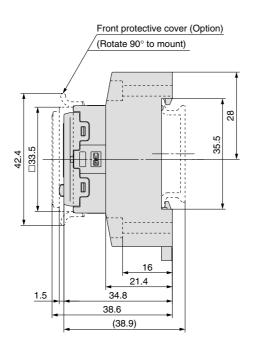


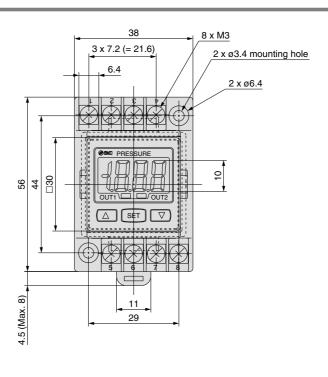


#### **Connections**

#### **PSE30**□T (Pressure input type)




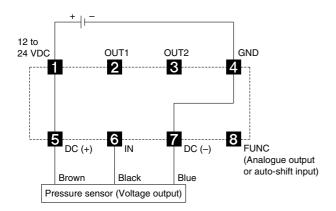


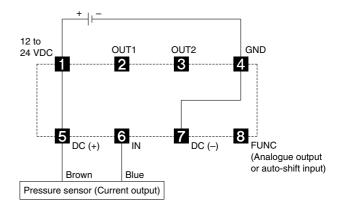

#### **DIN Rail**

#### ISA-5-□

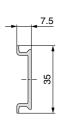

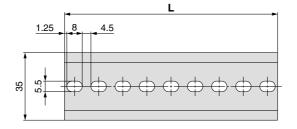

Part no.	L
ISA-5-1	73.0
ISA-5-2	135.5
ISA-5-3	173.0
ISA-5-4	210.5
ISA-5-5	248.0
ISA-5-6	285.5
ISA-5-7	323.0




#### **Function Details**

#### A Auto-shift function

When there are large fluctuations in the supply pressure, the switch may fail to operate correctly. The auto-shift function compensates such supply pressure fluctuations. It measures the (differential) pressure at the time of auto-shift signal input and uses it as the reference (differential) pressure to correct the set value on the switch.

#### Set value correction by auto-shift function

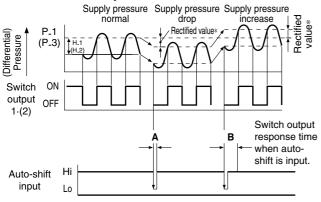

	A Auto-shift input time	<b>B</b> Switch output response time at time of auto-shift input
PSE200	10 ms or more	15 ms or less
PSE300	5 ms or more	10 ms or less

#### \* Rectified value

When the auto-shift is selected, "ooo" will be displayed for approximately 1 second, and the pressure value at that point will be saved as a rectified value "C\_5" (for CH1 of PSE200 and PSE300) or "C\_3" (for CH2 to 4 for PSE200). Based on the saved rectified values (Note), the set value "P\_1" to "P\_4" (for PSE200) or "P\_1", "H\_1", "P\_3", "H\_2" (for PSE300) will likewise be rectified.

Note) When an output is reversed, "n\_1" to "n\_4" (for PSE200) or "n\_1", "H\_1", "n\_3", "H\_2" (for PSE300) will be rectified.

#### **Possible Set Range for Auto-Shift Input**

PSE200	Regulating pressure (Differential pressure) range	Possible set range
Compound pressure	-101.0 to 101.0 kPa	-101.0 to 101.0 kPa
Vacuum	10.0 to -101.0 kPa	101.0 to -101.0 kPa
Low pressure	-10.0 to 101.0 kPa	-100.0 to 101.0 kPa
Desitive pressure	-0.1 to 1.000 MPa	-1.000 to 1.000 MPa
Positive pressure	_	_
Low differential pressure	_	_

PSE300	Regulating pressure (Differential pressure) range	Possible set range
Compound pressure	-101.0 to 101.0 kPa	-101.0 to 101.0 kPa
Vacuum	10.0 to -101.0 kPa	101.0 to -101.0 kPa
Low pressure	-10 to 100.0 kPa	-100.0 to 100.0 kPa
Decitive preserve	-0.1 to 1.000 MPa	-1.000 to 1.000 MPa
Positive pressure	-50 to 500 kPa	-500 to 500 kPa
Low differential pressure	-0.2 to 2.00 kPa	-2.00 to 2.00 kPa


#### Auto-shift zero (Series PSE300 only)

The basic function of auto-shift zero is the same as the function for auto-shift. Also it corrects values on the display, based on a pressure value of 0, when the auto-shift is selected.

#### **B** Auto-preset function

Auto-preset function, when selected in the initial setting, calculates and stores the set value from the measured (differential) pressure. The optimum set value is determined automatically by repeating vacuum and break with the target workpiece several times.

#### **Adsorption Verification**

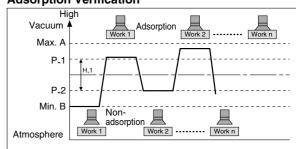


#### Formula for Obtaining the Set Value

	P_1 or P_3	P_2(H_1) or P_4(H_2)
PSE200	P_1(P_3)=A-(A-B)/4	P_2(P_4)=B+(A-B)/4
PSE300		H_1(H_2)=(A-B)/2

#### **c** Precision indicator setting

This function eliminates slight differences in the output values and allows uniformity in the numbers displayed. Displayed values of the pressure sensors can be adjusted to within  $\pm 5\%$ .

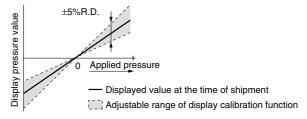

Note) When the precision indicator setting function is used, the set (differential) pressure value may change  $\pm 1$  digit.

#### D Peak and bottom display function

This function constantly detects and updates the maximum and minimum values and allows to hold the display value.

For PSE300, when the  $\triangle \nabla$  are simultaneously pressed for 1 second or longer, while "holding", the hold value will be reset.

#### **E** Key lock function

This function prevents incorrect operations such as accidentally changing the set value.

#### **F** Reset function

This function clears and resets the zero value on the display of measured (differential) pressure within  $\pm 7\%$  F.S. of the factory adjusted value.



### Series **PSE200/300**

#### **Function Details**

#### **G** Error indication function

Error	E	rror	code			
name	PSE200		PSE300	Description		
rcurrent	Er 1		Er 1	Load current of switch output (OUT1) exceeds 80 mA.		
Overcurrent error	Er 2		E-2	Load current of switch output (OUT2) exceeds 80 mA.		
Residual pressure error	Er 3 Er3			Pressure applied during the zero reset operation exceeds ±7% F.S.  * After displaying the error code for 3 seconds, the switch automatically returns to the measuring mode. Due to individual product differences, the setting range varies ±4 digits.		
essure			ннн	Supply pressure exceeds the maximum set (differential) pressure or upper limit of the display pressure.		
Applied pressure error			LLL	A sensor may be disconnected or mis- wired. Or, supply pressure is below the minimum set (differential) pressure or lower limit of the display pressure.		
Auto-shift error			٥٢	The value measured at the time of auto- shift input is outside the set (differential) pressure range.  * After displaying the error code for one second, the switch returns to the measuring mode.		
System error	Er	5	Er4	Internal data error		
	Er	5	E-8	Internal data error		
	Er	7	Er 7	Internal data error		
	Er 8 Er		Er8	Internal data error		

#### H Copy function (Series PSE200 only)

Information that can be copied includes the following: ① Pressure set values, ② Range settings, ③ Display units, ④ Output modes, ⑤ Response times.

- When CH1 is copied to CH2, CH3, and CH4, information of OUT1 in CH1 will be copied.
- When CH2, CH3, or CH4 is copied to CH1, information of OUT1 in CH2, CH3, or CH4 will be copied only to OUT1 in CH1.

Note) When the copy function is used, the regulating pressure value of the copied channel may change  $\pm 1$  digit.

#### Auto-identification function (Series PSE200 only)

This function automatically identifies the pressure range of the pressure sensor that is connected to the multi-channel pressure sensor controller, thus eliminating the need of having to reset the range again after replacing the sensor. This function will be activated either when "Aon" is set in the auto-identification mode or when the power is turned back on in that condition. However, this function only works in conjunction with specific pressure sensors (SMC Series PSE53 $\square$ ). When other pressure sensors are used, this function will not work. When using other types of pressure sensors, first set the auto-identification mode to "AoF", and then proceed to setting the range. Turning the power back on while in the "Aon" setting can cause a malfunction.


#### J Anti-chattering function

A large bore cylinder or ejector consumes a large volume of air in operation and may experience a temporary drop in the supply pressure. This function prevents detection of such temporary drops in the supply pressure as an error.

	Available response time settings					
PSE200	20 ms, 160 ms, 640 ms					
PSE300	20 ms, 160 ms, 640 ms, 1280 ms					

#### <Principle>

This function averages pressure values measured during the response time set by the user and then compares the average pressure value with the pressure set point value to output the result on the switch.

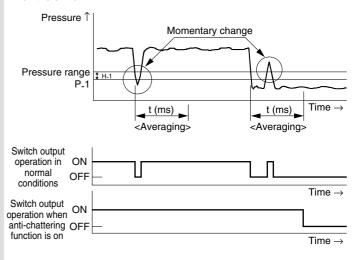

#### K Anti-chattering function (Series PSE200 only)

Pressure value for the selected channel is displayed.

#### Anti-chattering function (Series PSE200 only)

Pressure values for each channel are displayed by turns at 2-second intervals.



#### **Function Details**

### M Unit display switching function

Display units can be switched with this function. Units that can be displayed vary depending on the range of the pressure sensors connected to the controller.

#### PSE200

	ssure inge	For compound pressure	For vacuum	For low pressure	For positive pressure
	licable ssure	PSE533 PSE543	PSE531 PSE541	PSE532	PSE530 PSE540
sen	sor	PSE563	PSE561		PSE560
Set pressure (differential pressure) range		-101 to 101 kPa	10 to -101 kPa	–10 to 100 kPa	-0.1 to 1 MPa
28	kPa	0.1	0.1	0.1	_
רח	MPa	_	_	_	0.001
GF	kgf/cm <sup>2</sup>	0.001	0.001	0.001	0.01
bAr	bar	0.001	0.001	0.001	0.01
P5 ,	psi	0.02	0.01	0.01	0.1
ınH	inHg	0.1	0.1	_	_
ññX	mmHg	1	1	_	_

#### PSE300

F3E300							
Pressure range		For compound pressure	For vacuum	For low pressure	For positive pressure		For low differential pressure
Applicable pressure		PSE533 PSE543	PSE531 PSE541	PSE532	PSE530 PSE540	PSE564	PSE550
sensor		PSE563	PSE561		PSE560		
Set pre (differe pressu		-101 to 101 kPa	10 to -101 kPa	-10 to 100 kPa	–0.1 to 1 MPa	-50 to 500 kPa	-0.2 to 2.00 kPa
PR	kPa	0.2	0.1	0.1	_	1	0.01
77	МРа	_	_	_	0.001	_	_
GF.	kgf/cm <sup>2</sup>	0.002	0.001	0.001	0.01	0.01	_
ьЯг	bar	0.002	0.001	0.001	0.01	0.01	_
P5 ,	psi	0.05	0.02	0.02	0.2	0.1	_
ınH	inHg	0.1	0.1	_	_	_	_
ññX	mmHg	2	1	_	_	_	1 mmH₂O





## Series PSE5□□

## **Specific Product Precautions 1**

Be sure to read before handling. Refer to "Precautions for Handling Pneumatic Devices" (M-03-E3A) for Safety Instructions and Pressure Switches Precautions.

#### Pressure Sensors


Handling

## **⚠** Warning


- Do not drop, bump, or apply excessive impact (PSE530, 540: 980 m/s², PSE560: 500 m/s², PSE550: 300 m/s²) while handling. Although the body of the sensor may not be damaged, the inside of the sensor could be damaged and lead to malfunction.
- The tensile strength of the cord is PSE530: 23 N, PSE540, 550, 560: 50 N or less. Applying a greater pulling force to it can cause malfunction. When handling, hold the body of the sensor do not dangle it from the cord.
- Do not use pressure sensors with corrosive and/or flammable gases or liquids.

#### (PSE530)

- 1. Do not exceed the screw-in torque of 3.5 N·m when installing piping. Exceeding this value may cause malfunctioning of the sensor.
- Connecting the sensor cable (optional)
   Hold the female connector of the sensor cable with your fingers and carefully insert it into the connector.

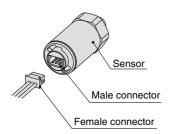

A connector cover is provided as part of the cable assembly (see the figure below). It is designed to keep the female cover in place, first make sure it is facing in the right direction as you slip it over the female connector, then lock it to the sensor body by turning it clockwise. To remove the cover, first unlock it by turning it counterclockwise, then pull back on it. To remove the female connector, grab it with your fingers and pull back on it. Do not pull on the cable.

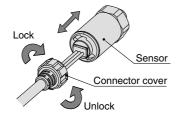

#### (PSE540/550)

1. Care should be taken when stripping the outer cable covering as the insulator may be accidentally torn or damaged if incorrectly stripped, as shown on the right.

#### Wiring

#### **⚠** Caution

· Confirm that the

the colours of

the wires and

that the wires


are inserted to


the bottom.

numbers on the

connector match

- 1. Connection of sensor connector
  - Cut the sensor cable as illustrated to the right.

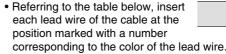

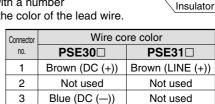


Black (OUT: 1 to 5 V) Blue (LINE (-))


Sheath 20 mm or more

Press Part A by hand for temporary fixing.

 Press in the central part of Part A vertically with a tool such as pliers.

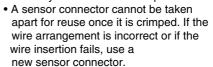

 For connection to SMC pressure switches, use sensor connectors (ZS-28-C□) or e-con connectors listed below.

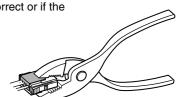

Series	Sumitomo 3M Ltd.	Tyco Electronic AMP K.K.	OMRON Corp.
PSE53□	37104-3101-000FL	3-1473562-4	XN2A-1430
PSE54□	37104-3101-000FL	1-1473562-4	XN2A-1430
PSE55□	37104-3101-000FL	1-1473562-4	XN2A-1430
PSE56□	37104-3101-000FL	1473562-4	XN2A-1430

 For details about the e-con connector, contact the respective connector manufacturer.





## Series **PSE5**□□

## **Specific Product Precautions 2**

Be sure to read before handling.

Refer to "Precautions for Handling Pneumatic Devices" (M-03-E3A) for Safety Instructions and Pressure Switches Precautions.

#### **Pressure Source**

## **Marning**

## Use of toxic, corrosive or flammable gas Do not use toxic, corrosive and flammable gas. Also, note that the switch is not explosion-proof.

## 2. Applicable fluid (PSE530/540/550)

Do not use for corrosive, flammable gases or fluids.

#### (PSE560)

The fluid contact areas are stainless steel 316L (pressure sensor fittings). Use fluid that will not corrode the materials. (For corrosiveness of fluid, consult the manufacturer of the fluid.)

## 3. Helium leakage test (PSE56□-A2 only)

Helium leakage test is conducted on the welding parts. Use a ferrule by Swagelok Company (Swagelok® fittings) as the TSJ fittings and packing, ground, etc. by Swagelok Company (VCR® fittings) as the URJ fittings. If a ferrule, packing or ground by other manufacturers are to be used, conduct helium leakage test before using those products.

\* Swagelok® and VCR® are trademarks of Swagelok Company.

## 4. About intrusion of water or drainage (PSE560)

Although the pressure sensor of this switch employs a stainless steel diaphragm, there are cases in which the inertial force of sudden irruption at the time of vacuum release after adsorption confirmation causes water, or drainage contained in the air, to strike the pressure sensor and damage it.


In such cases, an intermediate orifice can be set up, or an adapter with external throttle (ZS-31-X175, X186, X188, X189) can be mounted to the fitting part of the main body.

#### **Piping Connection**

### 

#### (PSE550)

- Cut the tubing vertically.
- Carefully hold the tubing and slowly push it into the resin pipe, ensuring that it is inserted by more than 8 mm.
   For your information, the tensile strength is approx. 25
   N when inserted by more than 8 mm.

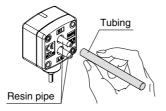

- Insert the low pressure tubing into "Lo" pipe, and the highpressure tubing into "Hi" pipe.
- In cases where SMC tubing is not used, make sure the product has similar I.D. accuracy within Ø4±0.3 mm.
- Make sure that the tubing is firmly inserted to avoid possible disconnection. (Tensile strength is approx. 25 N when being inserted 8 mm.)





# Series PSE200/300 Specific Product Precautions 1

Be sure to read before handling.

Refer to "Precautions for Handling Pneumatic Devices" (M-03-E3A) for Safety Instructions and Pressure Switches Precautions.

#### Controllers

#### Handling

## **⚠** Warning

- Do not drop, bump, or apply excessive impact (PSE200: 980 m/s², PSE300: 100 m/s²) while handling. Although the body of the controller case may not be damaged, the inside of the controller could be damaged and cause malfunction.
- 2. The tensile strength of the power supply/output connection cable is 50 N; that of the pressure sensor lead wire with connector is 25 N. Applying a greater pulling force than the applicable specified tensile strength to either of these components can lead to malfunction. When handling, hold the body of the controller.


#### **Mounting**

## **⚠** Caution

(PSE200)


The front face of the panel mount conforms to IP65 (IP40 when using the □48 conversion adapter); however, there is a possibility of liquid filtration if the panel mount adapter is not installed securely and properly. Securely fix the adaptor with screws as shown below.

#### Standard

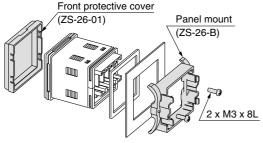

Tighten screws 1/4 to 1/2 turn after the heads are flush with the panel.

#### When using □48 conversion adapter

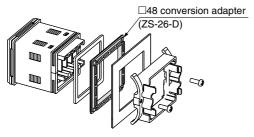

#### Handling


#### **⚠** Caution

#### (PSE300)

#### 1. Mounting with bracket


Mount the bracket on the body with two M3 x 5L mounting screws.

Tighten the bracket mounting screws at a tightening torque of 0.5 to 0.7 N⋅m.

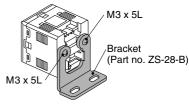

#### 2. Mounting with panel mount adapter


Secure the panel mount adapter with two M3 x 8L mounting screws.

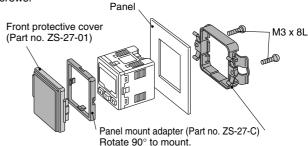

#### 3. Panel mount adapter removal

To remove the controller with panel mount adapter from the equipment, remove the two mounting screws, and pull out the controller while pushing the claws outward.

Failure to follow this procedure can cause damage to the controller and panel mount adapter.

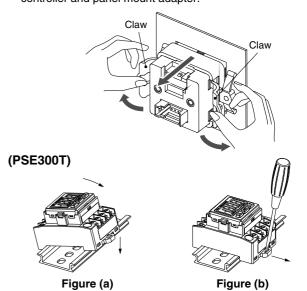

 Please affix the main body by hooking the claws of the lower part over the DIN rail and pressing in the direction of the arrows as shown in Figure (a).

When removing the main body, use a flat head screwdriver or similar tool to pull it in the direction of the arrows as shown in Figure (b).





# Series PSE200/300 Specific Product Precautions 2

Be sure to read before handling.

Refer to "Precautions for Handling Pneumatic Devices" (M-03-E3A) for Safety Instructions and Pressure Switches Precautions.

#### Connection


## Warning


- Incorrect wiring can damage the switch and cause malfunction or erroneous switch output. Connections should be done while the power is turned off.
- Do not attempt to insert or pull out the pressure sensor or its connector when the power is on. Switch output may malfunction.
- Wire separately from power lines and high voltage lines, avoiding wiring in the same conduit with these lines. Malfunctions may occur due to noise from these other lines.
- 4. If a commercial switching regulator is used, make sure that the F.G. terminal is grounded.

#### Wiring

## **⚠** Caution

- 1. Connection and removal of sensor connector
  - Hold the lever and connector body with two fingers and insert the connector straight into the pin until it is locked with a click sound.
  - To remove the connector, pull it out straight while pressing the lever with one finger.

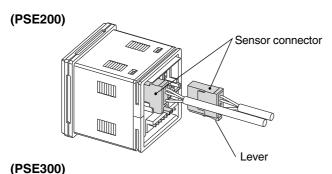

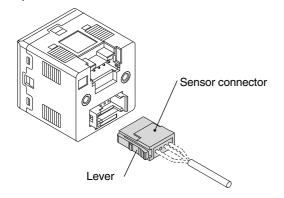

#### 2. Connection of power supply cable and output cable

 Securely connect the power supply cable and the output cable to the body until a click is heard.


#### Wiring

#### **⚠** Caution

## 3. Applicable crimping terminal dimensions (PSE300T)

An M3 terminal screw is used.

If employing a crimping terminal, please use the part shown below.

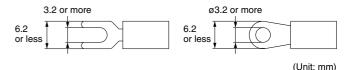

Please tighten the terminal screw with a tightening torque of

### Operating Environment

### **⚠** Warning

0.3 to 0.35 N·m.

 Our pressure sensor controllers are CE marked; however, they are not equipped with surge protection against lightning. Lightning surge countermeasures should be applied directly to system components as necessary.

#### (PSE200)

 If the product is mounted on a panel, the "IP65" enclosure rating is applicable only to the front parts. Never use pressure sensor in the presence of flammable or explosive gases.



#### **⚠** Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

Caution indicates a hazard with a low level of risk Caution: which, if not avoided, could result in minor or moderate injury

Warning indicates a hazard with a medium level of Warning: risk which, if not avoided, could result in death or serious injury

**⚠** Danger :

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety. etc.

#### **⚠** Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
  - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis
  - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

#### **⚠** Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

#### **Limited warranty and Disclaimer/** Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

#### **Limited warranty and Disclaimer**

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.\*2)

Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.

- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
  - \*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### **Compliance Requirements**

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

#### **SMC Corporation (Europe)**

Austria **2**+43 2262622800 office@smc.at www.smc.at Belgium **2**+32 (0)33551464 info@smcpneumatics.be www.smcpneumatics.be Bulgaria **\***+359 29744492 www.smc.bg office@smc.bg Croatia **☎**+385 13776674 www.smc.hr office@smc.hr Czech Republic **2**+420 541424611 office@smc.cz www.smc.cz Denmark **2**+45 70252900 www.smcdk.com smc@smcdk.com Estonia **2**+372 6510370 www.smcpneumatics.ee smc@smcpneumatics.ee Finland **\***+358 207513513 www.smc.fi smcfi@smc.fi France **\***+33 (0)164761000 www.smc-france.fr contact@smc-france.fr **2**+49 (0)61034020 info@smc-pneumatik.de Germany www.smc-pneumatik.de Greece [] **2**+30 210 2717265 www.smchellas.gr sales@smchellas.gr **23511390** www.smc.hu office@smc.hu Hungary **\***+353 (0)14039000 Ireland www.smcpneumatics.ie sales@smcpneumatics.ie Italy **2**+39 (0)292711 www.smcitalia.it mailbox@smcitalia.it Latvia **2**+371 67817700 www.smclv.lv info@smclv.lv

Lithuania Netherlands Norway Poland Portugal Romania Russia Slovakia Slovenia Spain Sweden Switzerland

**\*** +370 5 2308118 **2** +31 (0)205318888 **\*** +47 67129020 **\*** +48 222119600 **\***+351 226166570 **\*** +40 213205111 **2**+7 8127185445 **\***+421 413213212 **\***+386 73885412 **\*** +34 945184100 **\*** +46 (0)86031200 **2** +41 (0)523963131 Turkey **2**+90 212 489 0 440

**\*** +44 (0)845 121 5122

www.smclt.lt www.smcpneumatics.nl www.smc-norge.no www.smc.pl www.smc.eu www.smcromania.ro

www.smc-pneumatik.ru www.smc.sk www.smc.si www.smc.eu www.smc.nu www.smc.ch www.smcpnomatik.com.tr

info@smclt.lt info@smconeumatics.nl post@smc-norge.no office@smc.pl postpt@smc.smces.es smcromania@smcromania.ro info@smc-pneumatik.ru office@smc.sk office@smc.si post@smc.smces.es

post@smcpneumatics.se info@smc.ch info@smcpnomatik.com.tr www.smcpneumatics.co.uk sales@smcpneumatics.co.uk

SMC CORPORATION Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362

UK