

Vacuum Regulator

Single Sided Connections Series

For easy of installation and panel mounting



Single sided connections

Integrated digital pressure switch for panel mounting

(Made to Order)

Digital pressure switch

Vacuum regulator Series IRV

Weight reduced by **20%**

(Compared with the existing IRV2000 plus IRV20 fitting)

New and Improved IRV series

Max. flow

(Over twice the flow of the existing models)

140 l/min (ANR)

Existing IRV1000:
60 l/min (ANR)

240 l/min (ANR)

Existing IRV2000:
100 l/min (ANR)

Standard connections



Series IRV 10

Series IRV 20

Series **IRV10/20**




CAT.EUS60-20A-UK


Easy to attach/detach the pressure gauge and digital pressure switch due to attachment by just a clip.

Mounting direction of the pressure gauge or digital pressure switch can be changed. (Only standard connections)

Standard connections

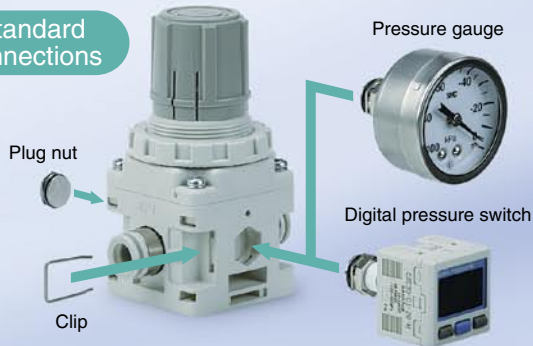

Single sided connections

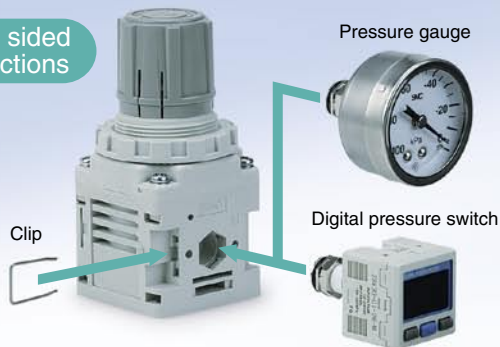

Mounting angle of the pressure gauge or digital pressure switch can be changed easily (in 60 degree increments).



Mounting Variations


Standard connections

Single sided connections



Built-in one-touch fittings

Different size options for both fitting types

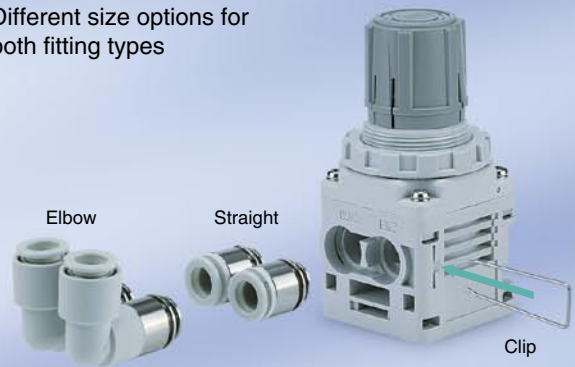

Fitting type	Applicable tubing O.D. (mm)	Model	
		IRV10	IRV20
Straight	ø6	●	●
	ø8	●	●
	ø10	—	●
Elbow	ø1/4"	●	●
	ø5/16"	●	●
	ø3/8"	—	●


Standard connections

Single sided connections




Applications

Vacuum lift

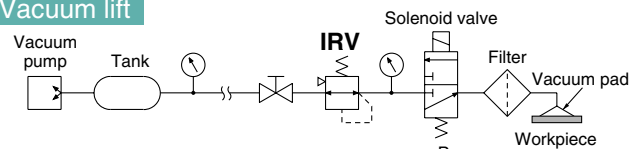

Leak tester

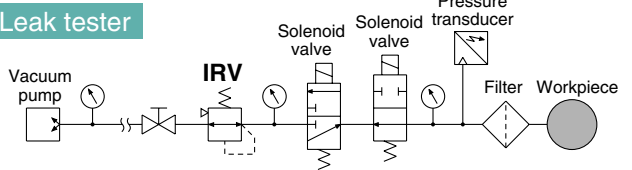

Vacuum Regulator

Series IRV10/20

How to Order

Standard connections

IRV 20 - C08

Body size

10	Max. flow 140 ℓ/min (ANR)
20	Max. flow 240 ℓ/min (ANR)

Fittings

—	Straight
L	Elbow



Straight

Elbow

Connection tubing O.D.

Symbol	Tubing O.D.	IRV10	IRV20
C06	Metric	ø6	●
C08		ø8	●
C10		ø10	—
N07	Inch	ø1/4"	●
N09		ø5/16"	●
N11		ø3/8"	—

Accessory ② Note 1)

—	None		
G	With pressure gauge Note 2) (IRV10: With GZ33-K-01, IRV20: With GZ43-K-01)		
ZN	With digital pressure switch	NPN open collector 1 output	With ZSE30A-01-N-ML
ZP		PNP open collector 1 output	With ZSE30A-01-P-ML
ZA		NPN open collector 2 outputs	With ZSE30A-01-A-ML
ZB		PNP open collector 2 outputs	With ZSE30A-01-B-ML


Note 1) Plug nut and gauge nut are included. (For details, refer to back page 8.)
Accessories are included in the same container.

Note 2) Pressure gauge accuracy: Within ±3% of full scale

Accessory ① Note 1)

—	None
B	With bracket
L	With bottom bracket

Bracket

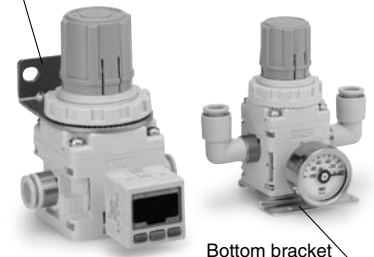

Bottom bracket

Single sided connections

IRV 20 A - C08

Body size


10	Max. flow 140 ℓ/min (ANR)
20	Max. flow 240 ℓ/min (ANR)

Single sided connections

A	Single sided connections
---	--------------------------

Fittings

—	Straight
L	Elbow

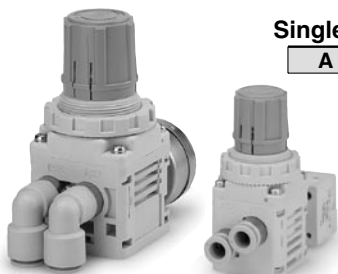

Elbow

Straight

Connection tubing O.D.

Symbol	Tubing O.D.	IRV10A	IRV20A
C06	Metric	ø6	●
C08		ø8	●
C10		ø10	—
N07	Inch	ø1/4"	●
N09		ø5/16"	●
N11		ø3/8"	—

Made to Order

For details, refer to page 10.

Symbol	Specification
X1	Integrated digital pressure switch for panel mounting

Accessory ② Note 1)


—	None		
G	With pressure gauge Note 2) (IRV10A: With GZ33-K-01, IRV20A: With GZ43-K-01)		
ZN	With digital pressure switch	NPN open collector 1 output	With ZSE30A-01-N-ML
ZP		PNP open collector 1 output	With ZSE30A-01-P-ML
ZA		NPN open collector 2 outputs	With ZSE30A-01-A-ML
ZB		PNP open collector 2 outputs	With ZSE30A-01-B-ML

Note 1) Gauge nut is included. Accessories are included in the same container.
Note 2) Pressure gauge accuracy: Within ±3% of full scale

Accessory ① Note 1)

—	None
B	With bracket
L	With bottom bracket

Bracket

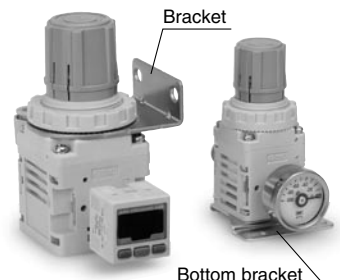

Bottom bracket

Series IRV10/20

Standard Specifications

Model		IRV10	IRV20
Fluid		Air	
Set pressure range ^{Note 1)}		-100 to -1.3 kPa	
Atmospheric intake consumption ^{Note 2)}		0.6 ℓ/min (ANR) or less	
Knob resolution		0.13 kPa or less	
Ambient and fluid temperature		5 to 60°C	
VAC side tubing O.D.		ø6, ø8	ø6, ø8, ø10
SET side tubing O.D.		ø1/4", ø5/16"	ø1/4", ø5/16", ø3/8"
Weight (Without accessories)	Standard connections	135 g (IRV10-C08)	250 g (IRV20-C10)
	Single sided connections	125 g (IRV10A-C08)	250 g (IRV20A-C10)


Note 1) Be careful due to it varies depending on the pressure in vacuum pump side.

Note 2) Air is taken from atmosphere.

Flow-rate Characteristics (Representative Value)


Conditions:
 Vacuum pump exhaust speed:
 2500 ℓ/min
 VAC side pressure:
 -101 kPa (At initial setting)

IRV10-C08 (One-touch fitting ø8)

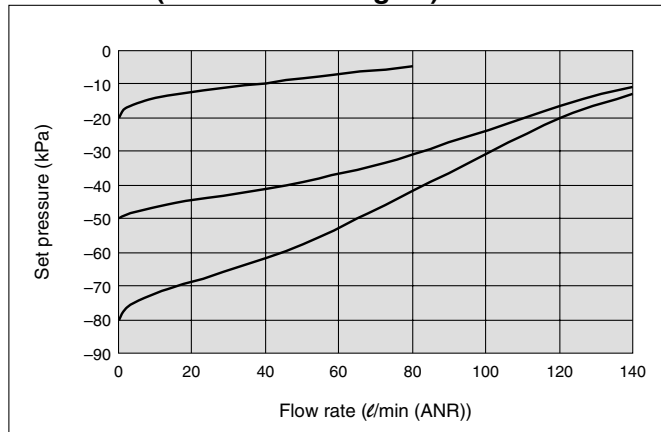


Pressure Characteristics (Representative Value)


IRV10

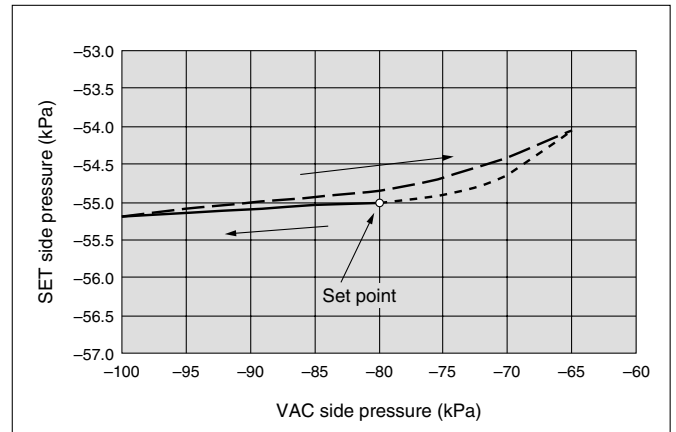


IRV20-C10 (One-touch fitting ø10)

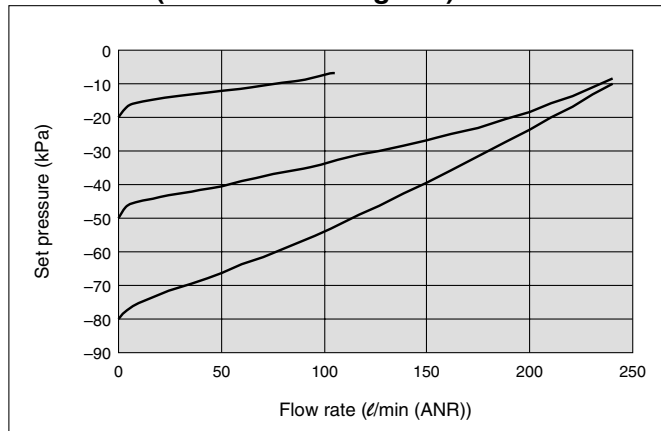

IRV20

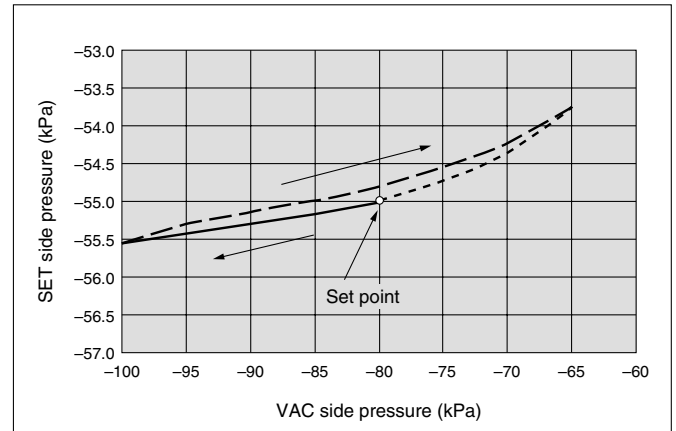

Construction

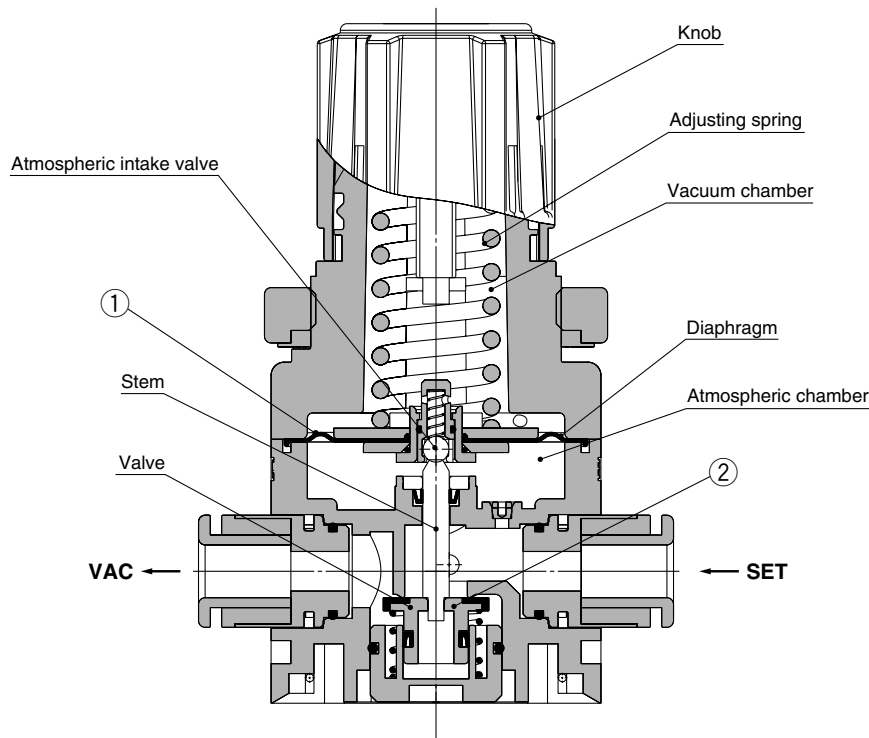

Working principle

When the knob is turned to the right (clockwise), the force generated by the adjusting spring pushes down both the diaphragm and the valve. This connects the VAC side and SET side, and the vacuum on the SET side increases (becomes closer to an absolute vacuum). Furthermore, the SET side vacuum pressure moves through the air passage into the vacuum chamber, where it is applied to the top side of the diaphragm and counters the adjusting spring's compression force: this adjusts the SET side pressure. When the degree of vacuum on the SET side is higher than the designated setting value (becomes closer to an absolute vacuum), the balance between the adjusting spring and the SET side pressure in the vacuum chamber is lost, and the diaphragm is pushed up. This causes the valve to close and the atmospheric intake valve to open, which lets atmospheric air come into the SET side. When the adjusting spring's compression force and the SET side pressure are balanced, the SET side pressure is set. Also, when the degree of vacuum of the SET side pressure is lower than the designated setting value (becomes closer to the atmosphere), the balance between the adjusting spring and the vacuum chamber is lost, and the diaphragm is pushed down. This causes the atmospheric intake valve to close and the valve to open, which lets air into the VAC side. When the adjusting spring's compression force and the SET side pressure are balanced, the SET side pressure is set.


Replacement Parts

No.	Description	Material	Part no.	
			IRV10	IRV20
1	Diaphragm assembly	HNBR, etc.	P601010-2	P601020-2
2	Valve assembly	HNBR, etc.	P601010-3	P601020-3

Series IRV10/20

Dimensions/IRV10: Standard Connections


IRV10-□□□G: With pressure gauge

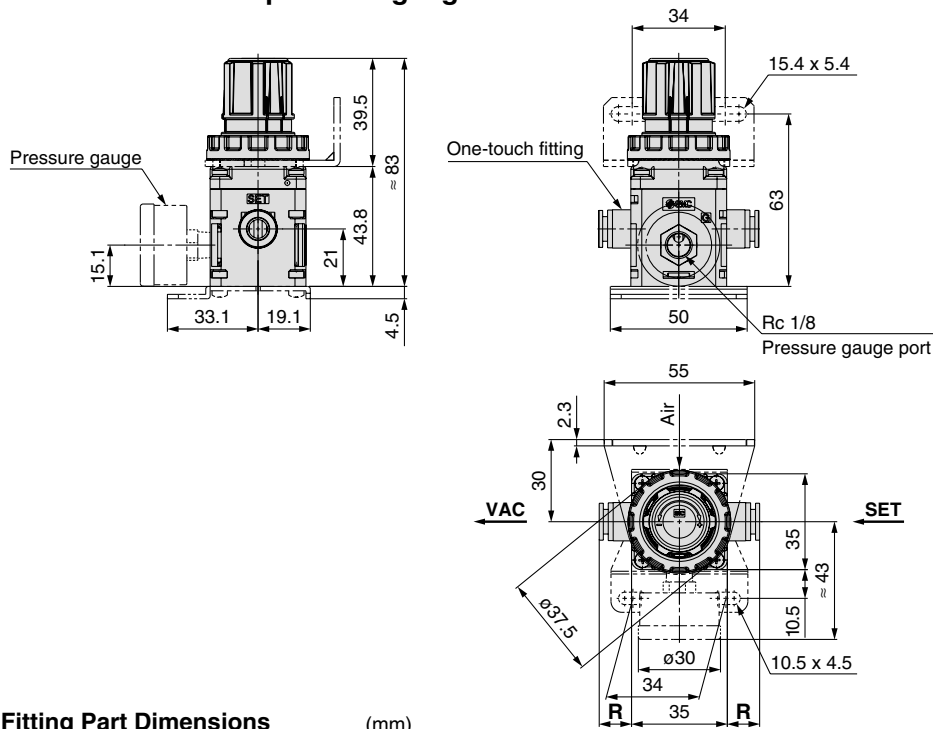

Fitting Part Dimensions (mm)

Fitting size	VAC/SET			
	Straight	Elbow	Elbow	Elbow
	R	S	T	U
ø6, ø1/4"	10	19	26	3
ø8, ø5/16"	12	20	28	6

IRV10-□□□Z^N_A: With digital pressure switch


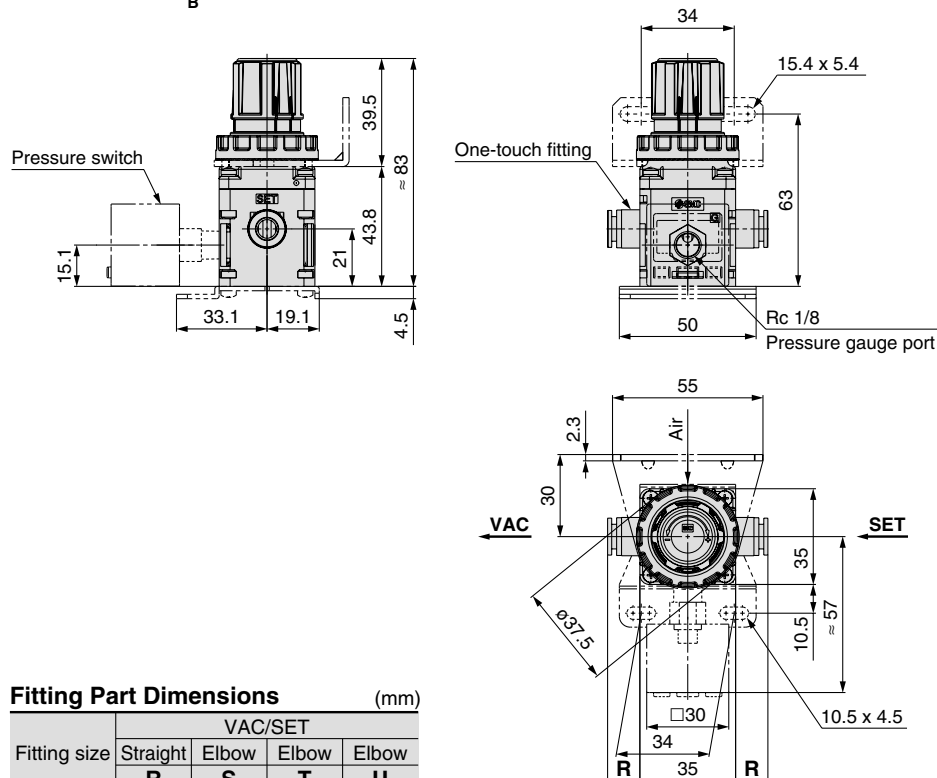


Fitting Part Dimensions (mm)

Fitting size	VAC/SET			
	Straight	Elbow	Elbow	Elbow
	R	S	T	U
ø6, ø1/4"	10	19	26	3
ø8, ø5/16"	12	20	28	6

Dimensions/IRV10A: Single Sided Connections



IRV10A-□□□G: With pressure gauge

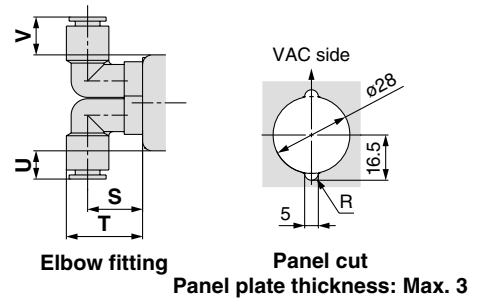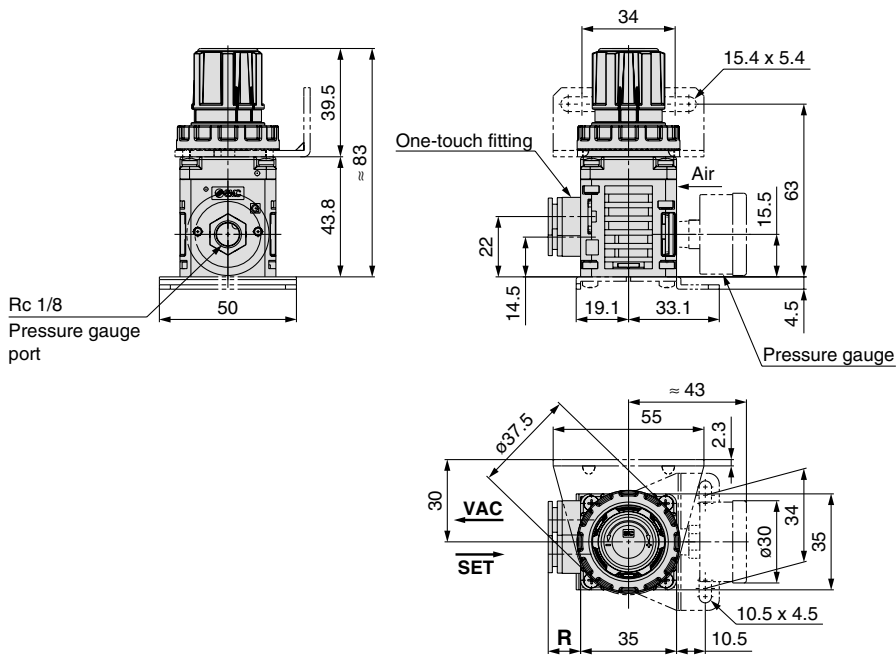

Fitting Part Dimensions (mm)

Fitting size	VAC/SET				
	Straight	Elbow	Elbow	Elbow	Elbow
	R	S	T	U	V
ø6, ø1/4"	10	19	26	7.5	11
ø8, ø5/16"	12	20	28	10.5	14

IRV10A-□□□Z^N_A: With digital pressure switch

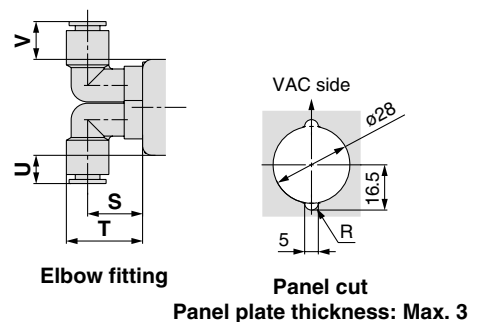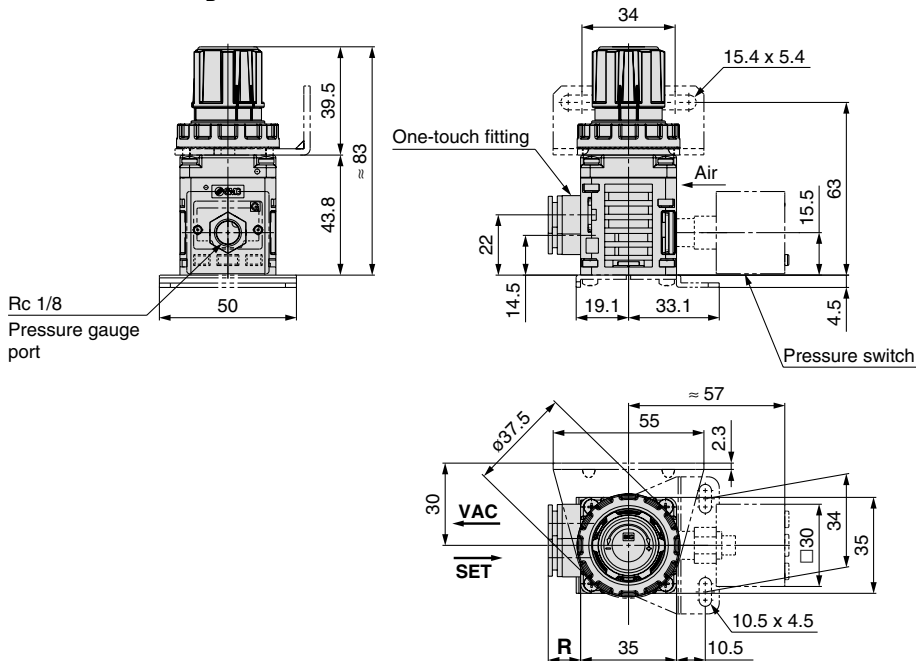


Fitting Part Dimensions (mm)

Fitting size	VAC/SET				
	Straight	Elbow	Elbow	Elbow	Elbow
	R	S	T	U	V
ø6, ø1/4"	10	19	26	7.5	11
ø8, ø5/16"	12	20	28	10.5	14

Series IRV10/20


Dimensions/IRV20: Standard Connections

IRV20-□□□G: With pressure gauge

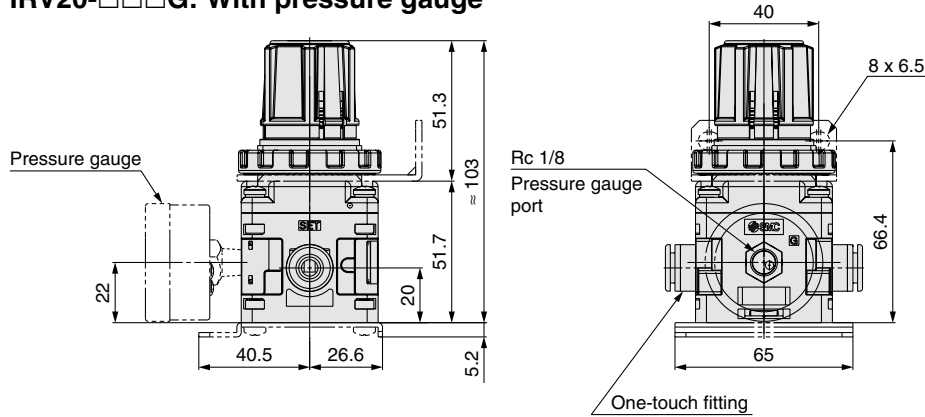


Fitting Part Dimensions (mm)

Fitting size	VAC/SET			
	Straight R	Elbow S	Elbow T	Elbow U
ø6	10.5	21	27.5	21
ø1/4"	10.5	21	27.5	21.5
ø8, ø5/16"	10.5	21	28.5	24
ø10, ø3/8"	11	21	30.5	27

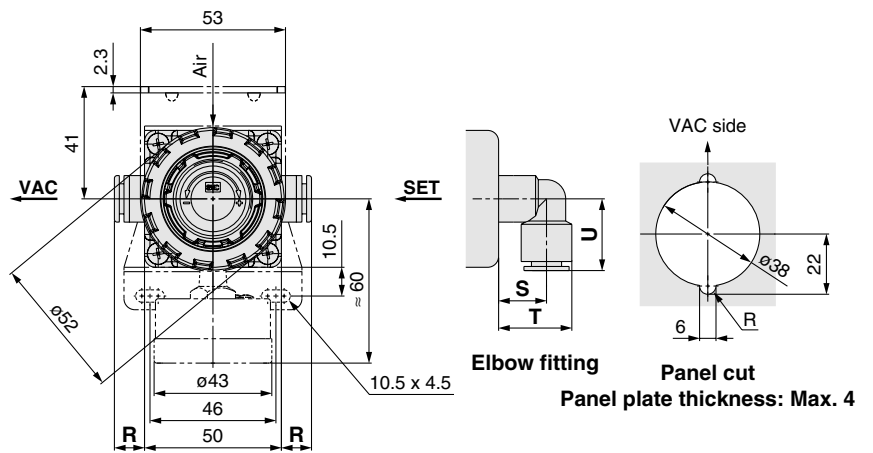


IRV20-□□□Z^N_A^P_B: With digital pressure switch

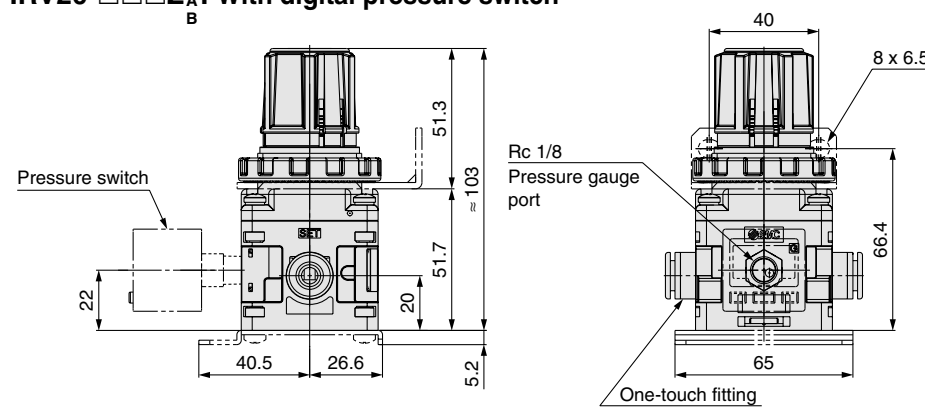



Fitting Part Dimensions (mm)

Fitting size	VAC/SET			
	Straight R	Elbow S	Elbow T	Elbow U
ø6	10.5	21	27.5	21
ø1/4"	10.5	21	27.5	21.5
ø8, ø5/16"	10.5	21	28.5	24
ø10, ø3/8"	11	21	30.5	27

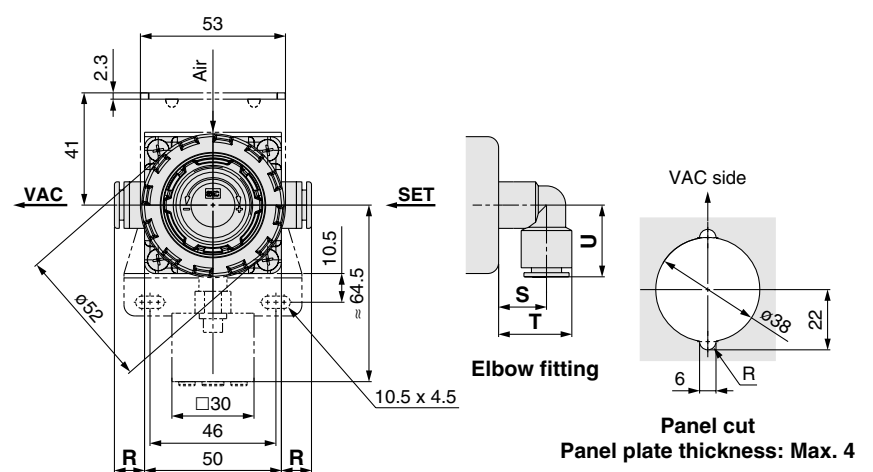

Dimensions/IRV20A: Single Sided Connections



IRV20A-□□□G: With pressure gauge

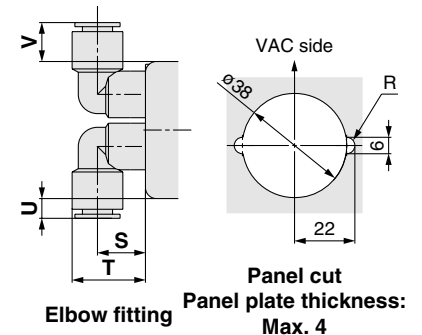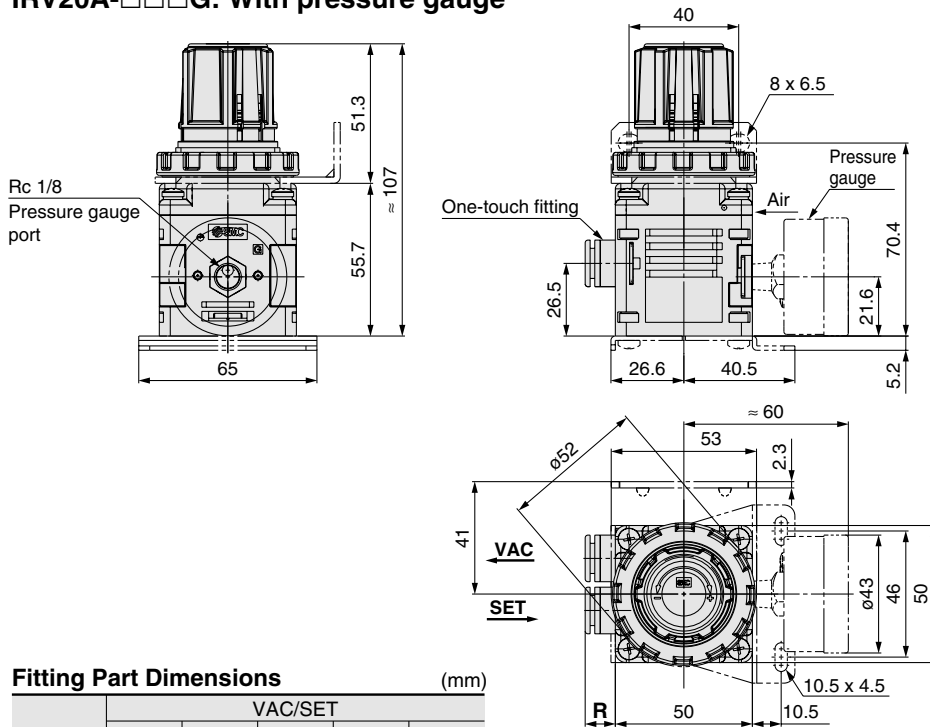

Fitting Part Dimensions

Fitting size	VAC/SET				
	Straight	Elbow	Elbow	Elbow	Elbow
	R	S	T	U	V
ø6	10.5	21	27.5	1	8
ø1/4"	10.5	21	27.5	1.5	8.5
ø8, ø5/16"	10.5	21	28.5	4	11
ø10, ø3/8"	11	21	30.5	7	14

IRV20A-□□□Z_A: With digital pressure switch

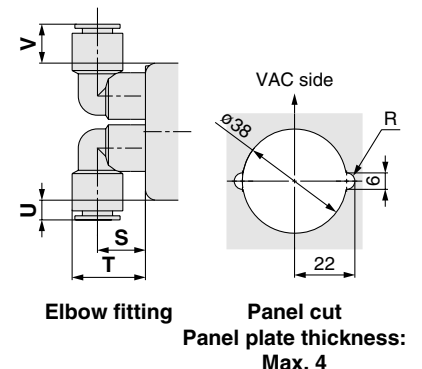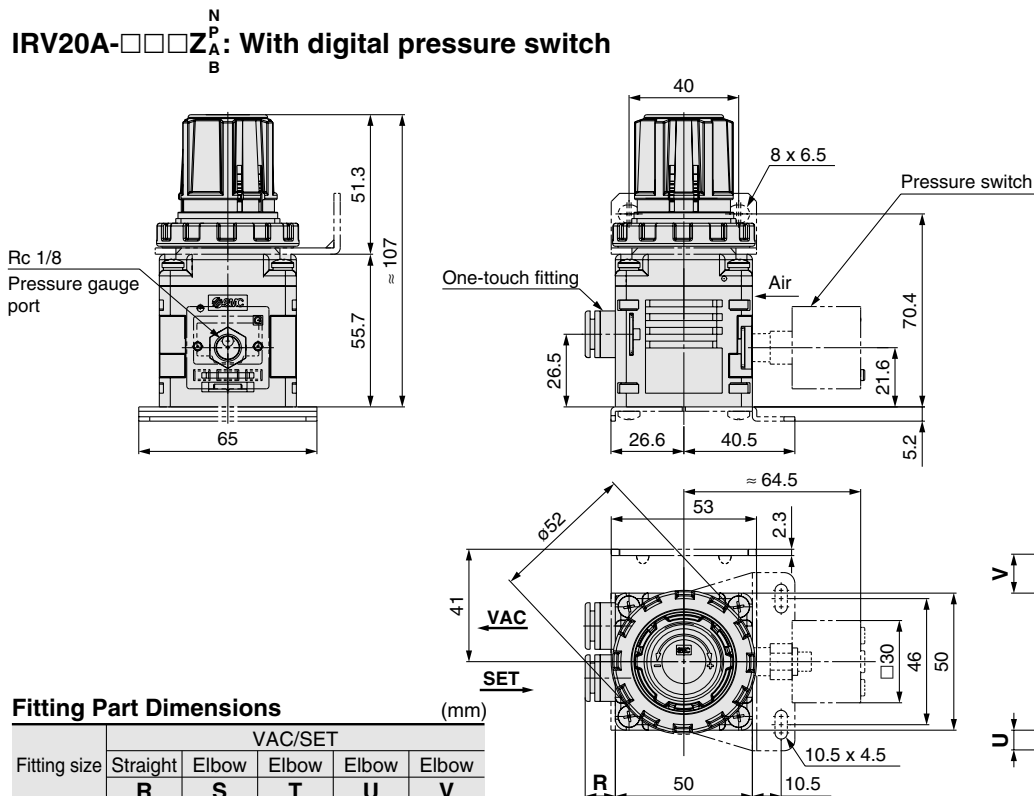

Fitting Part Dimensions

Fitting size	VAC/SET				
	Straight	Elbow	Elbow	Elbow	Elbow
	R	S	T	U	V
ø6	10.5	21	27.5	1	8
ø1/4"	10.5	21	27.5	1.5	8.5
ø8, ø5/16"	10.5	21	28.5	4	11
ø10, ø3/8"	11	21	30.5	7	14

Options

One-touch Fittings for Vacuum Regulator



One-touch fitting for IRV10(A)

VVQ1000-51A- C6

Fitting type		Fitting size	
—	Straight	Symbol	Size
L1	Elbow	C6	ø6
		C8	ø8
		N7	ø1/4"
		N9	ø5/16"

One-touch fitting for IRV20(A)

VVQ2000-51A- C6

Fitting type		Fitting size	
—	Straight	Symbol	Size
L1	Elbow	C6	ø6
		C8	ø8
		C10	ø10
		N7	ø1/4"
		N9	ø5/16"
		N11	ø3/8"

Plug Nut Assembly




Plug unused pressure gauge port(s).

P601010-11


Included Parts

No.	Description
1	Plug nut
2	O-ring



Bracket Assembly

For IRV10(A) P601010-17
For IRV20(A) P601020-17

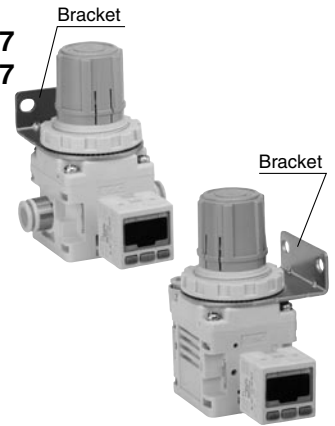



Bottom Bracket Assembly

For IRV10(A) P601010-14
For IRV20(A) P601020-14

Included Parts

No.	Description
1	Bottom bracket
2	Square nut x 4
3	Phillips screw x 4


Note) No. 1 to 3 are shipped together.

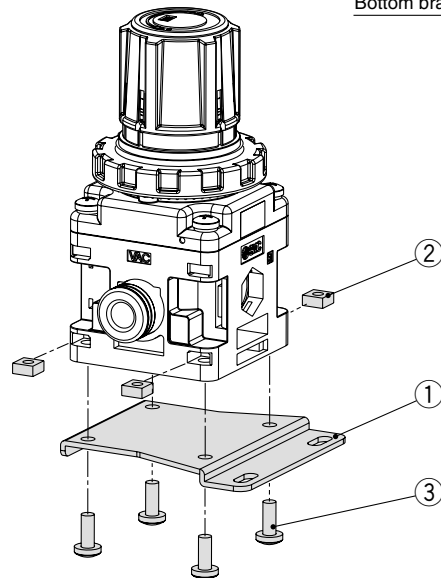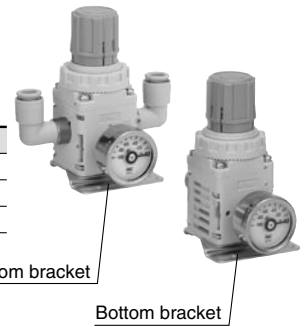

Phillips Screw Tightening Torque


For IRV10(A): M3	0.32 ±0.03 N·m
For IRV20(A): M4	0.76 ±0.05 N·m

Pressure Gauge for Vacuum

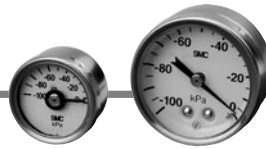

Part no.	GZ33-K-01	GZ43-K-01
Applicable model	IRV10	IRV20
Indicated pressure range	-100 to 0 kPa	
Unit display	kPa	
Scale range	180°	270°


GZ33-K-01

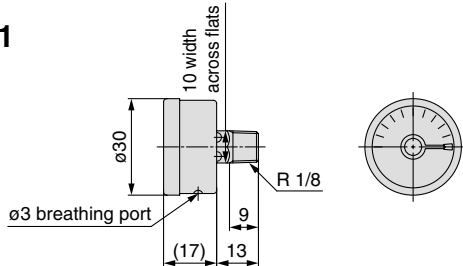

Pressure Gauge GZ33 Assembly P601010-12


Included Parts

No.	Description
1	Pressure gauge
2	Gauge nut
3	O-ring

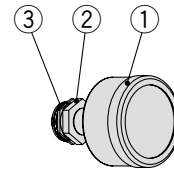

Note) 1 to 3 are assembled before shipment.


GZ43-K-01

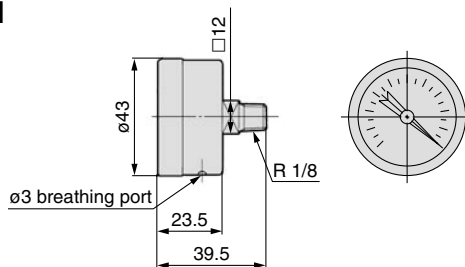

Pressure Gauge GZ43 Assembly P601020-12

Included Parts

No.	Description
1	Pressure gauge
2	Gauge nut
3	O-ring

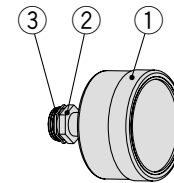

Note) 1 to 3 are assembled before shipment.

2-Colour Display High Precision Digital Pressure Switch




Part No.

Part no.	Applicable model
ZSE30A-01-N-ML (NPN open collector 1 output)	IRV10 IRV20
ZSE30A-01-P-ML (PNP open collector 1 output)	
ZSE30A-01-A-ML (NPN open collector 2 outputs)	
ZSE30A-01-B-ML (PNP open collector 2 outputs)	

Specifications

Refer to SMC catalogue CAT.EUS100-70-UK for details.

Model	ZSE30A (Vacuum pressure)
Rated pressure range	0.0 to -101.0 kPa
Set pressure range	10.0 to -105.0 kPa
Proof pressure	500 kPa
Minimum unit setting	0.1 kPa
Applicable fluid	Air, Non-corrosive gas, Non-flammable gas
Power supply voltage	12 to 24 VDC ±10%, Ripple (p-p) 10% or less (With reverse connection protection)
Current consumption	40 mA or less
Switch output	NPN or PNP open collector 1 output, NPN or PNP open collector 2 outputs (Selectable)
Max. load current	80 mA
Max. applied voltage	28 V (With NPN output)
Residual voltage	1 V or less (With load current of 80 mA)
Response time	2.5 ms or less (With anti-chattering function: 20, 100, 500, 1000, 2000 ms selectable)
Short circuit protection	Yes

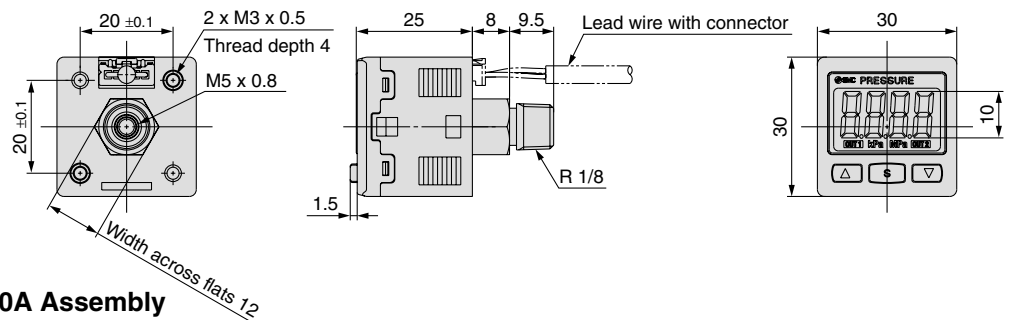


Digital Pressure Switch ZSE30A Assembly

P601010-13-

Symbol	Digital pressure switch part no.	Digital pressure switch specifications
1	ZSE30A-01-N-ML	NPN open collector 1 output, Lead wire with connector (Length 2 m)
2	ZSE30A-01-P-ML	PNP open collector 1 output, Lead wire with connector (Length 2 m)
3	ZSE30A-01-A-ML	NPN open collector 2 outputs, Lead wire with connector (Length 2 m)
4	ZSE30A-01-B-ML	PNP open collector 2 outputs, Lead wire with connector (Length 2 m)

Included Parts

No.	Description
1	Digital pressure switch
2	Gauge nut
3	O-ring

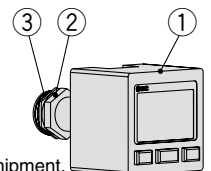

Note) 1 to 3 are assembled before shipment.

Vacuum Regulator Series IRV10/20

Made to Order



Please contact SMC regarding detailed dimensions, specifications, and delivery times.

Integrated Digital Pressure Switch for Panel Mounting

X1

How to Order

Single sided connections

IRV 20 A - C08 - X1

Body size

10	Max. flow 140 l/min (ANR)
20	Max. flow 240 l/min (ANR)

Single sided connections

A	Single sided connections
---	--------------------------

Made to Order

X1	Integrated digital pressure switch for panel mounting
----	---

Fittings

Nil	Straight
L	Elbow

Connection tubing O.D.

Symbol	Tubing O.D.	IRV10A	IRV20A
C06	Metric	ø6	●
C08		ø8	●
C10		ø10	—
N07	Inch	ø1/4"	●
N09		ø5/16"	●
N11		ø3/8"	—






Digital pressure switch type

Symbol	Output specifications	Part no.
ZN	NPN open collector 1 output	ZSE30A-C4H-N-MGD
ZP	PNP open collector 1 output	ZSE30A-C4H-P-MGD
ZA	NPN open collector 2 outputs	ZSE30A-C4H-A-MGD
ZB	PNP open collector 2 outputs	ZSE30A-C4H-B-MGD

Note 1) Gauge nut is included. Accessories are included in the same container.
Note 2) Refer to digital pressure switch specifications on page 9.






Dimensions

IRV10A

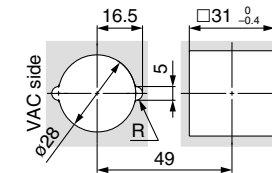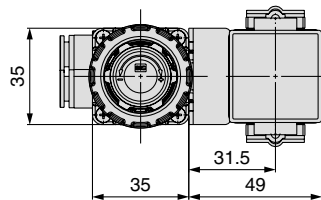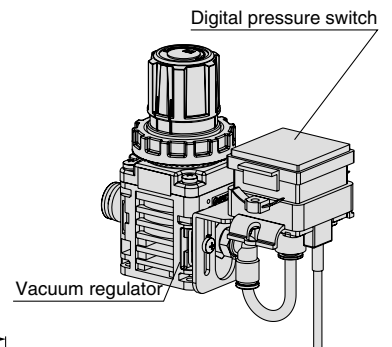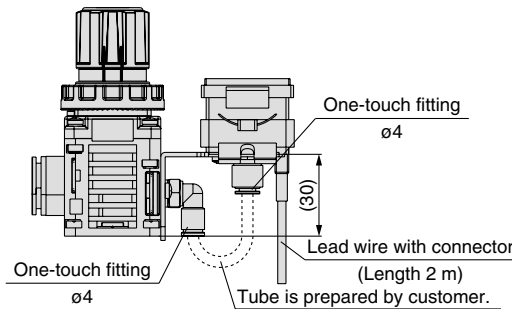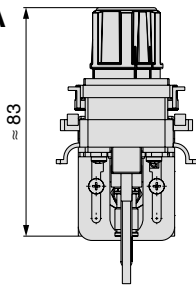

Panel cut
Panel plate thickness: Max. 3

IRV20A

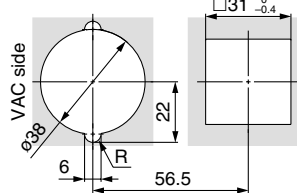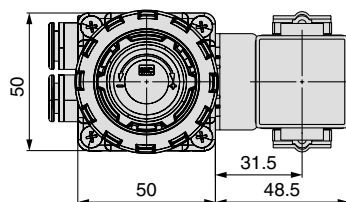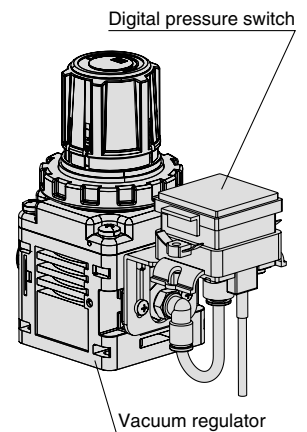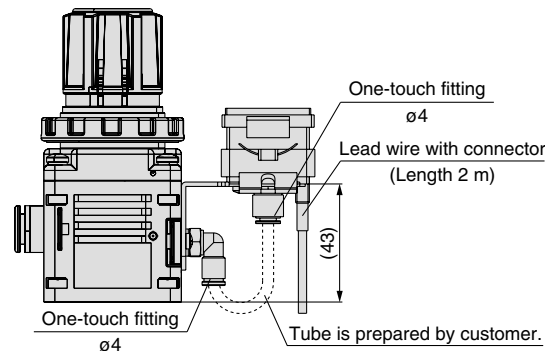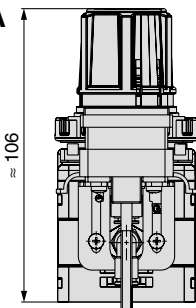

Panel cut
Panel plate thickness: Max. 4



Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution,**” “**Warning**” or “**Danger.**” They are all important notes for safety and must be followed in addition to International Standards ^{Note 1)} and other safety regulations.


Note 1) ISO 4414: Pneumatic fluid power – General rules relating to systems.


ISO 4413: Hydraulic fluid power – General rules relating to systems.


IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218: Manipulating industrial robots -Safety.

etc.

 **Caution:** Operator error could result in injury or equipment damage.

 **Warning:** Operator error could result in serious injury or loss of life.

 **Danger :** In extreme conditions, there is a possibility of serious injury or loss of life.

Warning

1. The compatibility of the product is responsibility of the person who designs the system or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific system must be decided by the person who designs the system or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the system will be responsibility of the person who has determined its compatibility with the product. This person should also continuously review the specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the system.

2. Only trained personnel should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service the machinery/equipment or attempt to remove product until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.

2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.

3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. If the product is to be used in any of the following conditions or environments, please contact SMC first and be sure to take all necessary safety precautions.

1. Conditions and environments beyond of the given specifications, or if product is used outdoors or in a place exposed to direct sunlight.

2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.

3. An application which could have negative effects on people, property, or animals requiring special safety analysis.

4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function. Examine the devices periodically to check if they function normally or not.



Safety Instructions

Caution

The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited Warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited Warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

Limited Warranty and Disclaimer

1. **The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.**^{Note 2)}

The product may also have specified durability, running distance or replacement parts. Please consult your nearest sales branch.

2. **For any failure or damage reported within the warranty period, which is clearly SMC's responsibility, a replacement product or necessary parts will be provided.**

This limited warranty applies only to SMC product independently, and not to any other damage incurred due to failure of the product.

3. **Before using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.**

Note 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

When the product is exported, strictly follow the laws required by the Ministry of Economy, Trade and Industry (Foreign Exchange and Foreign Trade Control Law).



Series IRV10/20

Specific Product Precautions 1

Be sure to read this before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Handling

Warning

1. When a system hazard can be expected due to a drop in vacuum pressure caused by power loss or vacuum pump trouble, install a safety circuit and configure the system so that it can avoid the danger.
2. When a system hazard can be expected with trouble with the vacuum regulator, install a safety circuit and configure the system so that it can avoid the danger.


Caution

1. When installing a pressure gauge or pressure switch on an existing regulator, be sure to reduce the set pressure to 0 (atmospheric pressure) before removing the plug.

1-1. Accessories purchased with the pressure gauge or pressure switch:


- Pressure gauge or pressure switch 1 pc.
 - Gauge nut (with O-ring) 1 pc.
- Note) Gauge nut is mounted to the pressure gauge or pressure switch.
- Plug nut (with O-ring) 1 pc.
 - Clip 2 pcs.

Note) One clip is included for single sided connections. Plug nut is not included.

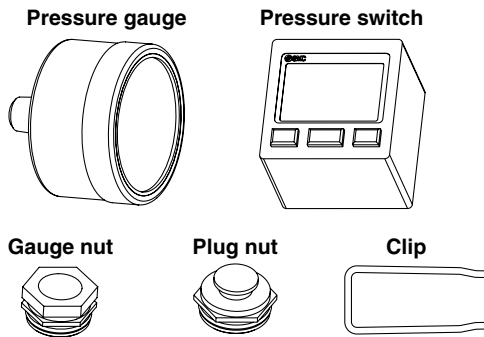


1-2. Mounting the pressure gauge or pressure switch:

- 1) Confirm the direction of VAC side and SET side. Insert the pressure gauge to the gauge port sufficiently (until the gauge nut of the pressure gauge is leveled with the product surface.) Insert the pressure gauge to the end on the opposite side of the connecting port for single sided connections.
- 2) Insert the clip from the left side (viewed from the pressure gauge side, as shown in the drawing) until the top of the clip is leveled with the product surface. This completes the mounting procedure for single sided connections.

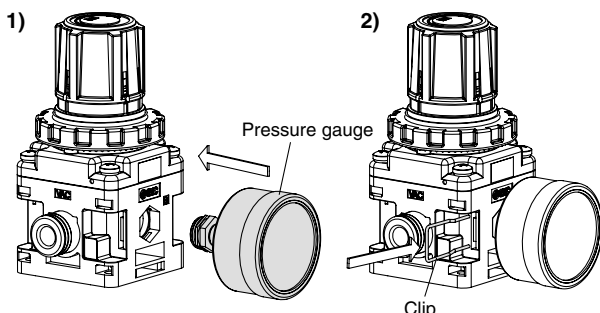

Caution

- 3) Insert the plug nut to the gauge port on the opposite side of the pressure gauge until the top of the plug nut is leveled with the product surface.
- 4) Insert the clip from the left side (viewed from the plug nut side) to the end in the same way as in step 2).

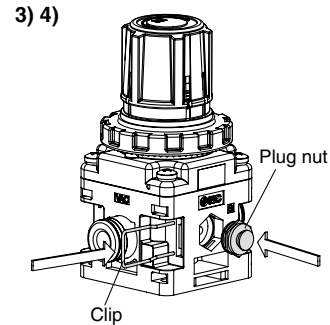

Note) To remove the pressure gauge or pressure switch, remove the clip, and then the pressure gauge or pressure switch straight out. Do not apply torque, as the body is made of resin.


2. Do not remove the body screw while the vacuum pressure is applied.
3. Before removing the valve guide for inspection, reduce the set pressure to 0 (atmospheric pressure) and also shut down the vacuum pump pressure completely.
4. For easy of replacement, one-touch fittings are installed as the cassette type. One-touch fittings are retained with clips inserted from the directions showed below. Remove the clips with a flat head screwdriver to replace the one-touch fittings. (Refer to "Procedure to remove the clip.") When installing, insert each one-touch fitting deeply to the end and reinsert the clip to the specified position.

Note 1) Before replacement, confirm VAC/SET pressure is not applied and start operation after the internal pressure becomes atmospheric pressure. Operation with VAC/SET pressure is dangerous.

Note 2) To remove the clip, hold the clip with your fingers, then slowly pull out the clip. Do not pull out the clip by force. Otherwise, the clip may spring out and it is dangerous.

Note 3) Insert the clip to the end after confirming the replacement parts are inserted to the end. The clip may spring out if it is not inserted sufficiently.

Note 4) Hold the fitting in your hand when inserting the tube to elbow type one-touch fitting. Insertion of the tube without holding the fitting in your hand will apply excess force to blocks or one-touch fitting, which may lead to air leakage or breakage.

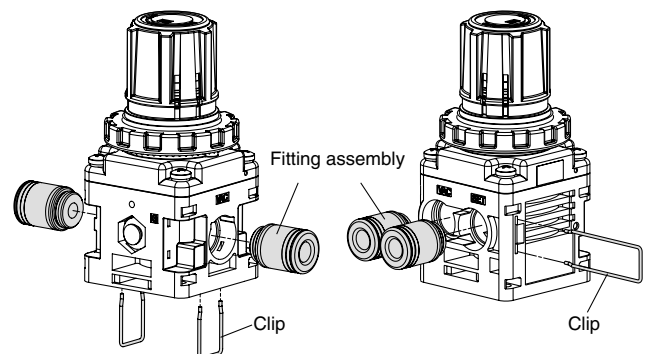



Series IRV10/20

Specific Product Precautions 2

Be sure to read this before handling.


Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Handling

⚠ Caution

Procedure to remove the clip

Apply the tip of a flat head screwdriver to the inclined part where the clip is inserted. Lift the clip by moving the screwdriver as illustrated below.

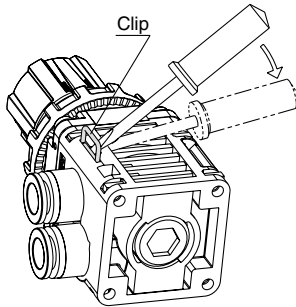


Insert the tip of the screwdriver to the root of the clip.

⚠ Warning

1. Consider the proper screw tightening torque.

If torque is exceeded, damage to the mounting screw or main body may occur. Also, if the screws are not tightened enough, they may come loose during operation.

Phillips screw tightening torque for bottom bracket mounting

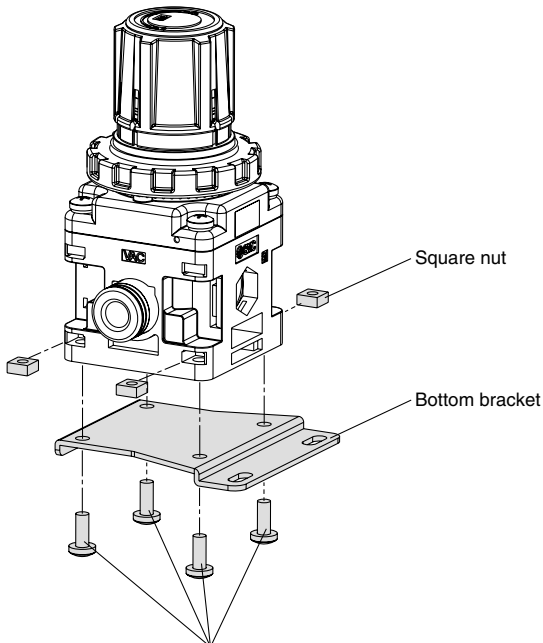

Phillips Screw Tightening Torque

For IRV10(A): M3	0.32 ±0.03 N·m
For IRV20(A): M4	0.76 ±0.05 N·m

Operating Environment

⚠ Warning

1. Do not use in an atmosphere having corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these substances.
2. Do not use in locations with vibrations or impacts.
3. This vacuum regulator always uses atmospheric air, therefore, do not use in dusty environments.
4. In locations that receive direct sunlight, provide a protective cover, etc.
5. In locations near heat sources, block off any radiated heat.

Vacuum Supply

⚠ Caution

1. This vacuum regulator is not to be used for adjusting vacuum pump pressures.
2. Note that an ejector's flow rate is smaller than that of the vacuum regulator's one, and therefore, it is not suitable as a "vacuum supply".

Air Supply

⚠ Caution

1. These products are designed for use with air. Please contact SMC if any other fluid are to be used.
2. Do not use air which includes chemicals, synthetic oils containing organic solvents, salt, or corrosive gases, etc., as this can cause malfunction.



Series IRV10/20

Specific Product Precautions 3

Be sure to read this before handling.


Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Precautions


⚠ Caution

1. Connect piping to the port with "VAC" indication for connection to the vacuum pump.
2. To adjust the pressure, turn the knob to the right (clockwise) for changing "atmospheric pressure to vacuum pressure" and to the left (counterclockwise) for changing "vacuum pressure to atmospheric pressure".
3. When adjusting pressure, do not touch the lateral hole (atmospheric intake hole) of the body.
4. When locking the knob after setting the pressure, press down the knob until the orange band is hidden and a click is heard. For unlocking the knob, pull it up until the orange band is visible and a click is heard.
5. This vacuum regulator is for use with vacuum pressure only. Be sure that positive pressure is not applied instead. In case that positive pressure is applied, the vacuum regulator will not be damaged. However, the main valve of the pressure adjustment valve will open and positive pressure will enter the vacuum pump. This may cause trouble with the vacuum pump.
6. When the vacuum pump capacity is relatively small or when the inside diameter of the piping is small, a change in the set pressure (the pressure difference between the non-flow and flow conditions) may be large. In this case, change the vacuum pump or the inside diameter of the piping. When changing the vacuum pump is not possible, add a capacity tank (capacity depends on the operating conditions) on the VAC side.
7. The pressure response time after opening and closing valves (such as solenoid valves) is influenced in large and small measures by the internal capacity (includes piping capacity) of the set side. Since the vacuum pump capacity also affects the response time, consider all these points before operations.
8. When using a pressure gauge upside down like Fig. 1, it may result in a shifting of the zero point reading. Make sure to use it in the direction like Fig. 2. Gravity will affect the zero point of the gauge which is why it needs to be positioned properly.

IRV10

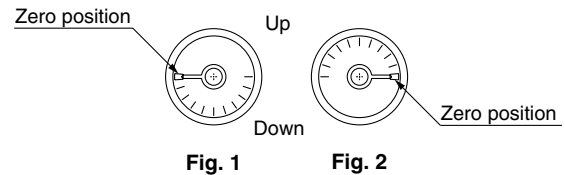

IRV20

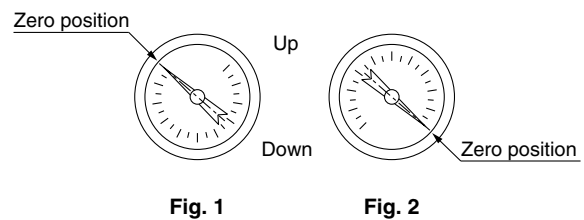


EUROPEAN SUBSIDIARIES:

Austria

SMC Pneumatik GmbH (Austria).
Girakstrasse 8, A-2100 Korneuburg
Phone: +43 2262-622800, Fax: +43 2262-62285
E-mail: office@smc.at
http://www.smc.at


France

SMC Pneumatique, S.A.
1, Boulevard de Strasbourg, Parc Gustave Eiffel
Bussy Saint Georges F-77607 Marne La Vallée Cedex 3
Phone: +33 (0)1-6476 1000, Fax: +33 (0)1-6476 1010
E-mail: contact@smc-france.fr
http://www.smc-france.fr


Netherlands

SMC Pneumatics BV
De Ruyterkade 120, NL-1011 AB Amsterdam
Phone: +31 (0)20-5318888, Fax: +31 (0)20-5318880
E-mail: info@smcpneumatics.nl
http://www.smcpneumatics.nl


Spain

SMC España, S.A.
Zuazobidea 14, 01015 Vitoria
Phone: +34 945-184 100, Fax: +34 945-184 124
E-mail: post@smc.smces.es
http://www.smc.eu


Belgium

SMC Pneumatics N.V./S.A.
Nijverheidsstraat 20, B-2160 Wommelgem
Phone: +32 (0)3-355-1464, Fax: +32 (0)3-355-1466
E-mail: info@smcpneumatics.be
http://www.smcpneumatics.be


Germany

SMC Pneumatik GmbH
Boschring 13-15, D-63329 Egelsbach
Phone: +49 (0)6103-4020, Fax: +49 (0)6103-402139
E-mail: info@smc-pneumatik.de
http://www.smc-pneumatik.de


Norway

SMC Pneumatics Norway A/S
Vollsveien 13 C, Granfos Næringspark N-1366 Lysaker
Tel: +47 67 12 90 20, Fax: +47 67 12 90 21
E-mail: post@smc-norge.no
http://www.smc-norge.no


Sweden

SMC Pneumatics Sweden AB
Ekhagsvägen 29-31, S-141 71 Huddinge
Phone: +46 (0)8-603 12 00, Fax: +46 (0)8-603 12 90
E-mail: post@smcpneumatics.se
http://www.smc.nu


Bulgaria

SMC Industrial Automation Bulgaria EOOD
Business Park Sofia, Building 8 - 6th floor, BG-1715 Sofia
Phone: +359 2 9744492, Fax: +359 2 9744519
E-mail: office@smc.bg
http://www.smc.bg


Greece

SMC Hellas EPE
Anagenniseos 7-9 - P.C. 14342, N. Philadelphia, Athens
Phone: +30-210-2717265, Fax: +30-210-2717766
E-mail: sales@smchellas.gr
http://www.smchellas.gr


Poland

SMC Industrial Automation Polska Sp.z.o.o.
ul. Poloneza 89, PL-02-826 Warszawa
Phone: +48 22 211 9600, Fax: +48 22 211 9617
E-mail: office@smc.pl
http://www.smc.pl


Switzerland

SMC Pneumatik AG
Dorfstrasse 7, CH-8484 Weisslingen
Phone: +41 (0)52-396-3131, Fax: +41 (0)52-396-3191
E-mail: info@smc.ch
http://www.smc.ch


Croatia

SMC Industrijska automatika d.o.o.
Crnomerec 12, HR-10000 ZAGREB
Phone: +385 1 377 66 74, Fax: +385 1 377 66 74
E-mail: office@smc.hr
http://www.smc.hr


Hungary

SMC Hungary Ipari Automatizálási Kft.
Torbágy út 19, H-2045 Törökbalint
Phone: +36 23 511 390, Fax: +36 23 511 391
E-mail: office@smc.hu
http://www.smc.hu


Portugal

SMC Sucursal Portugal, S.A.
Rua de Eng^o Ferreira Dias 452, 4100-246 Porto
Phone: +351 226 166 570, Fax: +351 226 166 589
E-mail: postpt@smc.smces.es
http://www.smc.eu


Turkey

Entek Pnömatik San. ve Tic. A*.
Perpa Ticaret Merkezi B Blok Kat:11 No: 1625, TR-34386, Okmeydanı, Istanbul
Phone: +90 (0)212-444-0762, Fax: +90 (0)212-221-1519
E-mail: smc@entek.com.tr
http://www.entek.com.tr


Czech Republic

SMC Industrial Automation CZ s.r.o.
Hudcova 78a, CZ-61200 Brno
Phone: +420 5 414 24611, Fax: +420 5 412 18034
E-mail: office@smc.cz
http://www.smc.cz


Ireland

SMC Pneumatics (Ireland) Ltd.
2002 Citywest Business Campus, Naas Road, Saggart, Co. Dublin
Phone: +353 (0)1-403 9000, Fax: +353 (0)1-464-0500
E-mail: sales@smcpneumatics.ie
http://www.smcpneumatics.ie


Romania

SMC Romania srl
Str Frunzei 29, Sector 2, Bucharest
Phone: +40 213205111, Fax: +40 213261489
E-mail: smcromania@smcromania.ro
http://www.smcromania.ro


UK

SMC Pneumatics (UK) Ltd
Vincent Avenue, Crownhill, Milton Keynes, MK8 0AN
Phone: +44 (0)800 1382930 Fax: +44 (0)1908-555064
E-mail: sales@smcpneumatics.co.uk
http://www.smcpneumatics.co.uk


Denmark

SMC Pneumatik A/S
Egeskovvej 1, DK-8700 Horsens
Phone: +45 70252900, Fax: +45 70252901
E-mail: smc@smcdk.com
http://www.smcdk.com


Italy

SMC Italia S.p.A
Via Garibaldi 62, I-20061 Carugate, (Milano)
Phone: +39 (0)2-92711, Fax: +39 (0)2-9271365
E-mail: mailbox@smcitalia.it
http://www.smcitalia.it


Russia

SMC Pneumatik LLC.
4B Sverdlovskaja nab, St. Petersburg 195009
Phone: +7 812 718 5445, Fax: +7 812 718 5449
E-mail: info@smc-pneumatik.ru
http://www.smc-pneumatik.ru


Estonia

SMC Pneumatics Estonia OÜ
Laki 12, 106 21 Tallinn
Phone: +372 6510370, Fax: +372 65110371
E-mail: smc@smcpneumatics.ee
http://www.smcpneumatics.ee


Latvia

SMC Pneumatics Latvia SIA
Dzelzavas str. 120g, Riga LV-1021, LATVIA
Phone: +371 67817700, Fax: +371 67817701
E-mail: info@smclv.lv
http://www.smclv.lv


Slovakia

SMC Priemyselna Automatizácia, s.r.o.
Fatranská 1223, 01301 Teplicka Nad Váhom
Phone: +421 41 3213212 - 6 Fax: +421 41 3213210
E-mail: office@smc.sk
http://www.smc.sk


Finland

SMC Pneumatics Finland Oy
PL72, Tiistinniityntie 4, SF-02231 ESPOO
Phone: +358 207 513513, Fax: +358 207 513599
E-mail: smcfin@smc.fi
http://www.smc.fi


Lithuania

SMC Pneumatics Lietuva, UAB
Oslo g.1, LT-04123 Vilnius
Phone: +370 5 264 81 26, Fax: +370 5 264 81 26


Slovenia

SMC industrijska Avtomatika d.o.o.
Mirska cesta 7, SI-8210 Trebnje
Phone: +386 7 3885412 Fax: +386 7 3885435
E-mail: office@smc.si
http://www.smc.si


OTHER SUBSIDIARIES WORLDWIDE:

ARGENTINA, AUSTRALIA, BOLIVIA, BRASIL, CANADA, CHILE,
CHINA, HONG KONG, INDIA, INDONESIA, MALAYSIA, MEXICO,
NEW ZEALAND, PHILIPPINES, SINGAPORE, SOUTH KOREA,
TAIWAN, THAILAND, USA, VENEZUELA

<http://www.smc.eu>
<http://www.smcworld.com>