


((

3 Port Solenoid Valve

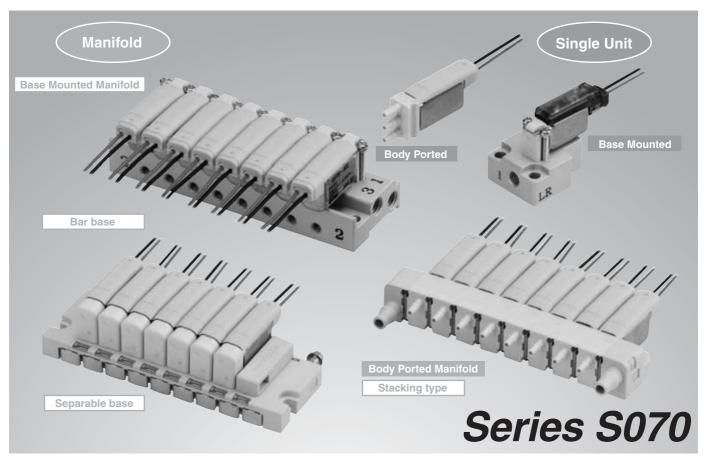

Power consumption 0.35 W (standard),

 $0.1~\mathrm{W}$ (with power saving circuit)

Valve width 7 mm

• Weight 5 g (single unit valve)

- Operation noise 38 dB (A) or less
- Sonic conductance: C 0.060 [dm³/(s·bar)]

• Flow rate: 15 t/min

Stacking type manifold








Separable base

Stacking type

Compact Direct Operated 3 Port Solenoid Valve

Series S070

How to Order Valve

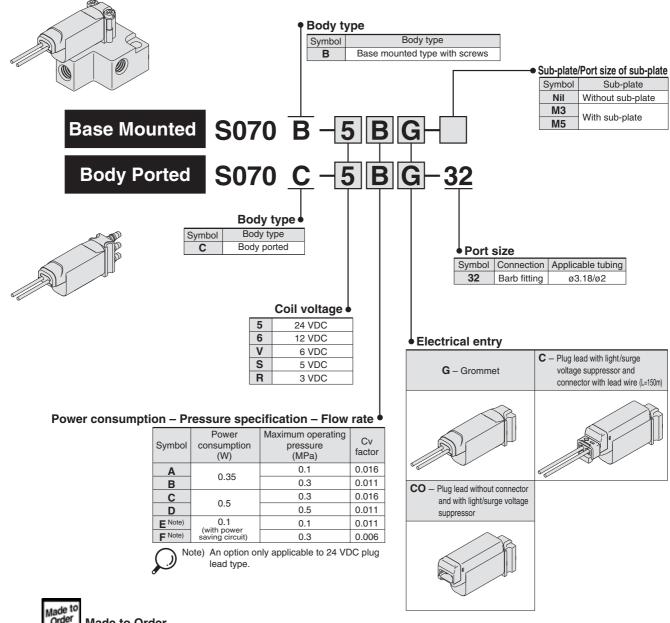





Made to Order

_	
Symbol	Specifications
X26	Grommet type, Special lead wire length
X50	Universal type
X62	Normaly open type

Compact Direct Operated 3 Port Solenoid Valve Series S070

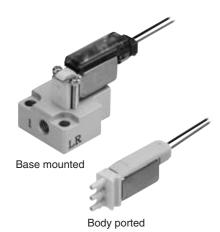

JIS symbol

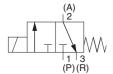

Specifications

Valve construction	Poppet
Fluid	Air / Low vacuum (1.33 x 10 ² Pa)
Maximum operating pressure	0.3 MPa (0.35 W, 0.1 W), 0.5 MPa (0.5 W)
Proof pressure	1 MPa
Ambient and fluid temperature Note 1)	−10 to 50°C
Lubrication	Not required
Impact/Vibration resistance Note 2)	30/150 m/s ²
Enclosure	IP40
Weight	5 g (single unit valve)
Mounting orientation	Free

Note 1) Use dry air and prevent condensation at low temperatures.

Note 2) Vibration resistance: No malfunction resulted in 45 to 2000 Hz, a one-sweep test performed in

the axial and right angle directions of the main valve and armature for both

energized and de-energized states.

Impact resistance: No malfunction resulted in an impact

No malfunction resulted in an impact test using a drop impact tester. The test was performed one time each in the axial and right angle directions of the main valve and armature, for both energized and de-energized states.

With the 0.1 W specification, the vibration and impact resistance is 10/50 m/s² or less.

Note 3) With the low vacuum specification, the operating pressure range is 1.33 x 10² Pa to the maximum operating pressure.

Solenoid specifications

Power consumption Note 1)	0.35 W (standard), 0.5 W (high pressure), 0.1 W (power saving)
Rated coil voltage	3, 5, 6, 12, 24 VDC
Allowable voltage fluctuation Note 2)	±10% of the rated voltage
Coil insulation type	Equivalent to class B



Note 1) With a light/surge voltage suppressor and power saving circuit, the light consumes a power equivalent to 2 mA. With the 0.1 W DC specification 0.35 W DC at inrush (20 ms) and 0.1 W DC at holding.

Note 2) With a power saving circuit, keep the voltage fluctuation within 24 VDC ±5%.

Flow specifications/Response time

Power consumption	Maximum operating		Flow chara	Response time ms Note 2, 3)			
Fower consumption	pressure	C[dm3/(s-bar)]	b	Cv	Flow rate [I/min], ANR Note 4	ON	OFF
0.5 W DC	0.5 MPa	0.042	0.27	0.011	9.6	3 or less	3 or less
0.5 W BO	0.3 MPa	0.060	0.28	0.016	10.9	5 or less	3 or less
0.35 W DC	0.3 MPa	0.042	0.27	0.011	7.6	3 or less	3 or less
0.33 W BO	0.1 MPa	0.060	0.28	0.016	6.9	5 or less	3 or less
0.1 W DC (at holding)	0.3 MPa	0.021	0.27	0.006	3.8	3 or less	6 or less
with power saving circuit Note 1)	0.1 MPa	0.042	0.28	0.011	4.8	5 or less	6 or less



- Note 1) With the 0.1 W DC specification, keep the vibration/impact within10/50 m/s².
 - 0.35 W DC at inrush (20 ms) and 0.1 W DC at holding.
- Note 2) The response time is the value at the rated voltage and maximum operating pressure, ambient and fluid temperature (approx. 25°C)
- Note 3) If the product is used in the following conditions or environment, switching of the valve may be significantly delayed compared to the above values.
 - 1. The first response time when the valve is not used for a long period of time.
 - 2. When using at low supply pressure (0.1 MPa or less)
 - 3. When using in an environment where the ambient and fluid temperature is low (10°C or less)
- Note 4) The flow values are calculated by using the maximum operating pressure with a Delta P = 0.1 MPa. Calculation follow ISO 6358

Weight


Part Nº	Weight (g)	Note
S070A-**G	6.4	
S070A-**C	6.9	-
S070A-**CO	6.1	
S070B-**G	6.1	Weight of mounting
S070B-**C	6.6	screw is 0.3 (g) for
S070B-**CO	6.8	S070B
S070C-**G	6.2	Weight of mounting
S070C-**C	6.7	screw is 0.3 (g) for
S070C-**CO	5.9	S070C



Construction - Individual type

Component Parts


Number	Description	Material
1	Solenoid coil	_
2	Body	Resin
3	Core	Stainless steel
4	Armature assembly	Stainless steel, resin
5	Return spring	Stainless steel
6	Poppet	FKM
7	Interface gasket	HNBR
8	Round head combination screw	Carbon steel
9	Sub-plate	Aluminum

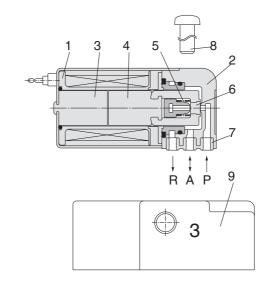


* The above figure is an example of S070B-□□G base piping type (mounted with screws).

Accessories - Individual type

Plug connector assembly (for plug lead)

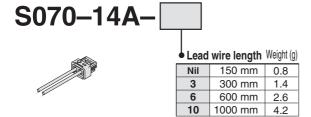

Sub-plate

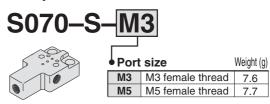

Replacement Parts - Individual type

Gasket

Valve model	Gasket No.
S070A	S070A-80A-1
S070B	S070B-80A-1
S070M	S070M-80A-1





Mounting screw

Valve model	Mounting screw No.
S070B	AXT632-106A-1
S070C	AXT632-106A-2





Note) Each of the above part numbers is for two screws, which are to be ordered by 10 units.


Order is accepted in 10 units.


Bracket (S070B)


	-,	
Valve model	Bracket no.	Note
S070B, SS073B	S070B-80A-2	For sub-plates and manifolds (more than 3 stations)
SS073B	S070B-80A-3	For manifolds (2 stations only)


Note) Order is accepted in 10 units.


^{*} This is used when mounting a valve on the sub-plate and manifold.

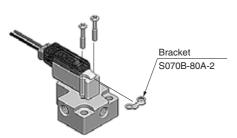

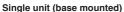

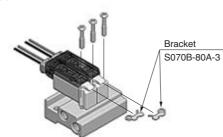

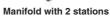

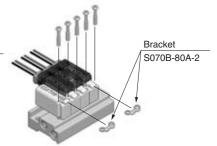







Base mounted with sub-plate

S070B-□□G-M3 Grommet type

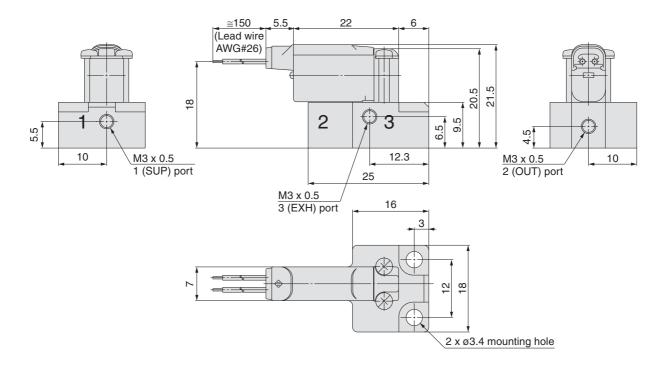

S070B-□□C-M3 Plug lead type

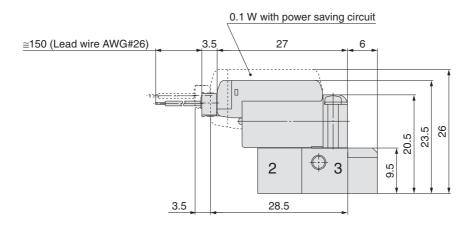


SMC


Dimensions

Base mounted with sub-plate

S070B-□□G-M5 Grommet type

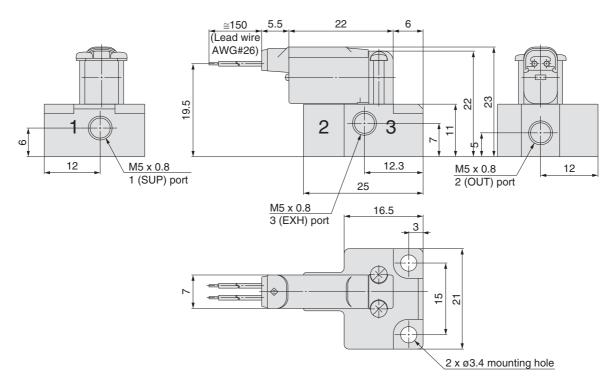


S070B-□□C-M5 Plug lead type

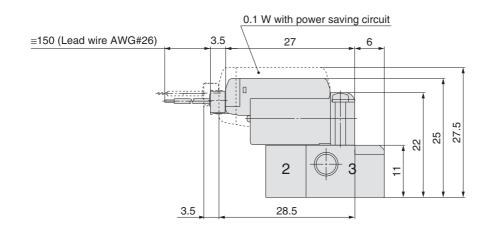


Body ported

S070C-□□G-32 Grommet type



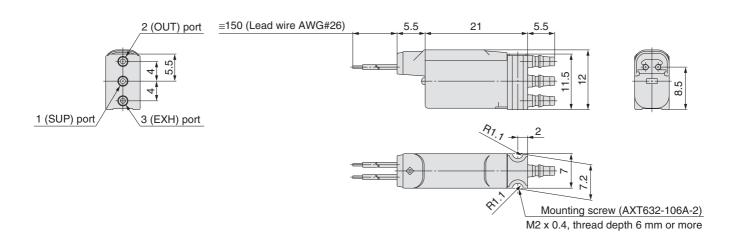


S070C-□□C-32 Plug lead type

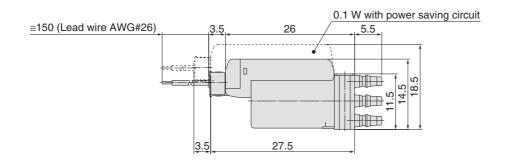


SMC

3 Port Solenoid Valve Series S070/Base Mounted Manifold Stacking Base Type

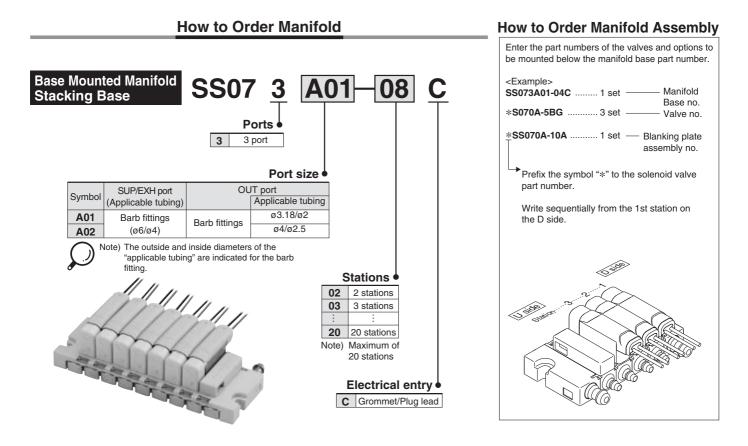


How to Order Valve

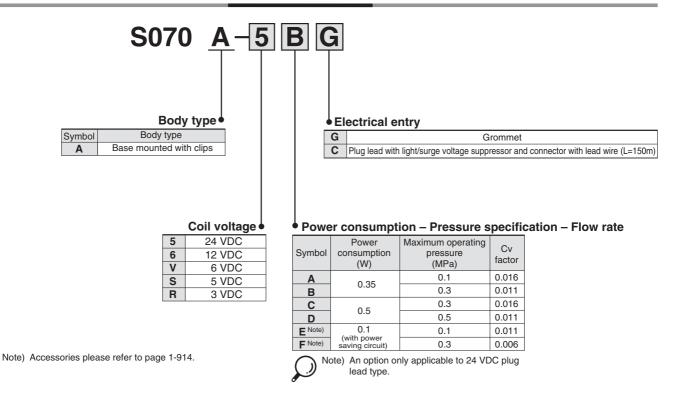

Base mounted manifold / Separable base

SS073A 01 - Stations C

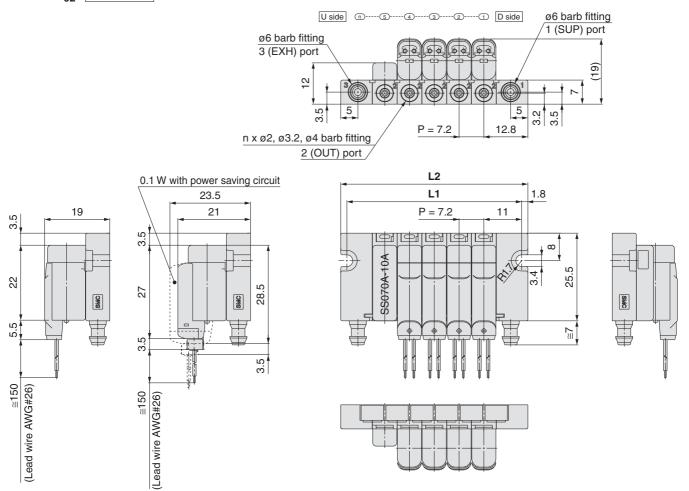

Dimensions

Formulas: L1 = n x 7.2 + 14.8, L2 = n x 7.2 + 18.4, n: Stations (maximum 20 stations)


Tomado. E1 = 11 X 7.2 1 14.0, E2 = 11 X 7.2 1 10														1 10.4,	+, 11. Otations (maximam 20 stations)						
	L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
	L1	29.2	36.4	43.6	50.8	58	65.2	72.4	79.6	86.8	94	101.2	108.4	115.6	122.8	130	137.2	144.4	151.6	158.8	
	L2	32.8	40	47.2	54.4	61.6	68.8	76	83.2	90.4	97.6	104.8	112	119.2	126.4	133.6	140.8	148	155.2	162.4	

Weight


Part Nº	Calculation of weight (g) (N=Station Number, 2 to 20)	Note	
SS073A01-*C	5.4 + 2.1 x N	Not include valves	
SS073A02-*C	•	Not include valves	

SMC

3 Port Solenoid Valve Series S070/Base Mounted Manifold Bar Base Specification

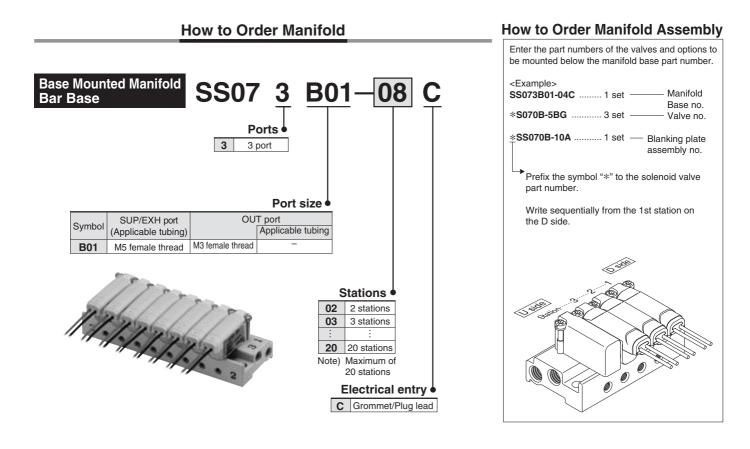


How to Order Valve

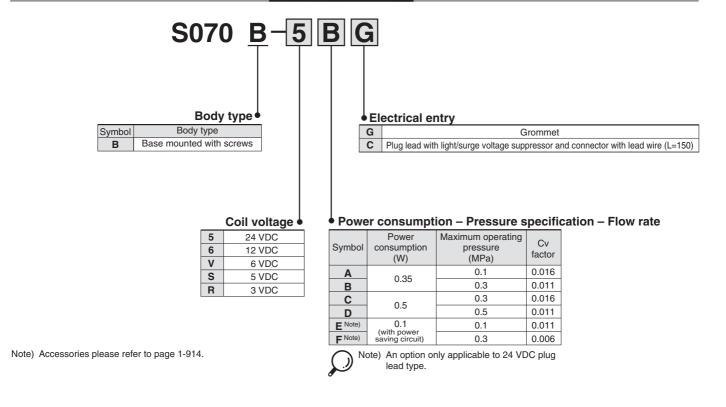

Base mounted manifold / Bar base

SS073B01-Stations C

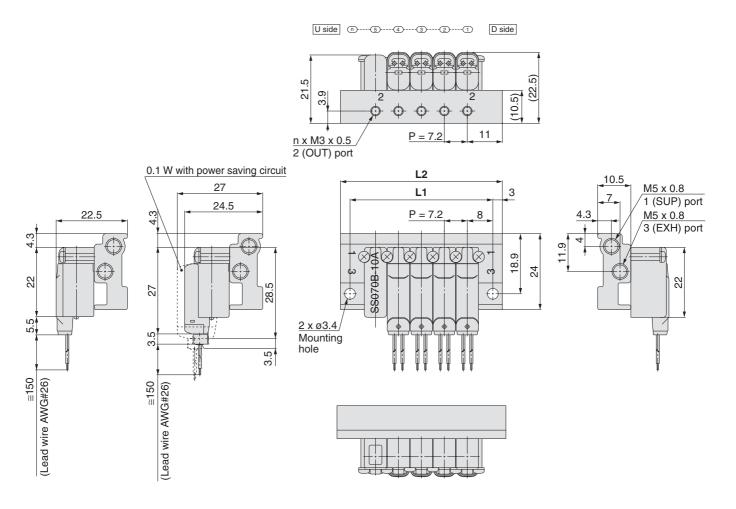

Dimensions

Formulas: $L1 = n \times 7.2 + 8.8$, $L2 = n \times 7.2 + 14.8$, n: Stations (maximum 20 stations)


L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	23.2	30.4	37.6	44.8	52	59.2	66.4	73.6	80.8	88	95.2	102.4	109.6	116.8	124	131.2	138.4	145.6	152.8
L2	29.2	36.4	43.6	50.8	58	65.2	72.4	79.6	86.8	94	101.2	108.4	115.6	122.8	130	137.2	144.4	151.6	158.8

Weight


Part Nº	Calculation of weight (g) (N=Station Number, 2 to 20)	Note
SS073B01-*C	6.0 + 2.2 x N	Not include valves

SMC

3 Port Solenoid Valve Series S070/Body Ported Manifold Stacking Type Specifications

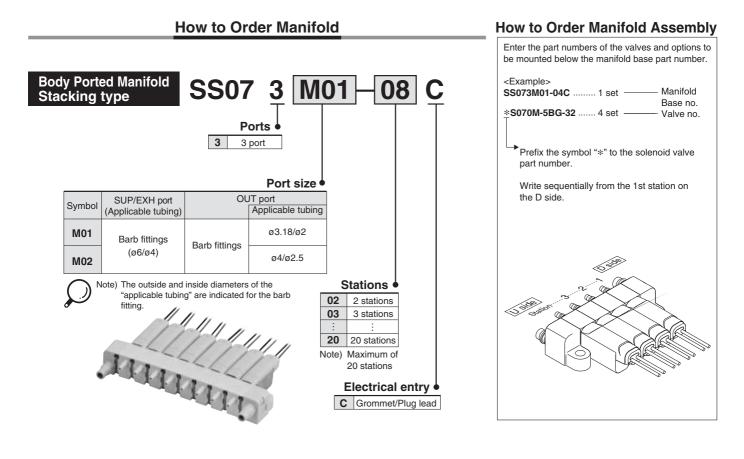


How to Order Valve

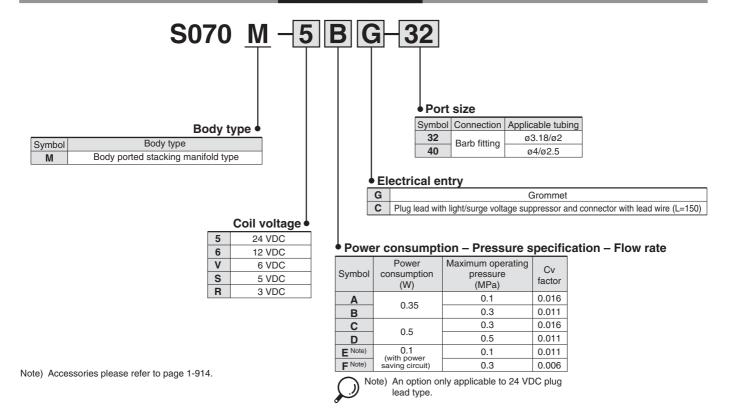

Body ported stacking type manifold

SS073M 01 - Stations C

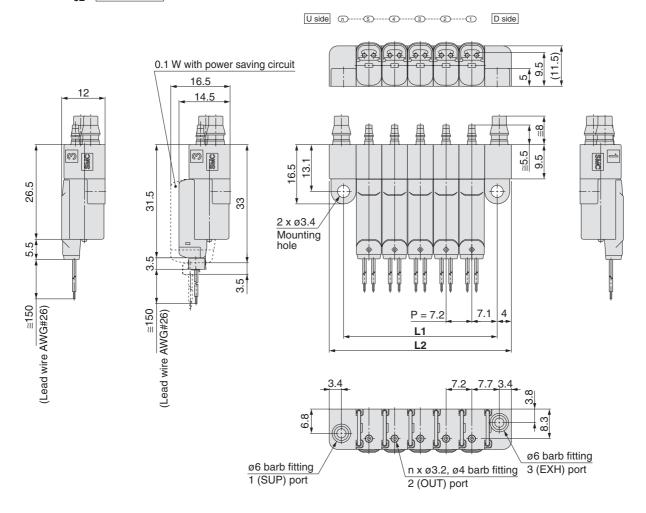

Dimensions

Formulas: $L1 = n \times 7.2 + 7$, $L2 = n \times 7.2 + 15$, n: Stations (maximum 20 stations)

L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	21.4	28.6	35.8	43	50.2	57.4	64.6	71.8	79	86.2	93.4	100.6	107.8	115	122.2	129.4	136.6	143.8	151
L2	29.4	36.6	43.8	51	58.2	65.4	72.6	79.8	87	94.2	101.4	108.6	115.8	123	130.2	137.4	144.6	151.8	159

Weight

Туре	Part Nº	Calculation of weight (g) (N=Station Number, 2 to 20)	Note	
Body ported stacking, Grommet	SS073M01-*C	2.8 + 6.7 x N	la shada waka a	
Body ported stacking, Grofflinet	SS073M02-*C	=19 1 311 X 11		
Pady ported steeling with connector	SS073M01-*C	2.8 + 7.2 x N		
Body ported stacking, with connector	SS073M02-*C		Include valves	
Pady parted stacking without connector	SS073M01-*C	2.8 + 6.4 x N		
Body ported stacking, without connector	SS073M02-*C	2.5 : 5.17 / 11		

SMC


Made to Order



Please contact SMC for detailed specifications, dimensions and delivery.

1 Grommet Type: Special Lead Wire Length


X26

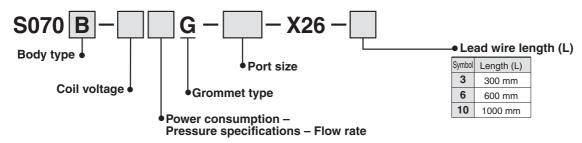

^{*} Refer to pages 1-902, 1-908, 1-910 and 1-912 for body type, coil voltage, power consumption-pressure specifications, and port size.

2 Universal Specifications


X50

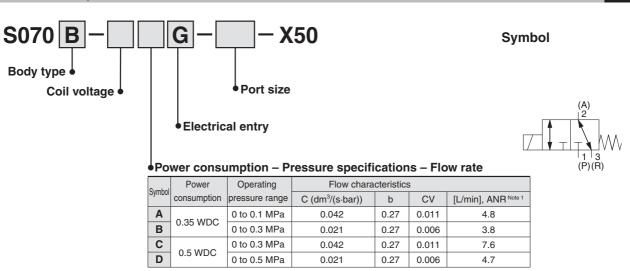

^{*} Refer to pages 1-902, 1-908, 1-910 and 1-912 for body type, coil voltage, electrical entry, and port size.

3 Normally Open Specifications

X62

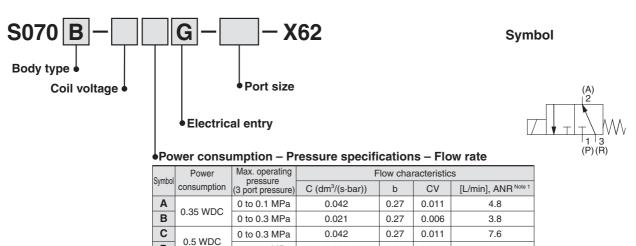

Note 1) When used in the vacuum release, use with 1-port vacuum, and 3-port vacuum release pressure. Note 2) These values have been calculated according to ISO6358.

0.27

0.006

0 to 0.5 MPa

D



 $[\]ast$ Refer to pages 1-902, 1-908, 1-910 and 1-912 for body type, coil voltage, electrical entry, and port size.


Manifold Options

Blanking plate assembly (for SS073A)

SS070A-10A (for separable base)

This assembly is mounted on a manifold block where the valve is removed for maintenance or a replacement valve is going to be mounted.

Name	No.	Weight (g)
Blanking plate	SS070A-10A	0.7

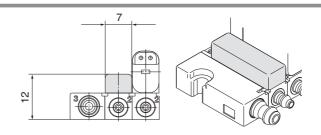


Blanking plate assembly (for SS073B)


SS070B-10A (for bar base)

This assembly is mounted on a manifold block where the valve is removed for maintenance or a replacement valve is going to be mounted.

Name	No.	Weight (g)
Blanking plate	SS070B-10A	1.3

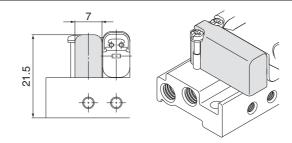



Intermediate block assembly (for SS073A)

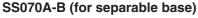

This assembly is used to secure the manifold when a large number of stations are manifolded. (Accommodated as one station.)

* In the manifold specification sheet, specify the position where the block assembly is mounted.

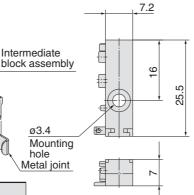

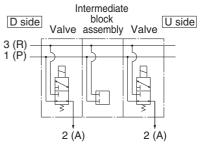

Name	No.	Weight (g)
Intermediate block	SS070A-B	1.5

block assembly

Weight (g)


Clip


Intermediate block assembly (for SS073M)

SS070M-B (for stacking type)

This assembly is used to secure the manifold when 20 or more stations are manifolded. (Accommodated as one station.)


* In the manifold specification sheet, specify the position where the block assembly is mounted. Intermediate

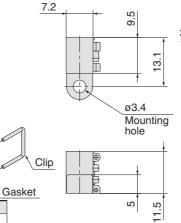

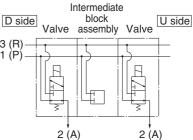

l	Blanking plate	SS070M-B	1.2			
	Plug connector assembly (for plug lead)					

Name

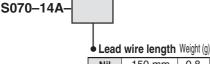


Leau	weight (g	
Nil	150 mm	0.8
3	300 mm	1.4
6	600 mm	2.6
10	1000 mm	4.2




Exploded View of Separable Base

Base mounted / SS073A□-□C Exploded view of separable base

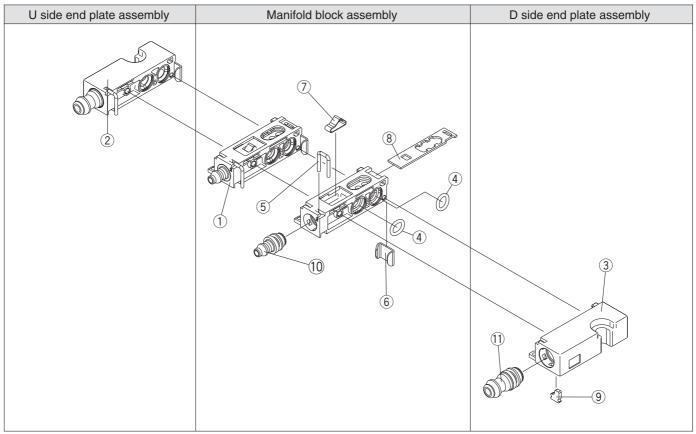

< Manifold Block Assembly >

1 Manifold block assembly No.

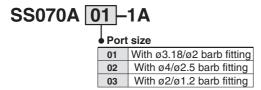

< U Side End Plate Assembly >

② U side end plate assembly No.

SS070A01-2A

< D Side End Plate Assembly >

 $\ensuremath{\mathfrak{G}}$ D side end plate assembly No.

SS070A01-3A

< Replacement Parts for Manifold Block >

Replacement Parts

No.	No.	Description	Material	Number
4	SS070A-80A-1	O-ring	FKM	10
(5)	SS070A-80A-2	Clip	Stainless steel	10
6	SS070A-80A-3	Metal joint	Stainless steel	10
7	SS070A-80A-4	Leaf spring	Stainless steel	10
8	SS070A-80A-5	Mounting bracket	Stainless steel	10

<Replacement Parts for U/D End Plate>

Replacement Parts

No.	No.	Description	Material	Number
9	SS070A-80A-6	Stopper plate	Stainless steel	10

< Barb Fitting Assembly >

10 Barb fitting assembly (for cylinder port)

SS070-50A-32

Port size

32 Applicable tube ø3.18/ø2
40 Applicable tube ø4/ø2.5

Note) Order is accepted in 10 units.

① Barb fitting assembly (for 1(P), 3(R) ports)


SS070-51A-60

Applicable tubing ø6/ø4
Note) Order is accepted in 10 units.



Exploded View of Stacking Type

Body ported type / SS073M01-□C Exploded view of stacking type

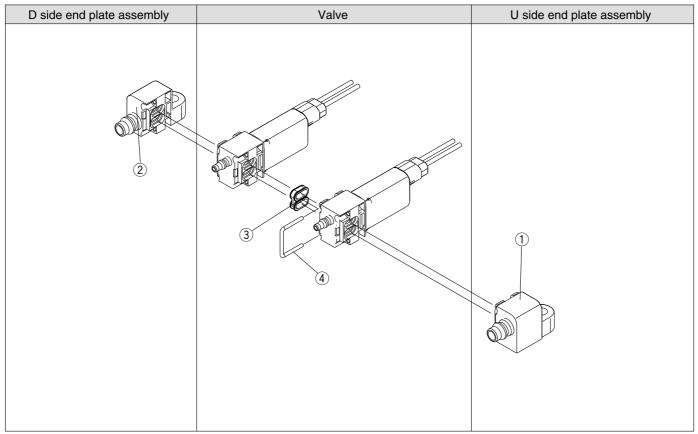

< U End Plate Assembly >

1 U end plate assembly No.

SS070M01-2A

< D End Plate Assembly >

2 D end plate assembly No.

SS070M01-3A

Replacement Parts

No.	No.	Description	Material	Number
3	S070M-80A-1	Gasket	FKM	10
4	SS070M-80A-2	Clip	Stainless steel	10



Series S070/Specific Product Precautions 1

Be sure to read before handling.

⚠ Caution

Valve mounting / Removal

1. Base mounted with screws

With the base mounted type fixed with screws, confirm the installation of the gasket mounted on the body interface and fasten the dedicated mounting screws (AXT632-106-1) at an appropriate torque (0.10 to 0.14 Nm). (Fasten equally so that the valve will not tilt.)



2. Base mounted with clips


1 Hook a flat head watchmakers screwdriver into the hole of the metal bracket and pull it approximately 1 mm in the direction indicated by the arrow.2 Insert the solenoid valve from above. After confirming that the bottom surface of the solenoid valve contacts the top surface of the manifold, detach the flat head screwdriver from the mounting bracket while holding the solenoid valve body.


(Before mounting, confirm the installation of the interface gasket on the solenoid valve body.)

The built-in leaf spring returns the mounting bracket to its original position.

(Then confirm that the end of the mounting bracket is aligned with the side of the manifold block. Refer to the figure below.)

Similarly, to remove the valve, pull the mounting bracket and pull up the solenoid valve vertically. Use caution so that no excessive force is applied to the lead wire in mounting and removal.

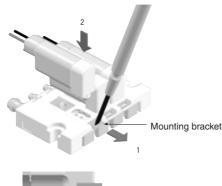

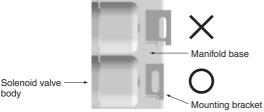

Screwing in M5/M3 thread

After tightening by hand, tighten an additional 1/4 rotation for M3 and 1/6 rotation for M5. Overtightening may cause bending of the thread or air leakage due to deformation of the gasket. Insufficient screwing may cause loosening of the thread or air leakage.

Applicable Tubing Size

Stacking manifold


Port	Applicable tubing	Recommended tubing
1 (SUP), 3 (EXH)	ø6/ø4	TS0604/TU0604
2 (OUT)	ø4/ø2.5	TS0425/TU0425
2 (001)	ø3.18/ø2	TIUB01

Note) In case of a body ported single unit valve, the applicable tubing size is ø3.18/ø2 for all 1 (SUP), 2 (OUT), and 3 (EXH) ports.

If fittings of a brand other than SMC are used, follow the specifications of the fittings to be mounted.

Tubing installation (with barb fitting)

- 1) Using tubing cutters TK-1, 2, or 3, cut the tubing perpen-dicularly to the tubing axis while allowing for sufficient margin to the required length.
- Insert the tubing and push it all the way to the barb end. If the tubing is not installed securely to the end, problems such as leakage or disconnection of the tubing can occur.
- 3) When the tubing is inserted into the barb fitting, push it in the direction of the tubing axis to prevent excessive lateral loads being applied to the barb fitting.

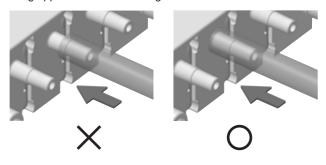

- 4) To remove the tubing from the barb fitting, use caution so that no excessive lateral load will be applied to the barb fitting. When using a cutter to remove the tubing, sufficient care should be taken so as not to make any flaws on the barb fitting.
- 5) After tubing installation, avoid excessive loads, such as tensile, compressive, or bending strength, being applied to the tubing.





Series S070/Specific Product Precautions 2


Be sure to read before handling.

∧ Caution

Mounting

1. Solenoid valve fixing procedure (body ported single unit)

When mounting a body ported type single unit valve, tighten the dedicated mounting screw (AXT632-106A-2) at an appropriate torque (0.05 to 0.07 Nm) to firmly secure the valve body. (Tighten equally so that the valve will not tilt.) If the coil is fixed, the coil joint may break due to application of an excessive load to the tubing body, for example, when the tubing is inserted. With a base mounted type solenoid valve also, use caution to avoid excessive loads.

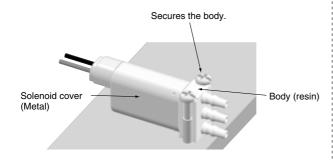


⚠ Caution

Adding and removing manifold stations

1. Base mounted stacking type

- 1 Remove the clip and metal joint from the position where the new station is to be mounted by pulling them in the directions indicated by the arrows.
- 2 Place the additional manifold block assembly and mount the metal joint and clip by reversing the assembly order. Securely insert the clip and the metal joint so that they will not protrude from the top and bottom surfaces respectively.

The clip is commonly used to secure the manifold block and fittings.

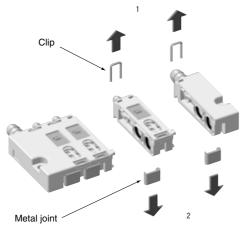


To remove the station, follow the same procedure for assembly and disassembly.

2. Body ported manifold type

- 1 Remove the clip on the position where the station is to be added by pulling it in the direction indicated by the arrow. (Insert a flat head screwdriver in the recess indicated in the figure to remove the clip.)
- 2 Place the additional solenoid valve into the separation and insert the clip.

Insert the clip until it fits in the groove on the body side.

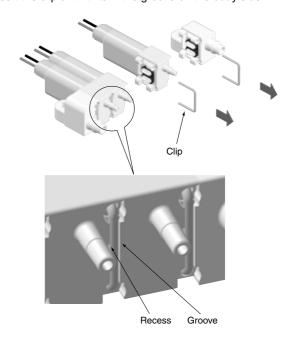


⚠ Caution

Vacuum application

An N.C. type valve pressurized at 1 (SUP) port can be used within the maximum operating pressure differential specified for the product. If the valve is to be used in the following applications, however, care should be taken about the piping ports, maximum operating pressure differential and allowable leakage.

1) Vacuum release application

Use 3 (R) port for vacuum pressure and 1 (P) port for vacuum release pressure. The pressure differential between 3 (R) and 1 (P) is the maximum operating pressure differential for each type.

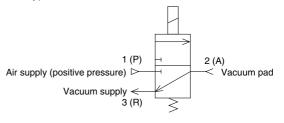

2) Vacuum retention

Please consult SMC if the allowable leakage is limited when the valve is used for vacuum retention of a vessel, even within the low vacuum range $(1.33 \times 10^2 \text{ Pa or above})$.



Series S070/Specific Product Precautions 3

Be sure to read before handling.


Wiring

- 1) Internal wiring
 - Grommet


(This solenoid valve has no polarity.)



• With light/surge voltage suppressor (This solenoid valve has no polarity.)

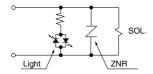


• With 0.1 W power saving circuit

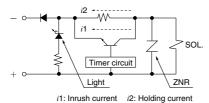

- 2) Electrical circuit
 - (1) Adopt an electrical circuit with no chattering generated at the contact.
 - (2) Keep the voltage within the $\pm 10\%$ range of the rated volta-

Care should be taken about the voltage drop when the rated voltage is 6 VDC or less or when the response speed is important.

(3) When using a C-R element (surge voltage suppressor) for protection of the switching element, please keep in mind that leakage voltage will increase due to leakage current flowing through the C-R element.

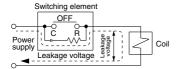

Keep the residual leakage voltage with 2% of the rated vol-

- (4) Be sure to confirm the applied voltage. If a wrong voltage is applied, it can lead to malfunction or coil burning.
- (5) In wiring, use caution to avoid application of excessive force to the lead wire. It can cause malfunction or break the

Power saving circuit of 0.1 W DC (at holding)

- 1) Keep the vibration and impact within 10/50 m/s².
- 2) Keep the voltage fluctuations within 24 VDC \pm 5%.
- 3) The power consumption is 0.35 W DC at inrush (20 ms) and 0.1 W DC at holding.

