



- ❑ For use in conjunction with Broyce "Type A" Earth Leakage Relays
- ❑ Designed to detect leakage current and transmit a proportional signal to an Earth Leakage Relay
- ❑ Surface mounting with 4 fixing slots (BZCT160 and 210 supplied with separate mounting feet)
- ❑ Slim design
- ❑ DIN Rail fixing clip available for 35mm Ø toroid (Part no. BZCT035/CP)



DIN Rail clip fitted to BZCT035



ISO 9001:2015


### INSTALLATION

Installation work must be carried out by qualified personnel.

- BEFORE INSTALLATION, ISOLATE THE SUPPLY TO THE CABLES THAT ARE TO BE PASSED THROUGH THE TOROID.
- Installation of the toroid, along with the Earth Leakage Relay must be carried out in accordance with the latest wiring practices and regulations.

### CONNECTION DIAGRAM

Typical connection examples are shown below.

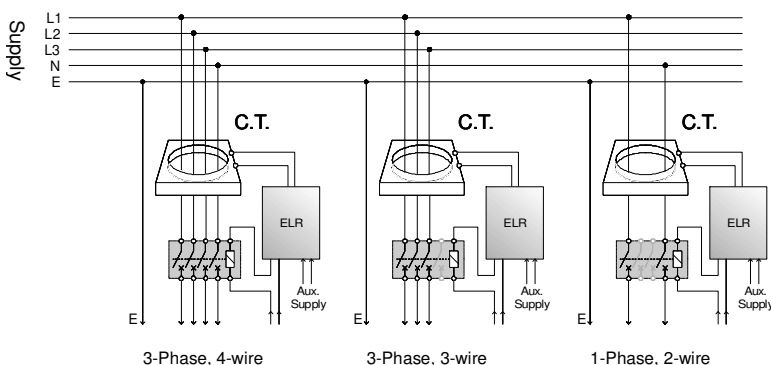

### TECHNICAL SPECIFICATION

Size availability* and part number:	35mm Ø (BZCT035) 50mm Ø (BZCT050) * internal diameter	120mm Ø (BZCT120) 160mm Ø (BZCT160) 210mm Ø (BZCT210)
Rated system voltage:	720V AC 3kV AC	
Current ratio:	1/1000	
Rated operational current (I.e.):	BZCT035 – 65A (25mm <sup>2</sup> ) BZCT050 – 85A (50mm <sup>2</sup> ) BZCT070 – 160A (95mm <sup>2</sup> )	BZCT120 – 250A (240mm <sup>2</sup> ) BZCT160 – 320A (400mm <sup>2</sup> ) BZCT210 – 400A (500mm <sup>2</sup> )
<i>Max. cross-section/phase cable size shown in brackets and assumes 3P + N copper cables</i>		
Max. permissible current:	1kA cont., 5kA for 1.5s, 100kA for 0.05s	
Minimum IΔn setting on ELR for each size of toroid:	0.03A – 35, 50 and 70mm Ø 0.1A – 120mm Ø 0.3A – 160 and 210mm Ø	
Max. Distance	50m (max.) <i>Between toroid and ELR</i>	
Ambient temperature:	-20 to +60°C	
Relative humidity:	+95%	
Housing:	Grey ABS	
Mounting option:	Surface mount only using fixing slots provided (BZCT160 and 210 require separate mounting feet which are included)	
Terminal conductor size:	≤ 2.5mm <sup>2</sup> solid ≤ 1.5mm <sup>2</sup> stranded	
Approvals:	CE Compliant. Conforms to: IEC44-1, IEC185 & BS7676	

### INSTALLATION DO'S AND DON'T'S

Correct installation of the Earth Leakage Relay and toroid should ensure trouble free operation, in particular, if this document is followed.

1. Always ensure the Earth conductor DOES NOT pass through the toroid. If it is unavoidable, the Earth must be routed back through the toroid again and around, as shown in Fig.1.
2. As a rule, select a toroid that has an inside diameter which is twice that or greater than the outside diameter of the cable(s) to be passed through.
3. Ensure the cable is central in the toroid.
4. Place the toroid on a straight section of cable, not near a bend
5. Keep the cable and toroid away from intense magnetic fields from nearby equipment.
6. **DO NOT** pass individual conductors through separate toroids, as shown in Fig. 3.

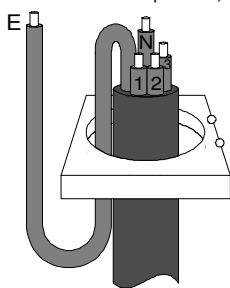


Fig. 1

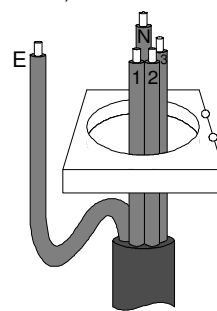


Fig. 2


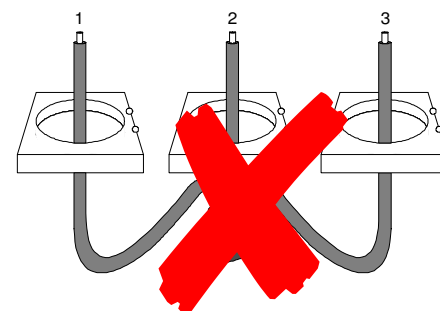


Fig. 3

### DIMENSIONS

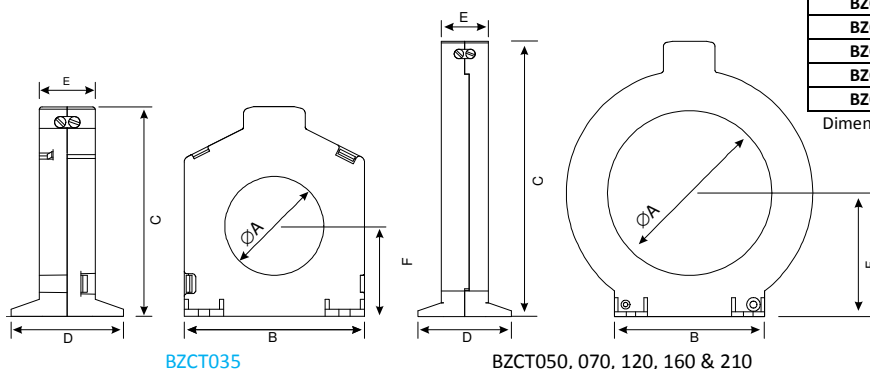

Toroid Type:	AØ	B	C	D	E	F	Weight
BZCT035	35	64	74	40	20	32	77g
BZCT050	50	63	98	40	20	42	88g
BZCT070	70	105	117	40	20	53	135g
BZCT120	120	155	170	40	20	80	265g
BZCT160	160	150	253	60 <sup>A</sup>	33	120	1075g
BZCT210	210	149	304	60 <sup>A</sup>	33	145	1300g

Dimensions in mm

<sup>A</sup> exc. mounting feet

